


$3\frac{1}{2}"$

$3\frac{1}{2}"$

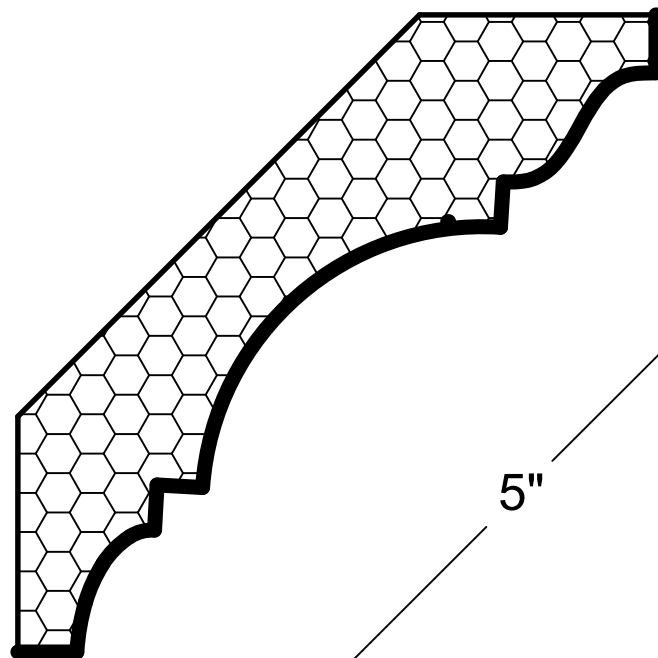


5"

Cove

$4\frac{1}{8}"$

$4\frac{1}{8}"$

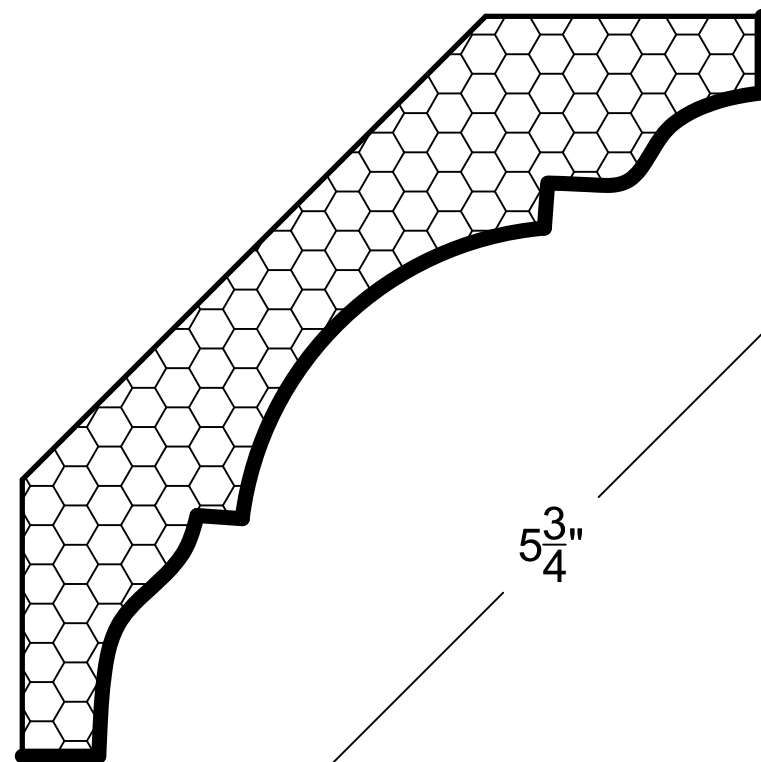

$5\frac{3}{4}"$


Cove


$4\frac{7}{8}"$

$4\frac{7}{8}"$

7"

Cove

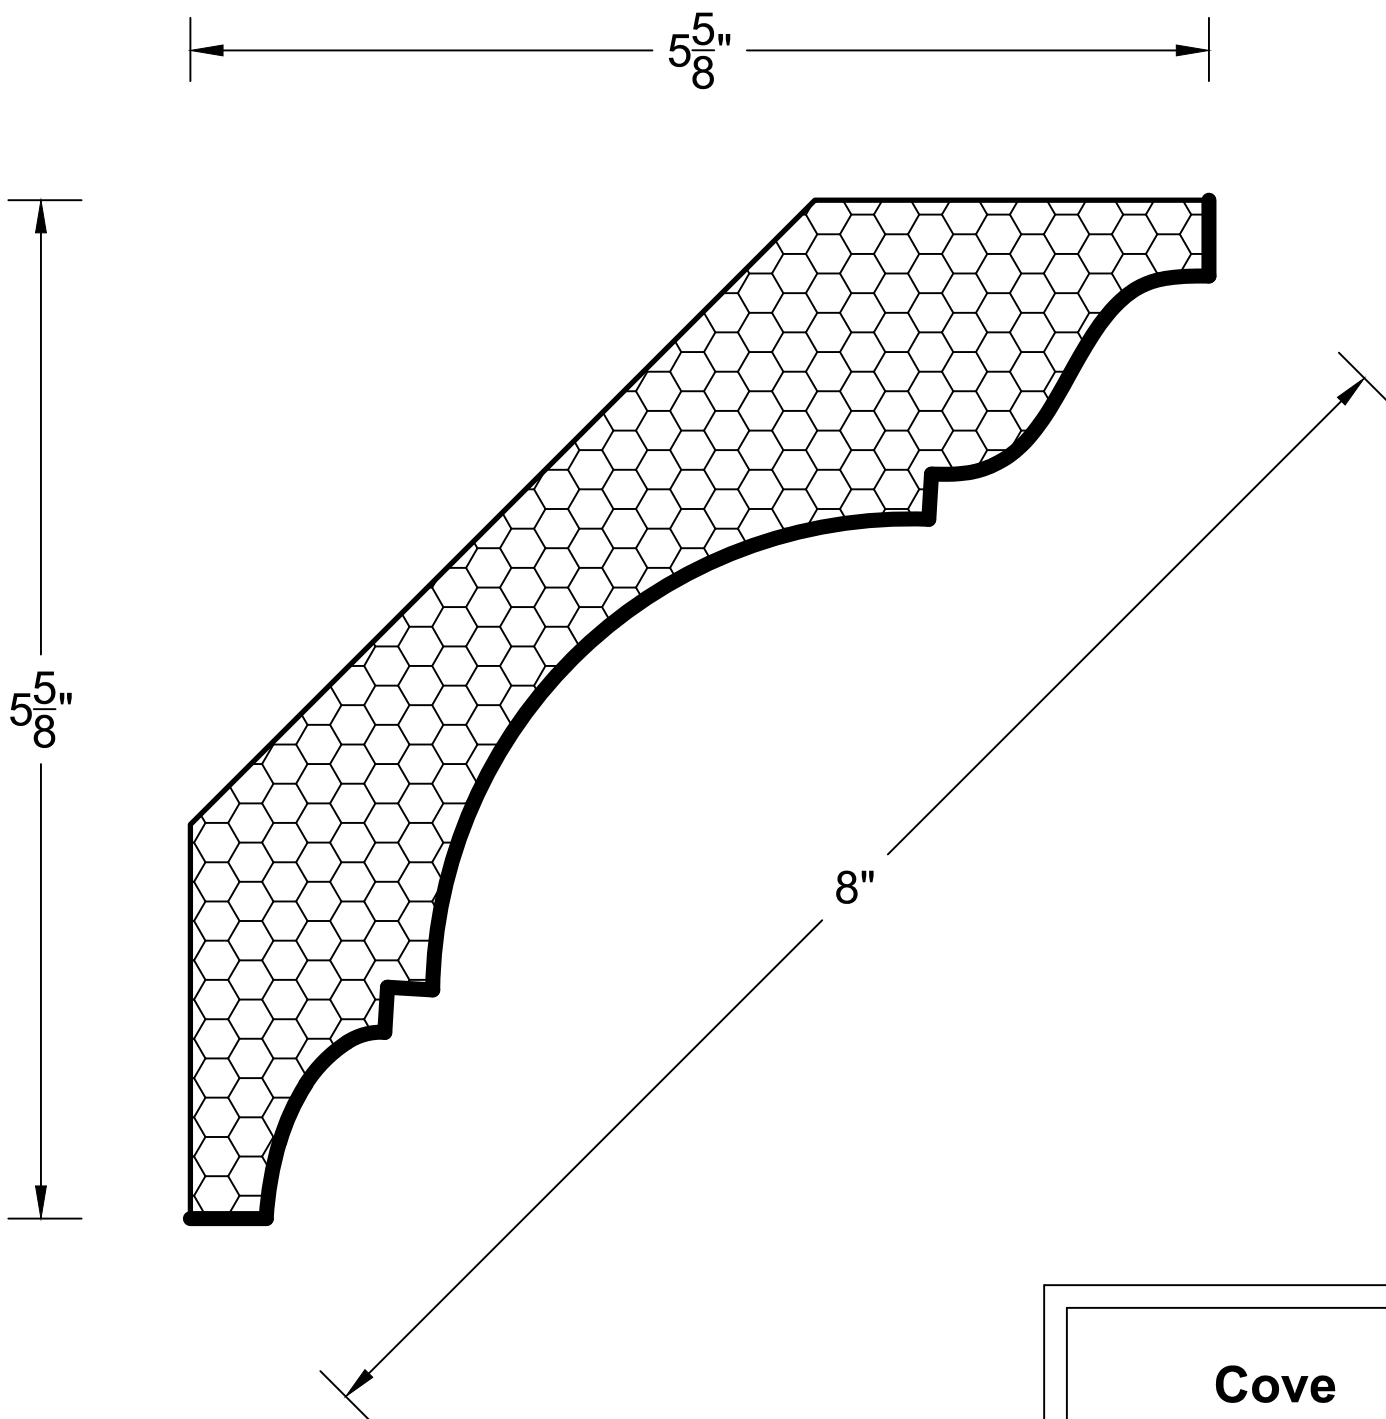

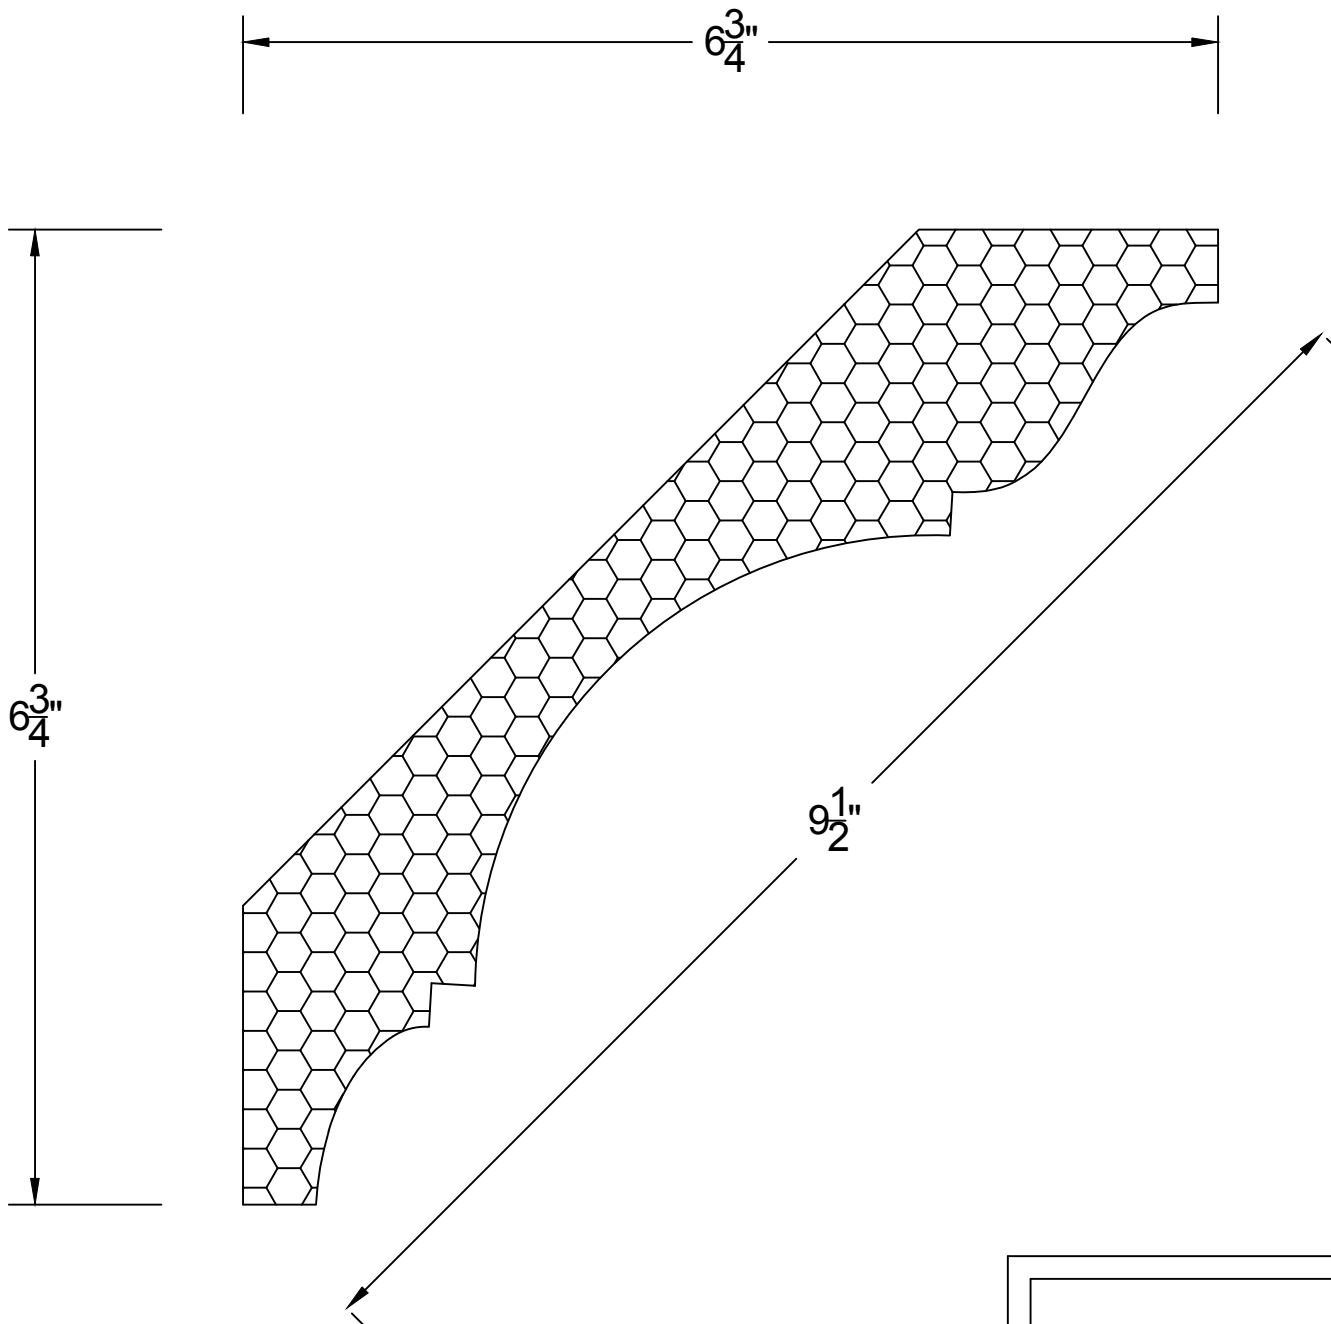

CI-803-9.5"

$3\frac{7}{8}"$


$3\frac{1}{2}"$

$5\frac{1}{4}"$

Deco

$4\frac{3}{8}"$

4"

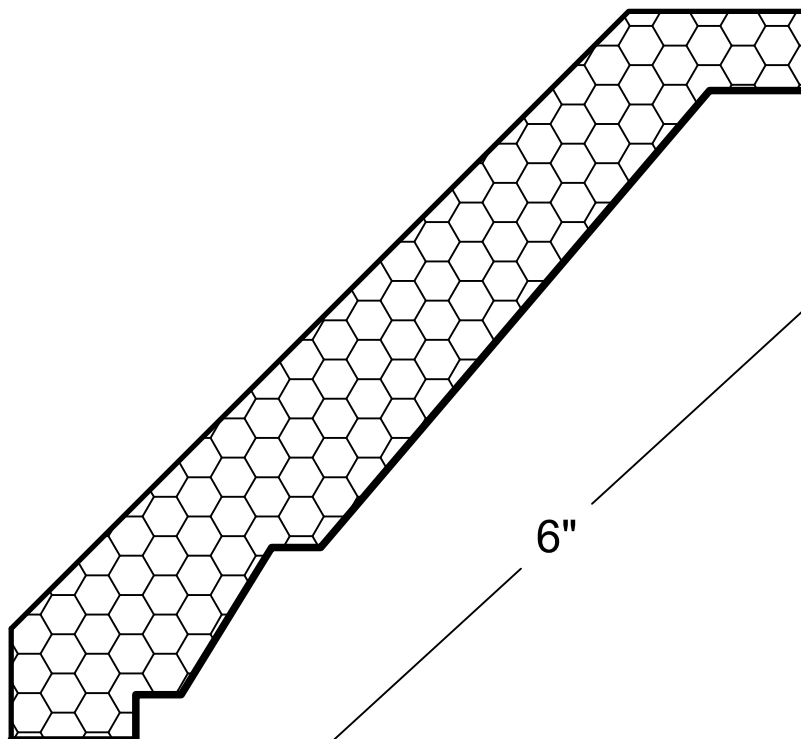

6"

Deco

$5\frac{1}{8}"$

$4\frac{3}{4}"$

7"


Deco

$5\frac{3}{4}"$

$5\frac{3}{8}"$

$7\frac{7}{8}"$


Deco

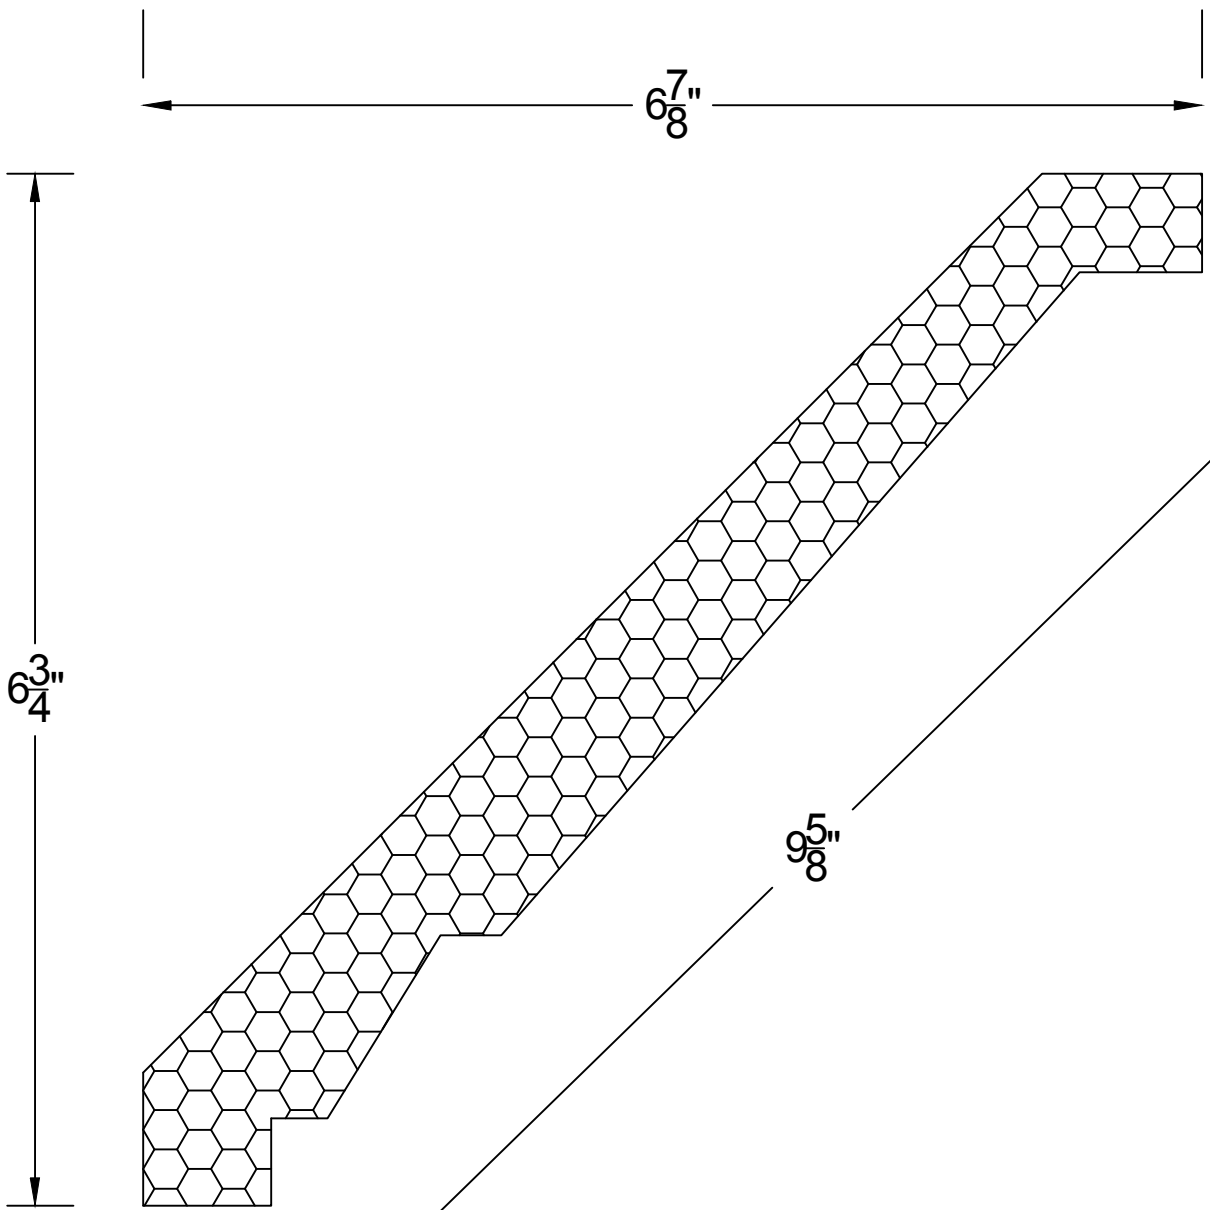

IN-100-10"

$2\frac{7}{8}"$

$2\frac{7}{8}"$

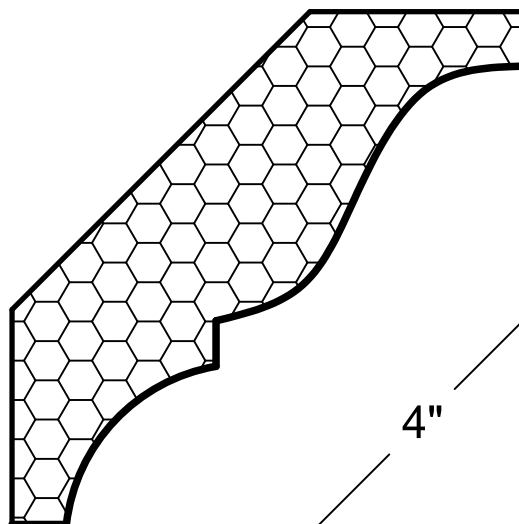


4"

Georgian


$3\frac{1}{2}"$

$3\frac{1}{2}"$

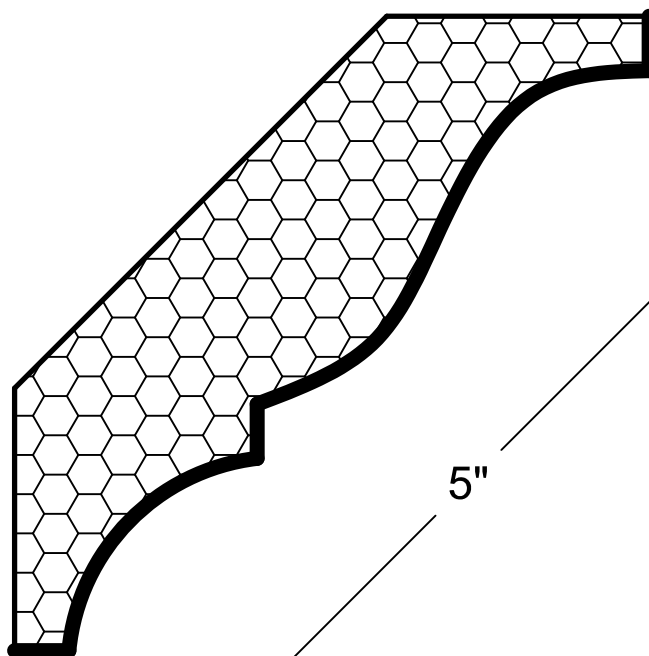


$5"$


Georgian

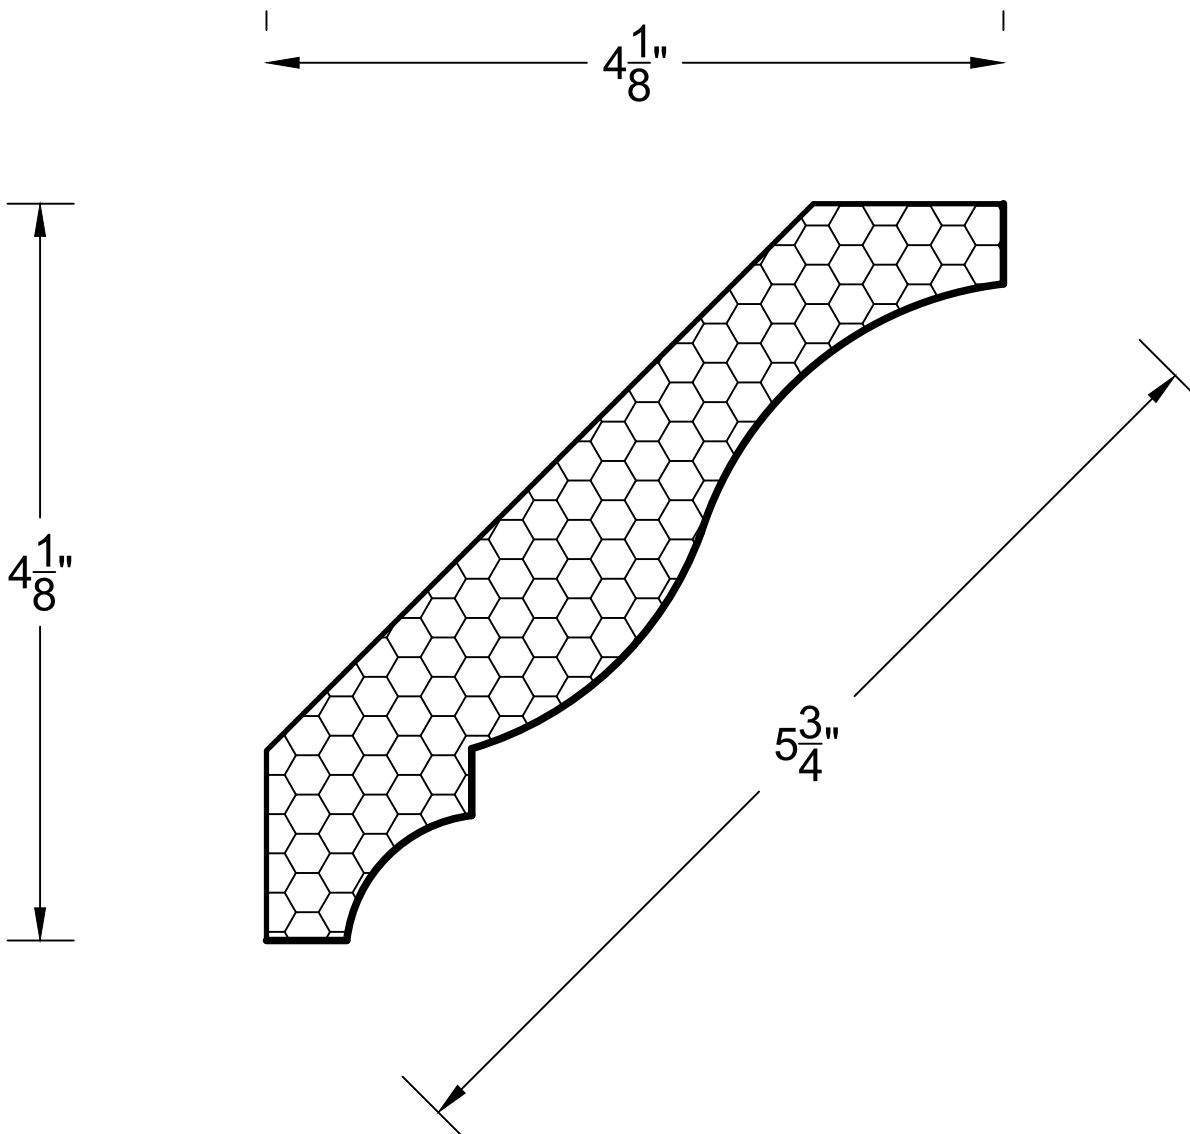

Georgian

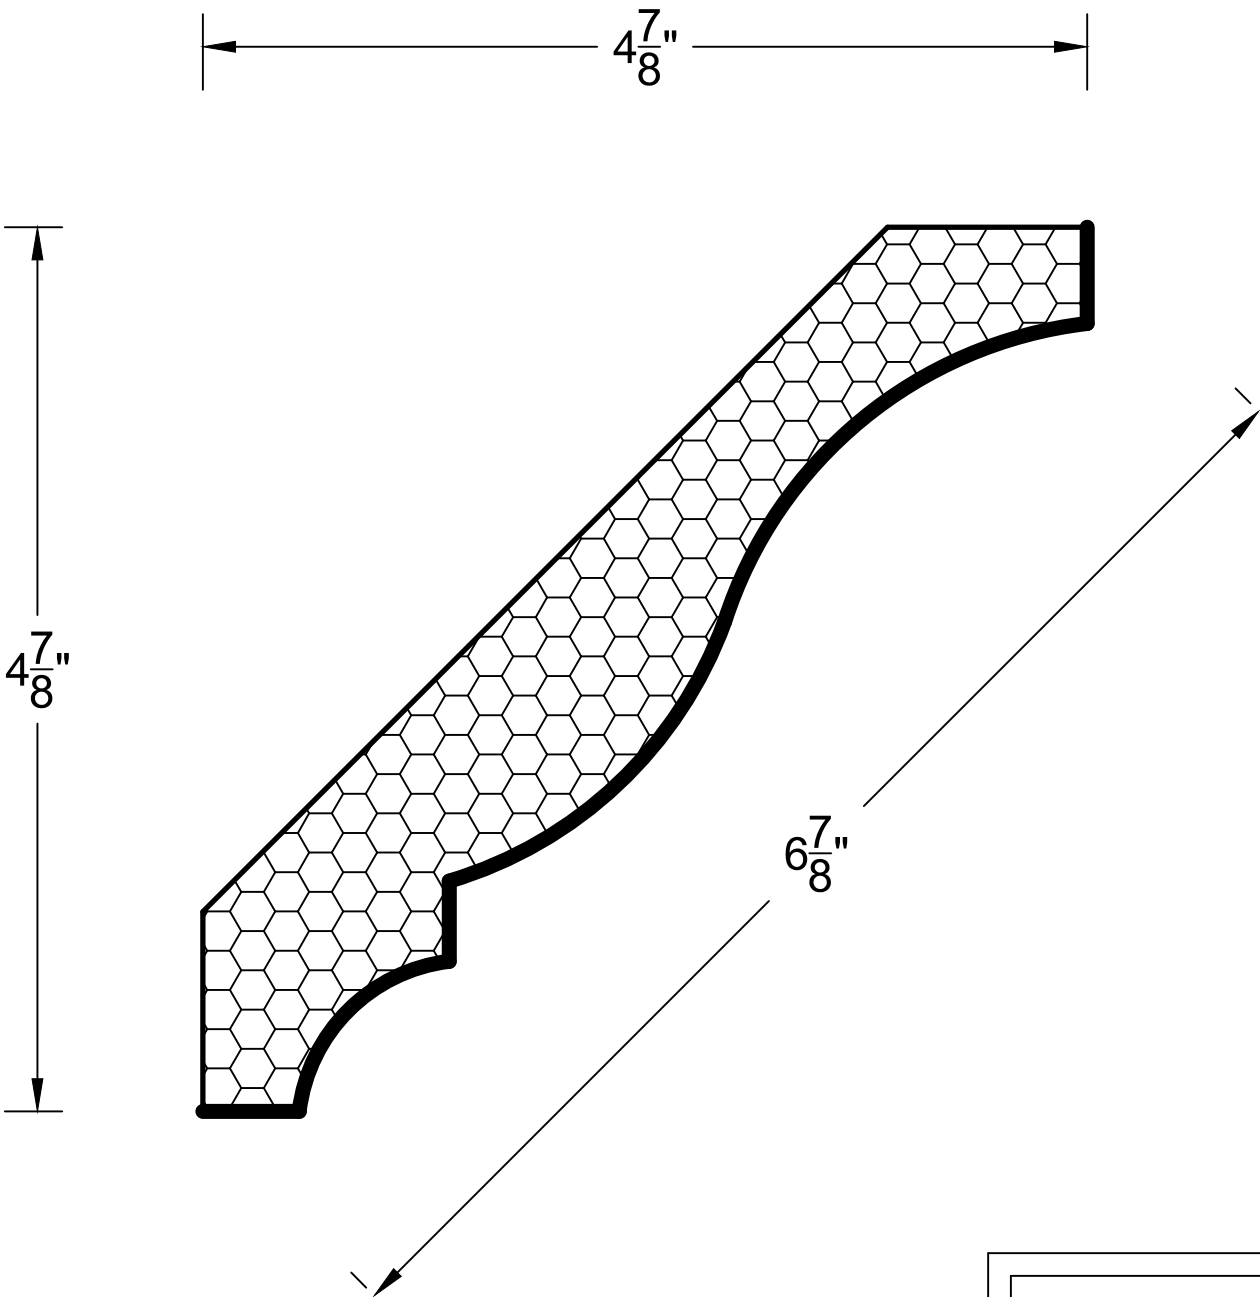

Georgian

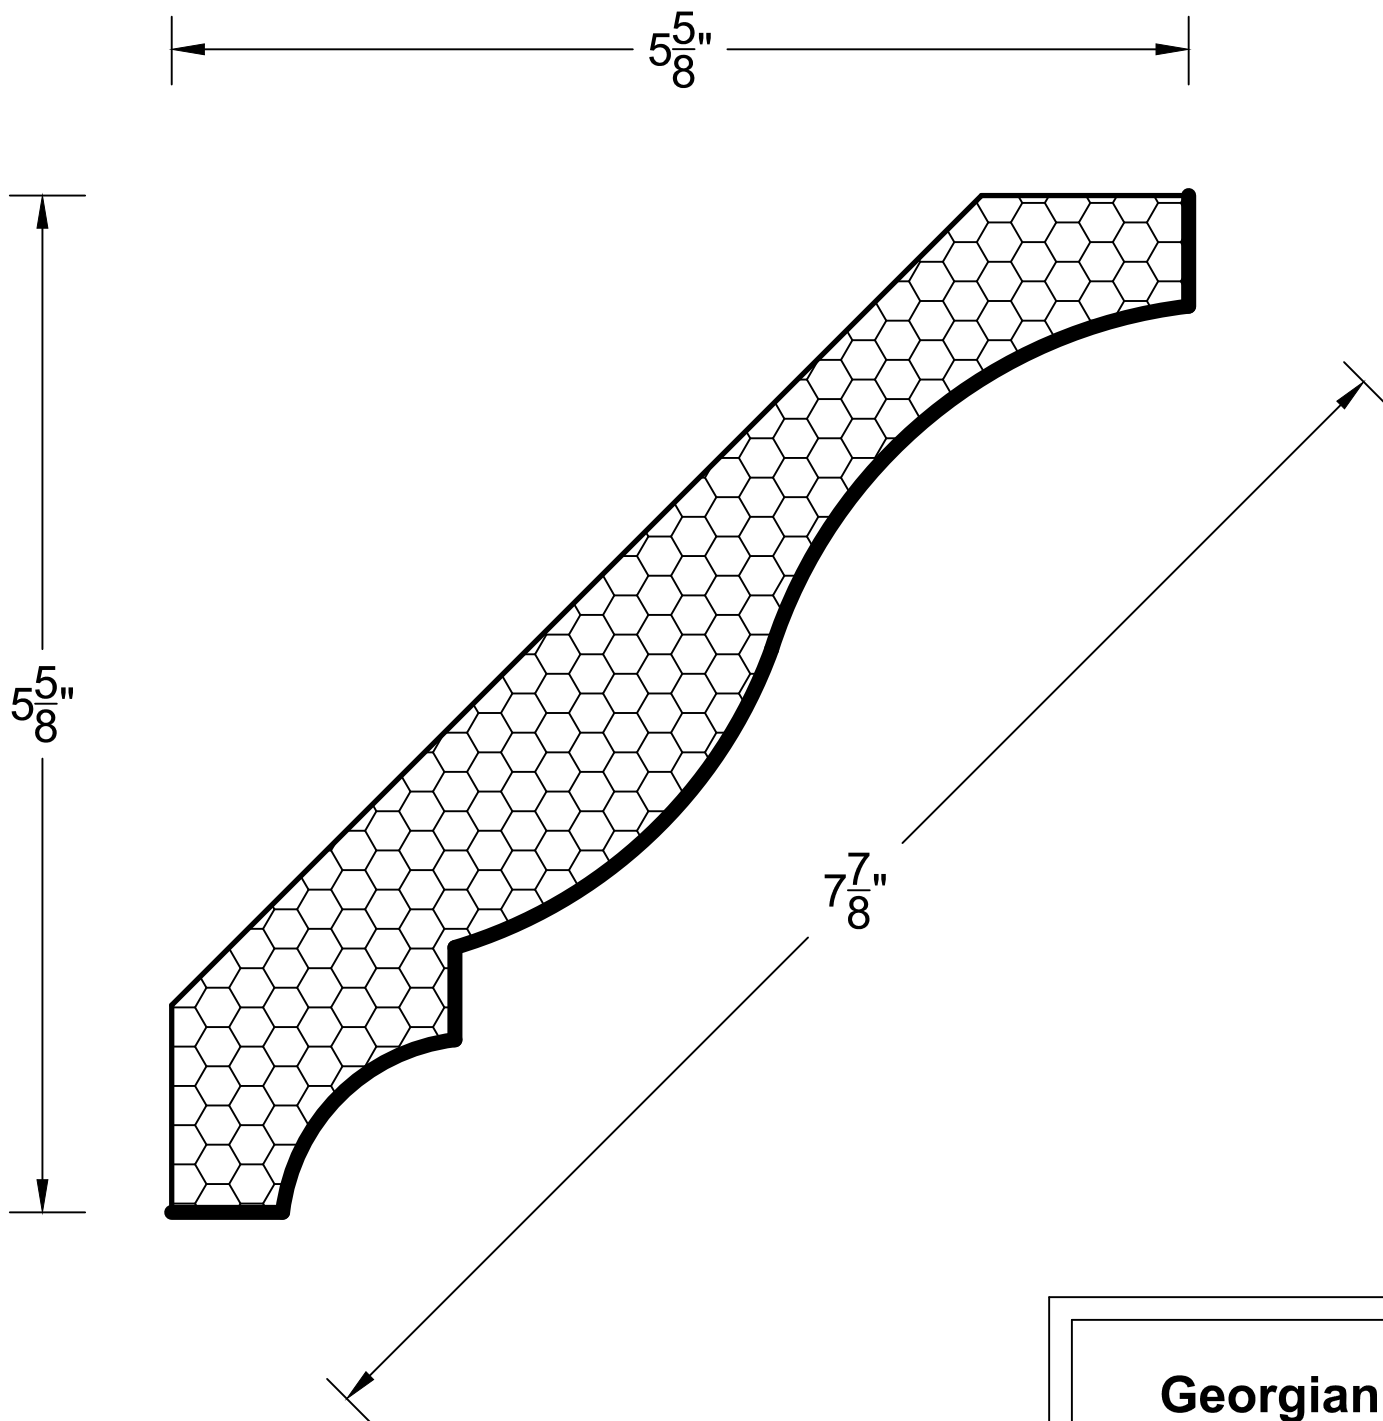

Georgian

6 $\frac{1}{2}$ "


6 $\frac{1}{2}$ "

9 $\frac{1}{8}$ "

IN-010-9"

$3\frac{1}{2}"$

$3\frac{1}{2}"$

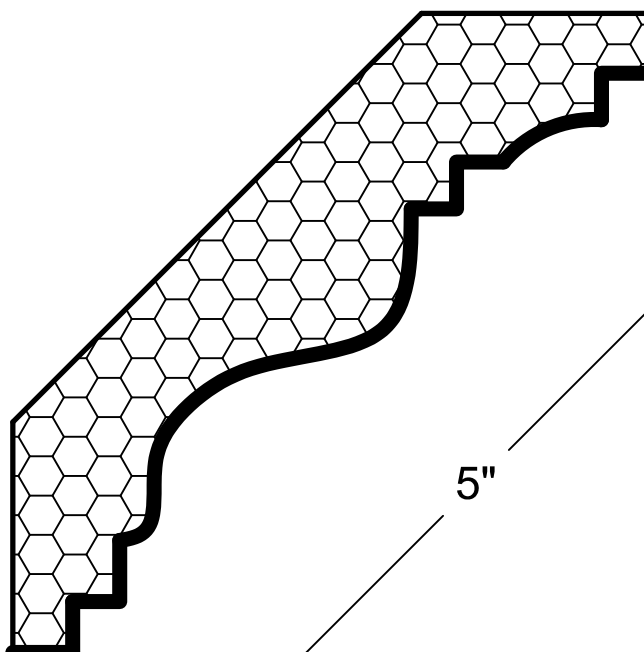


$5"$

Milan


$4\frac{1}{4}"$

$4\frac{1}{4}"$

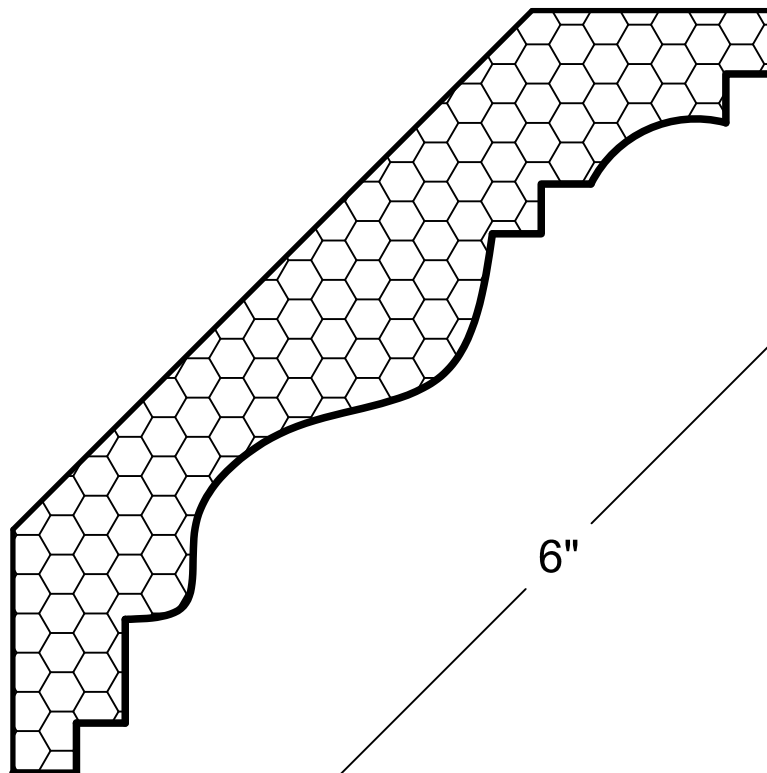

6"

Milan

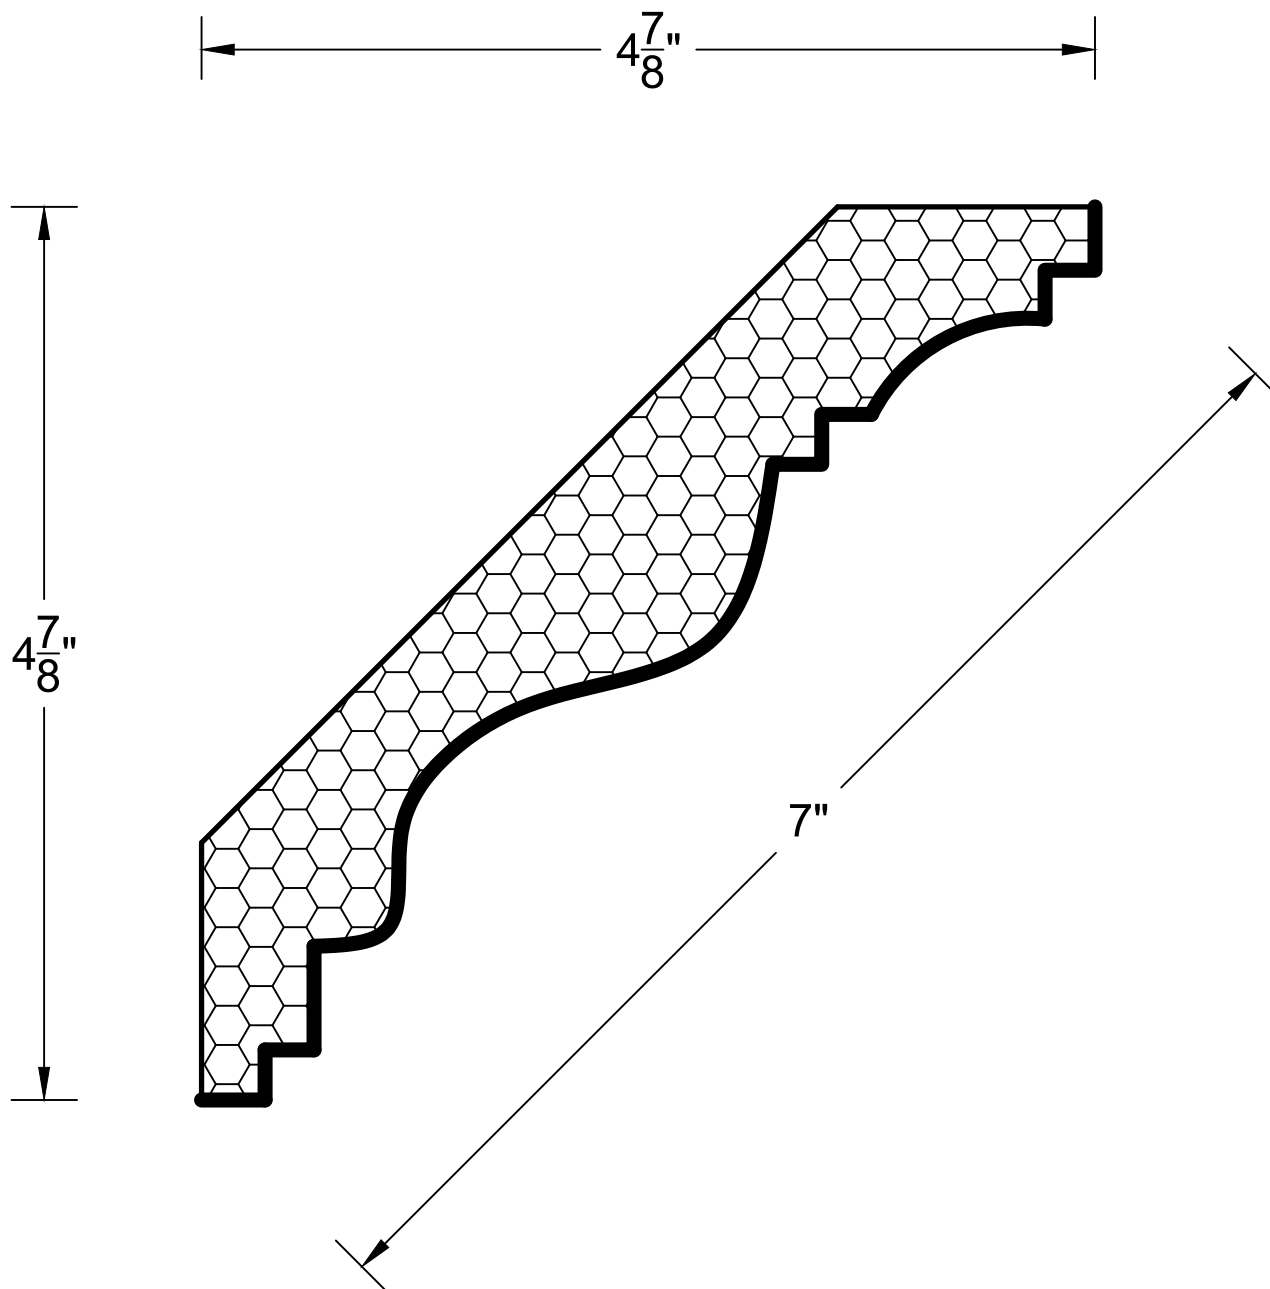

Milan

$5\frac{5}{8}"$

$5\frac{5}{8}"$

$7\frac{7}{8}"$


Milan

7"


7"

10"


M1009-10"

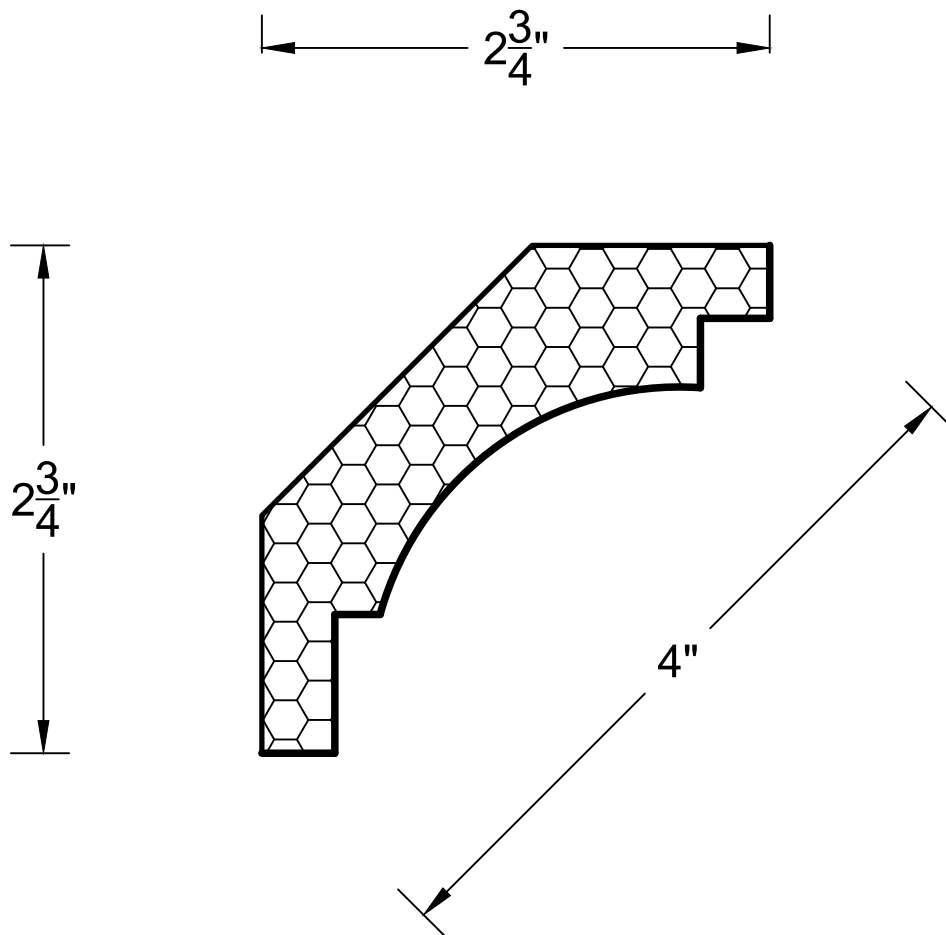


One Step Cove

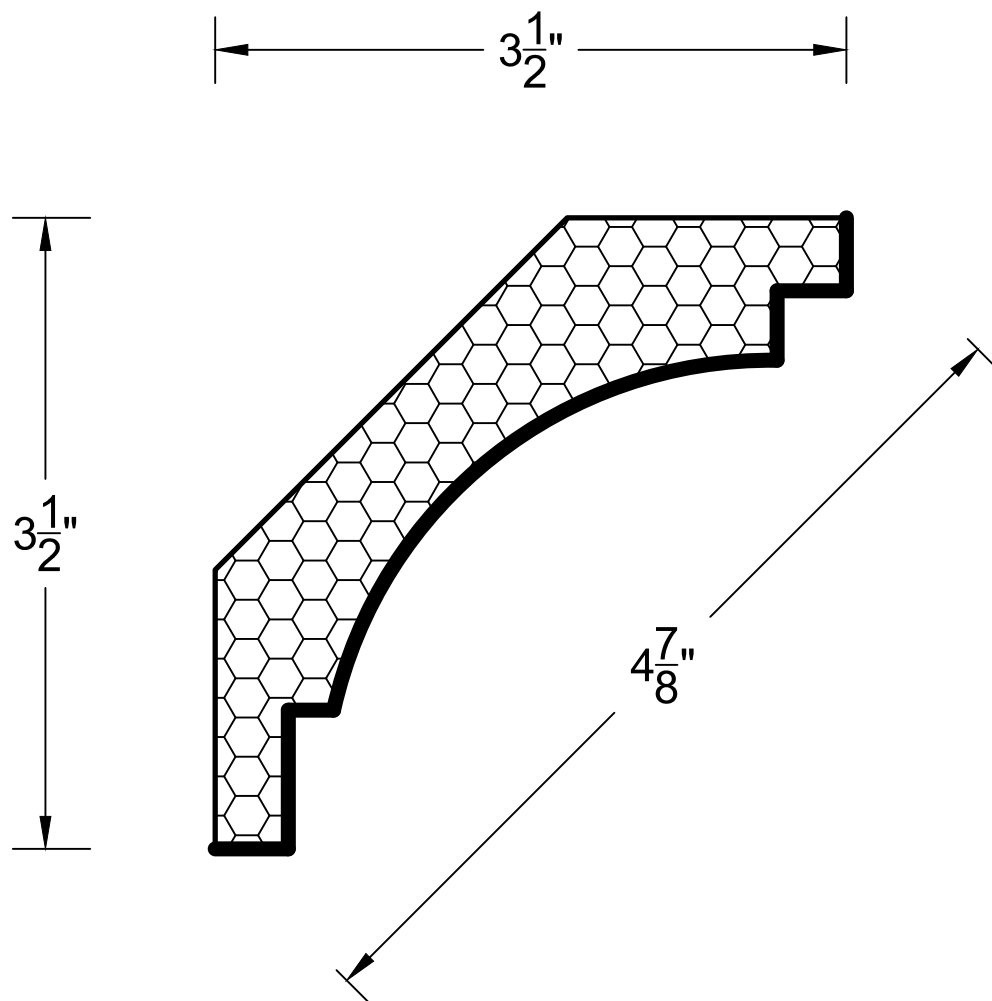


One Step Cove

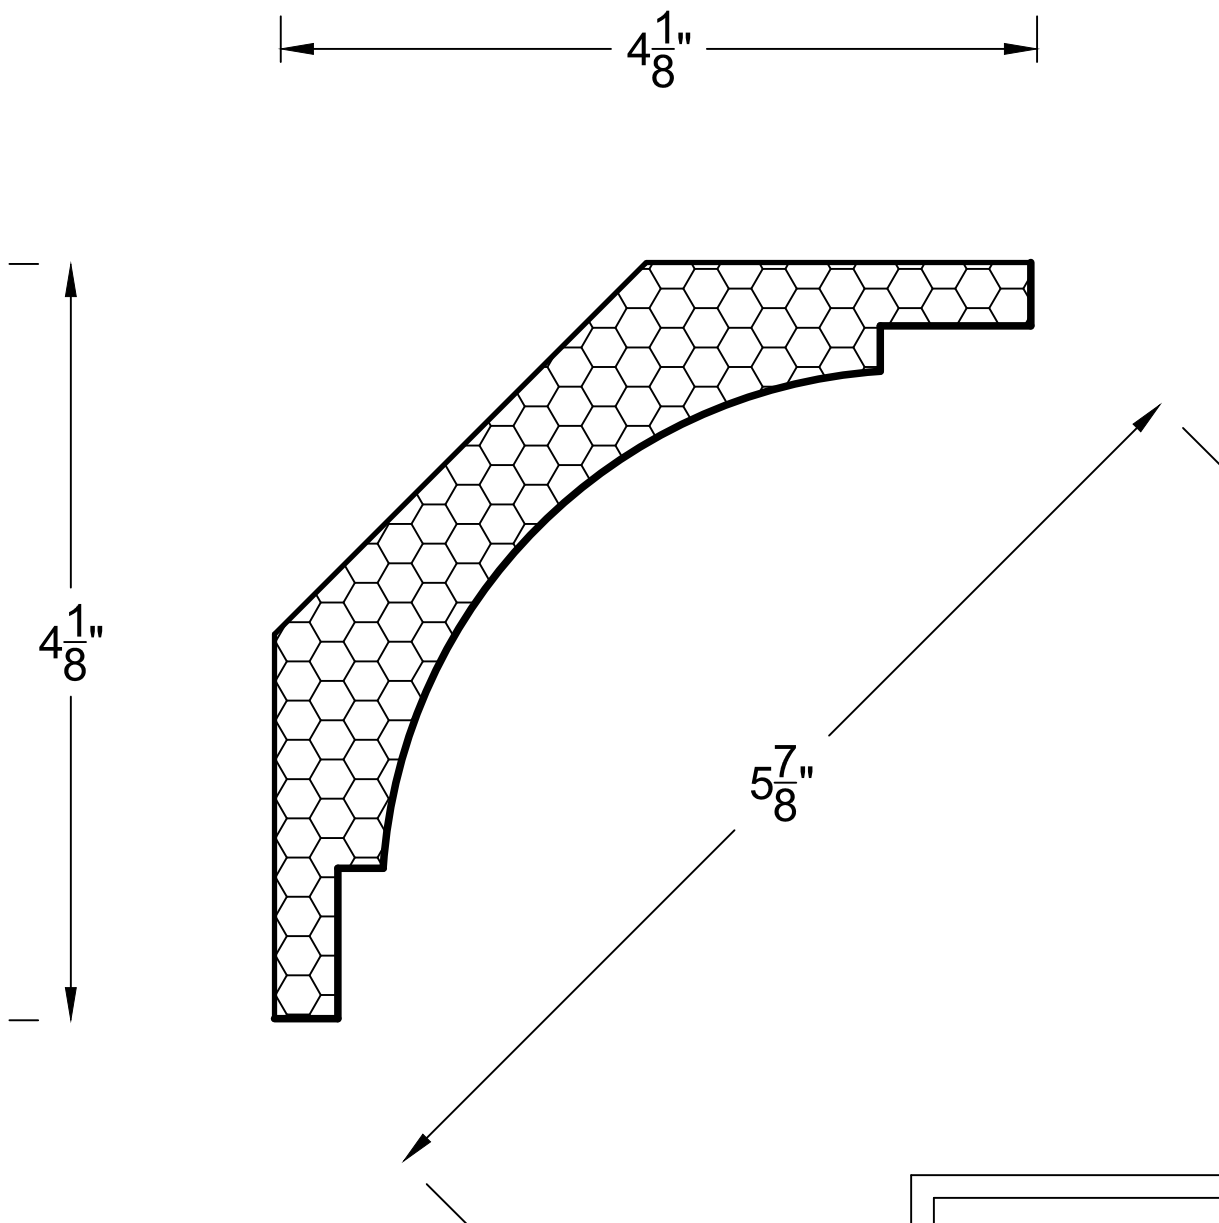


One Step Cove

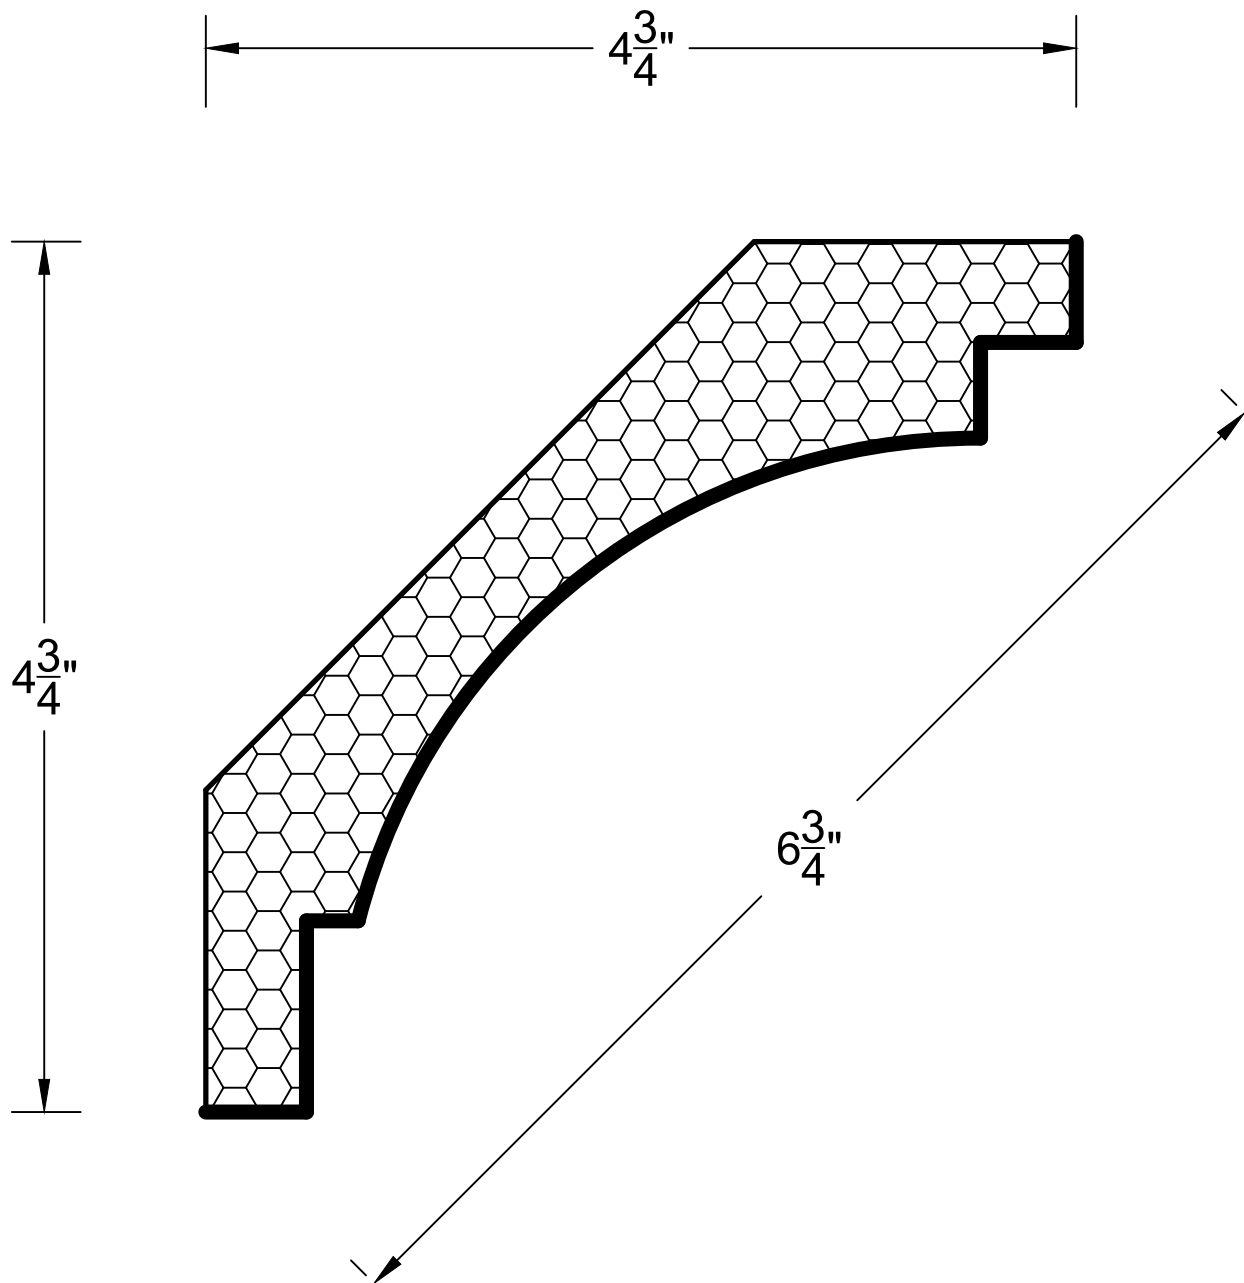


One Step Cove

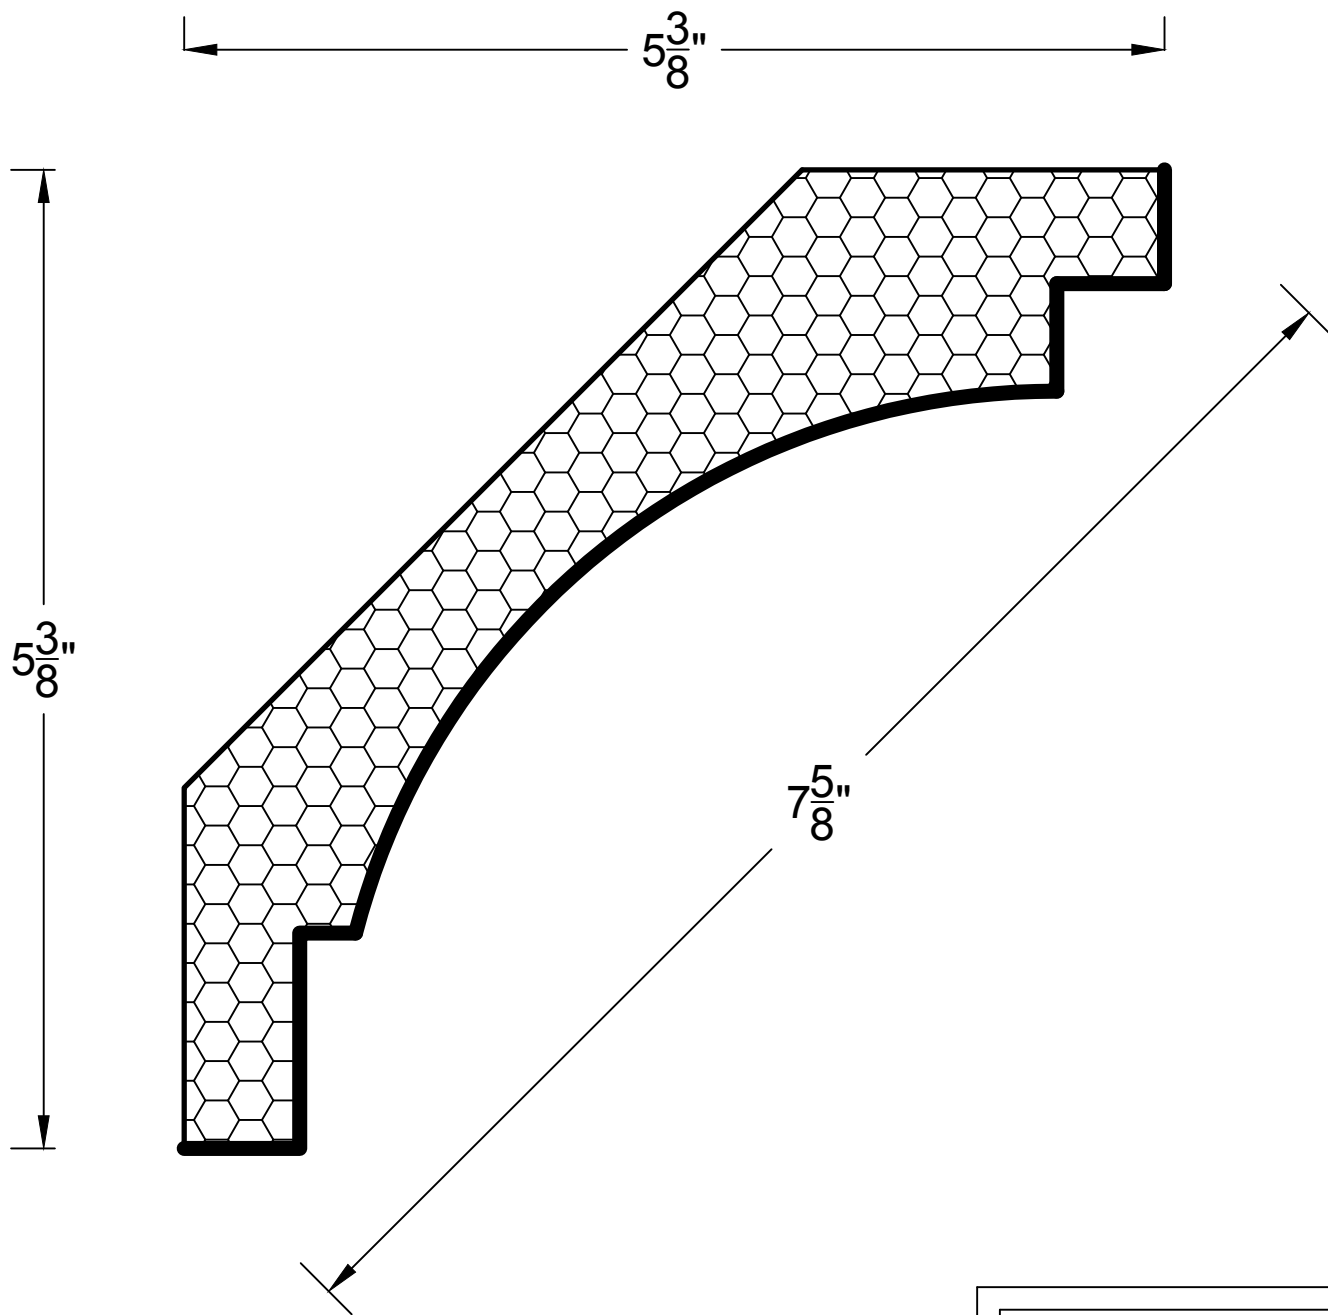

One Step Cove

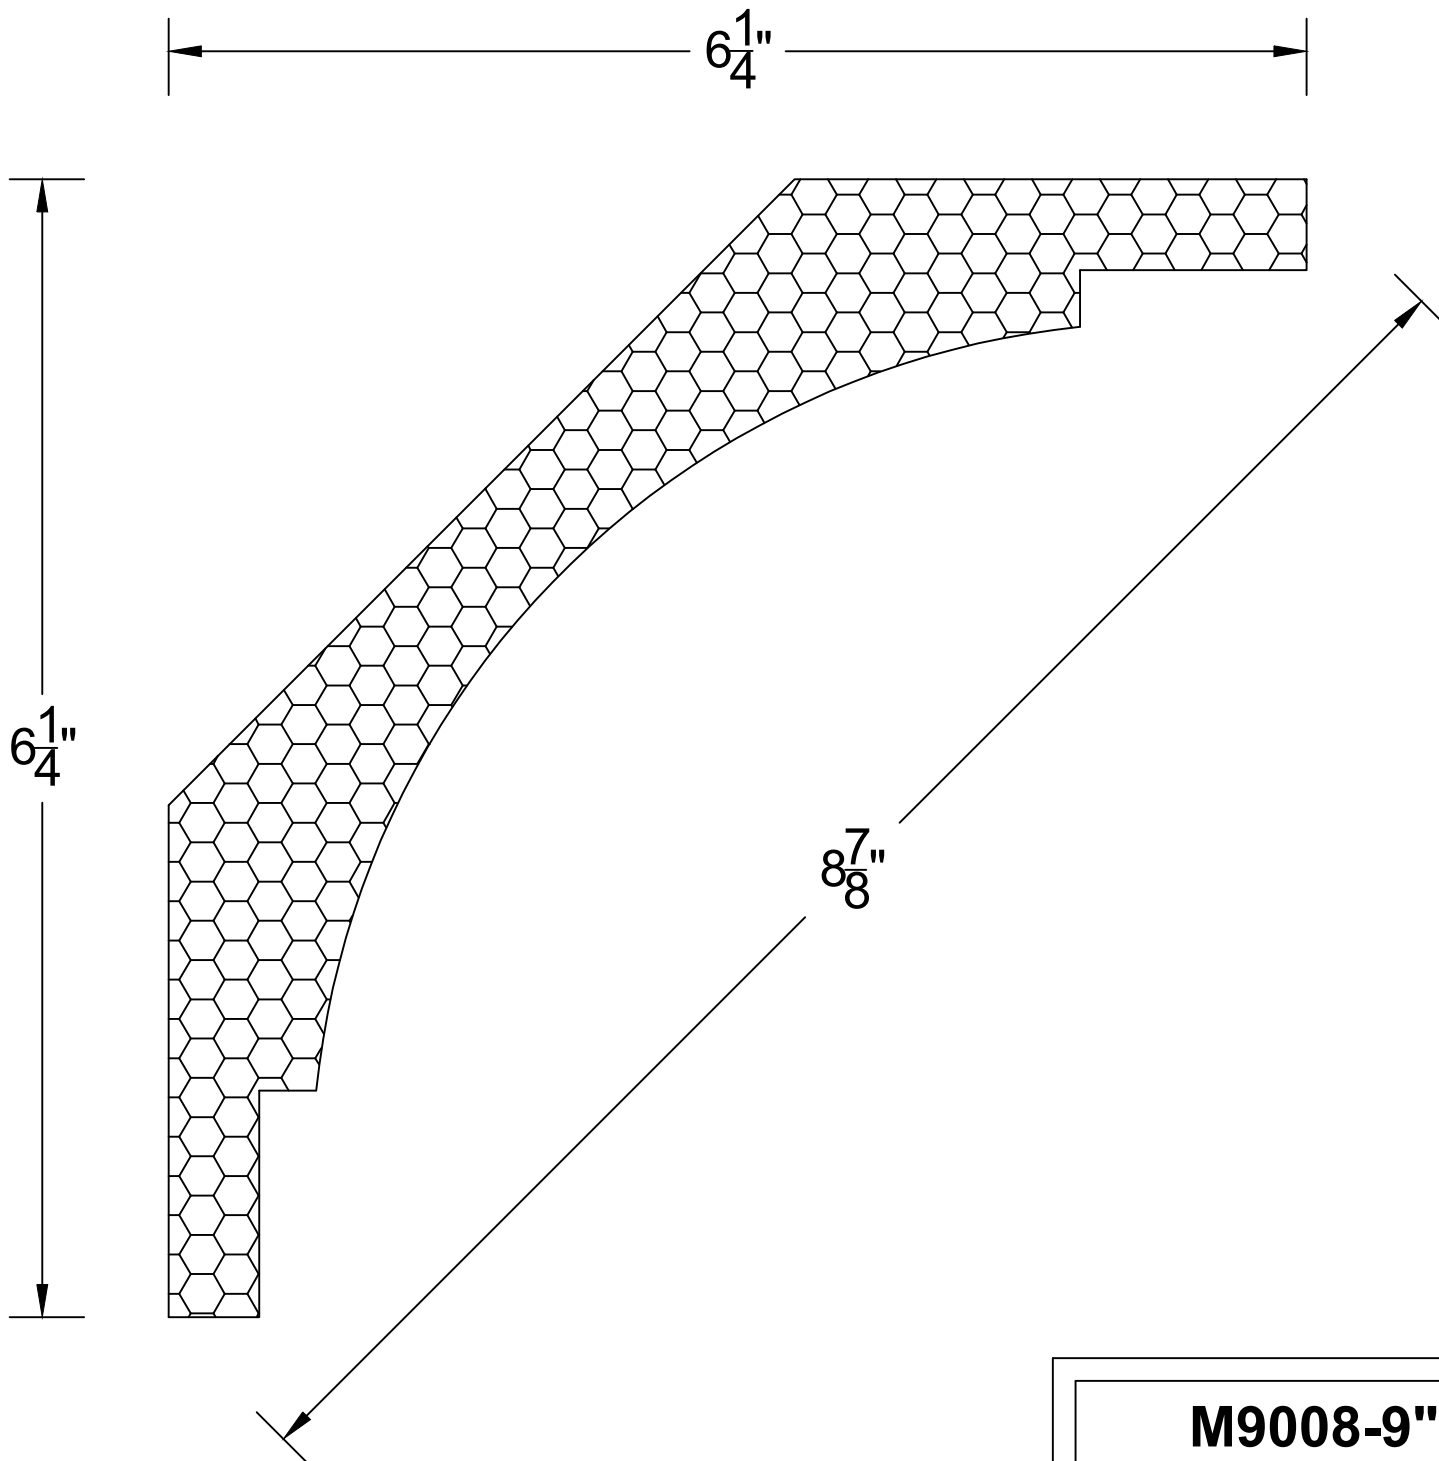


M9008-9"
(CI-906)

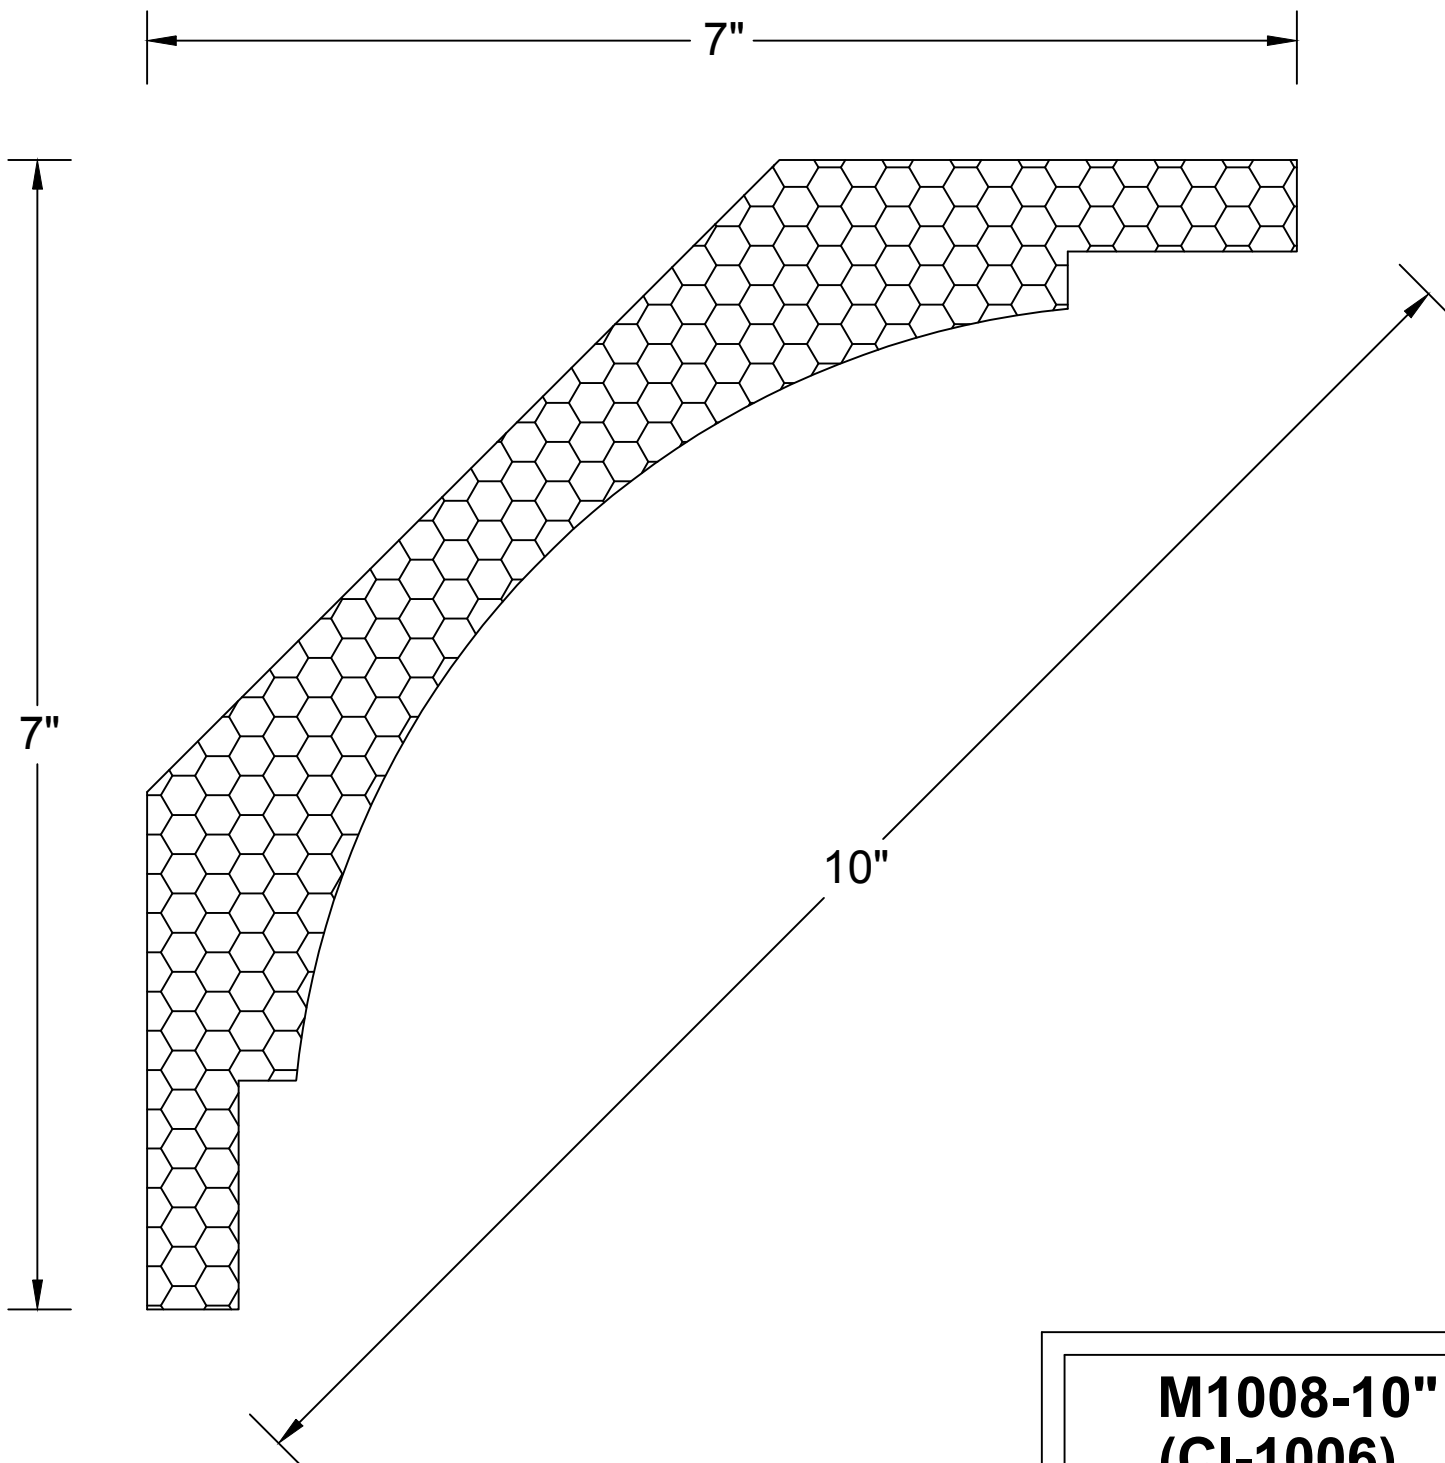

M1008-10"
(CI-1006)


$2\frac{7}{8}"$

$2\frac{7}{8}"$

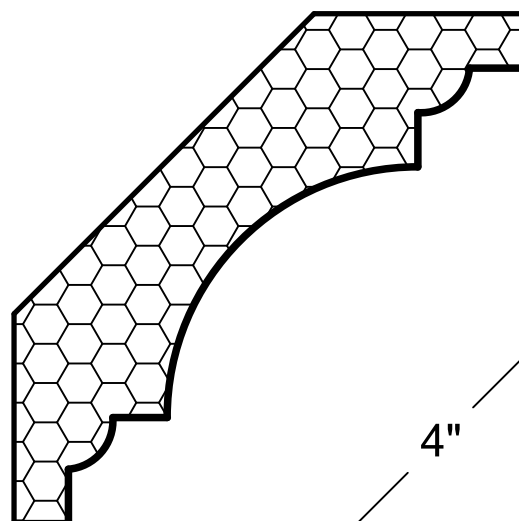

4"


Symmetrical

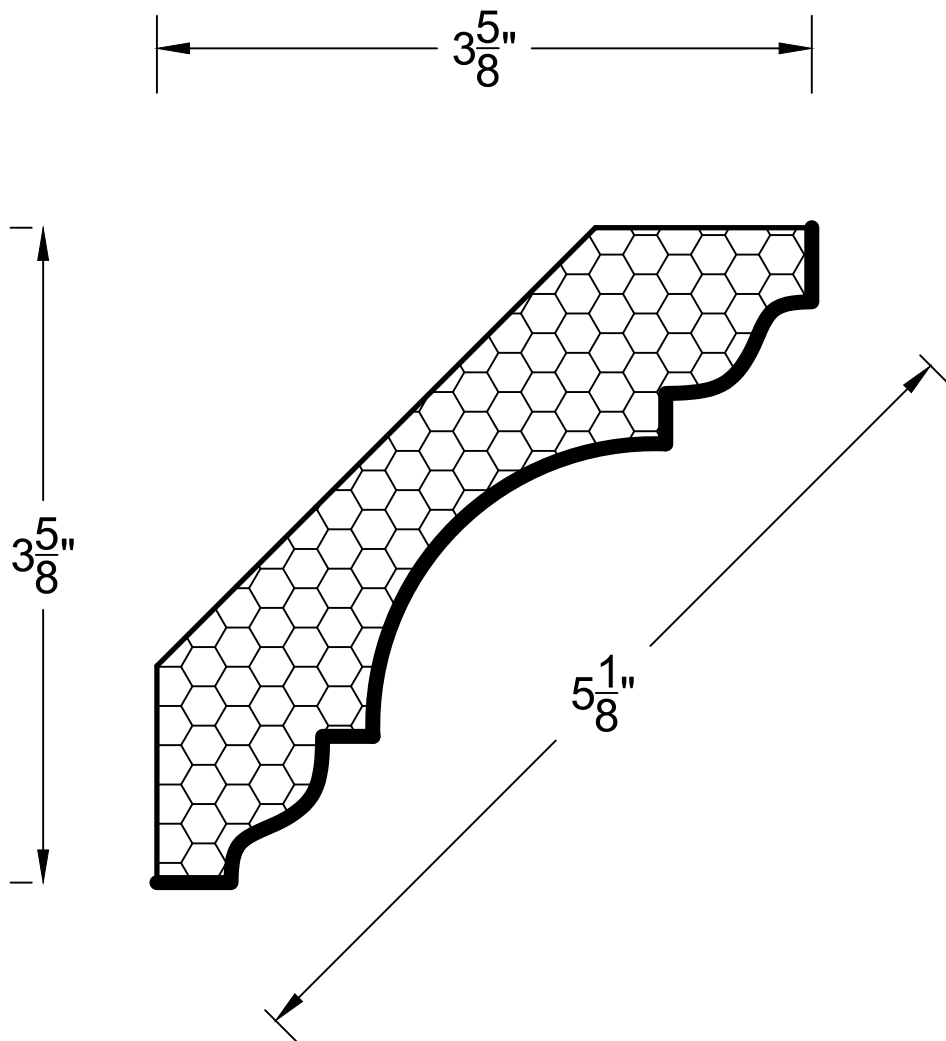

Symmetrical


$4\frac{1}{4}"$

$4\frac{1}{4}"$

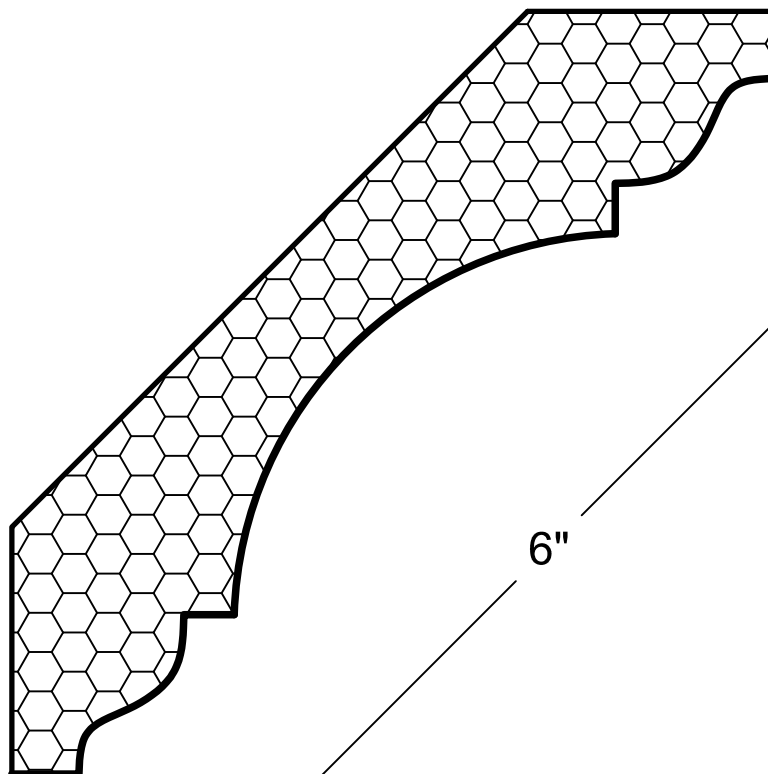


6"


Symmetrical

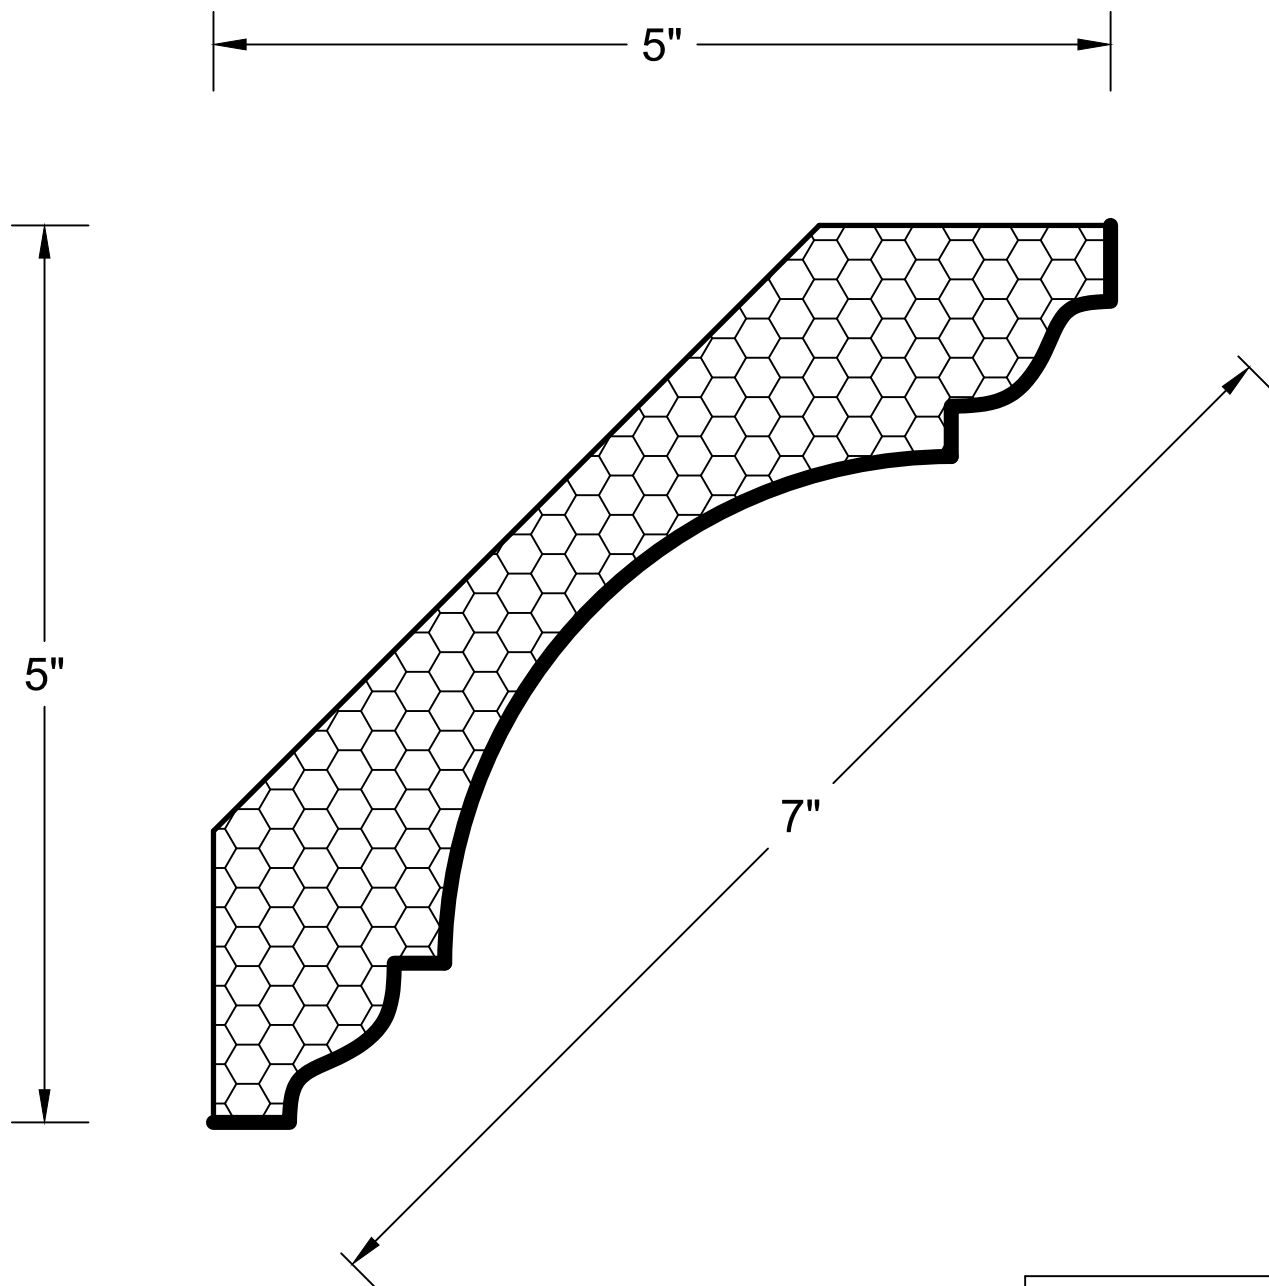

Symmetrical

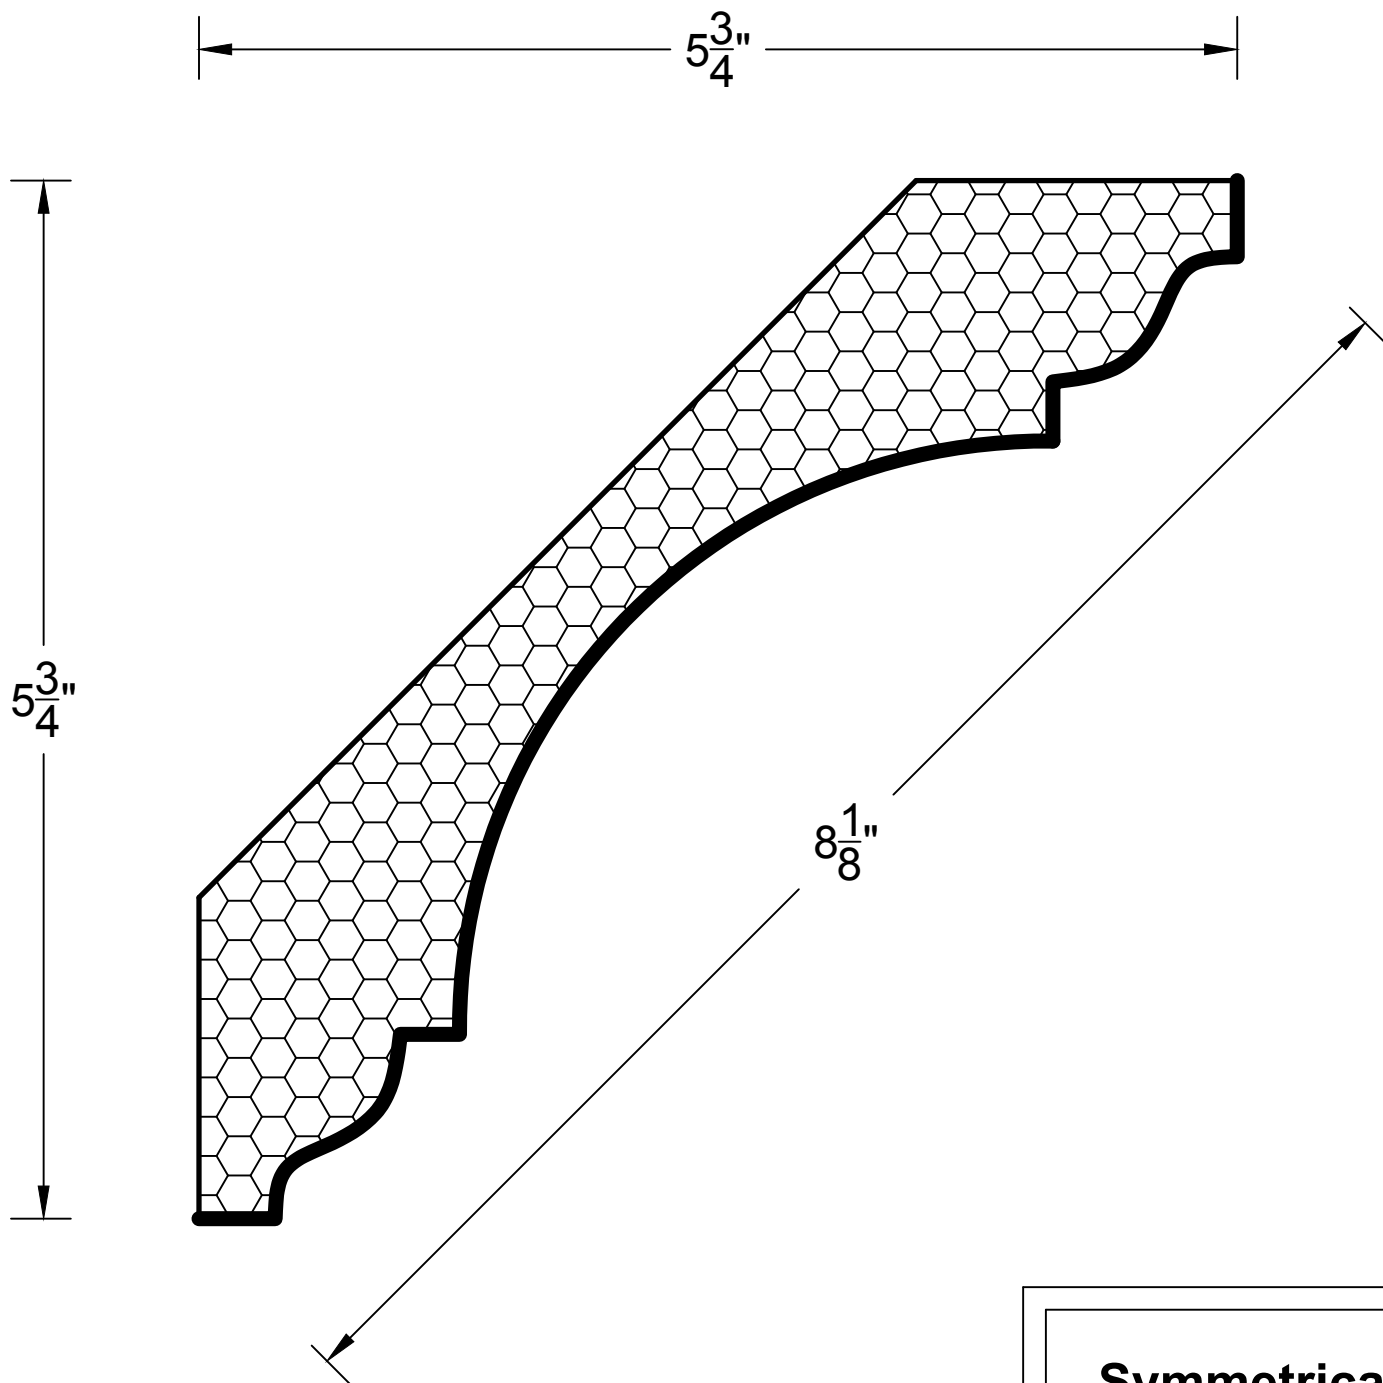

Symmetrical

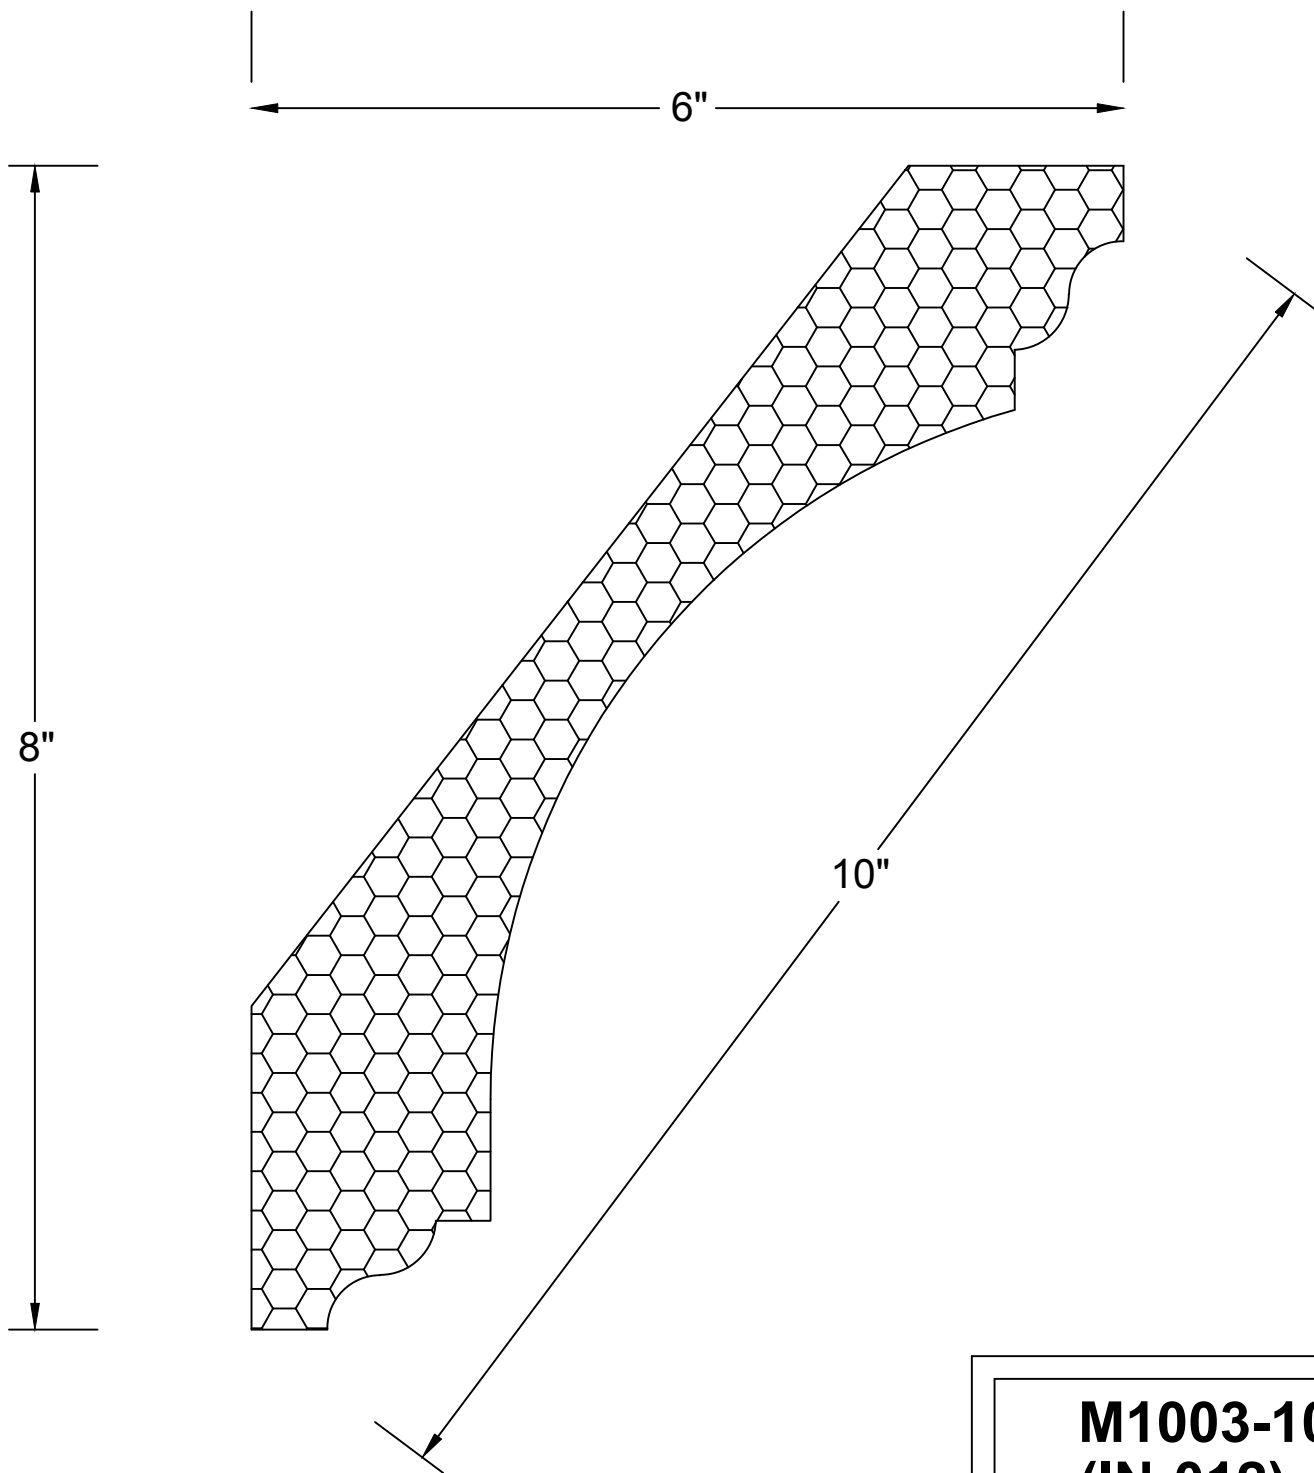

M1003-10"
(IN-012)

8"

8"

11 $\frac{1}{4}$ "

M1103-11.25"

10"


10"

1'-2"

M1403-14"

$3\frac{1}{2}"$


$3\frac{1}{2}"$

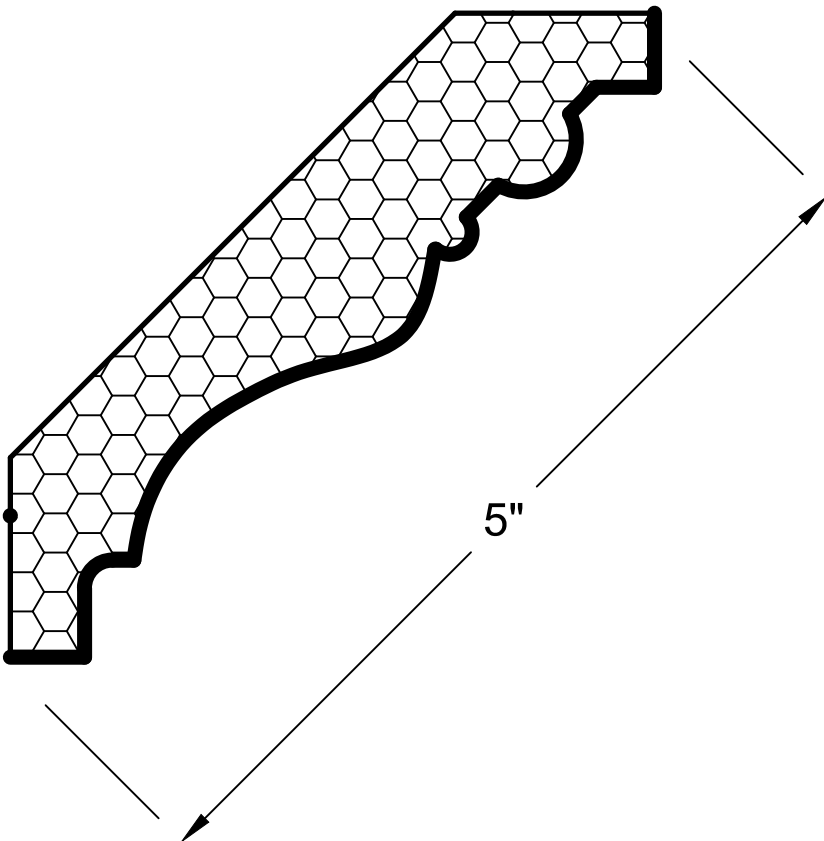

Tuscany

4 $\frac{1}{4}$ "

4 $\frac{1}{4}$ "

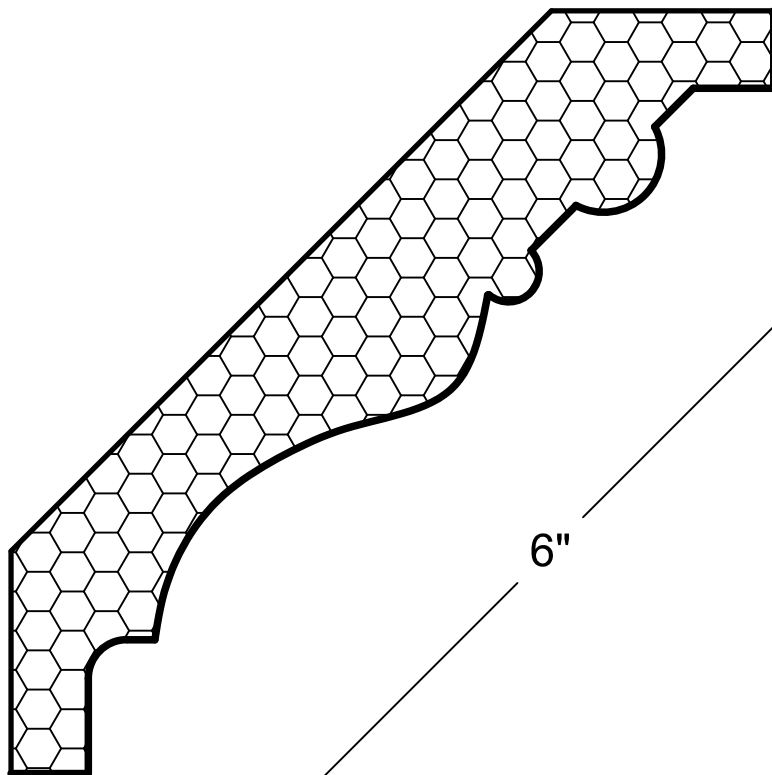

6"


Tuscany

$4\frac{7}{8}"$

$4\frac{7}{8}"$

$6\frac{7}{8}"$


Tuscany

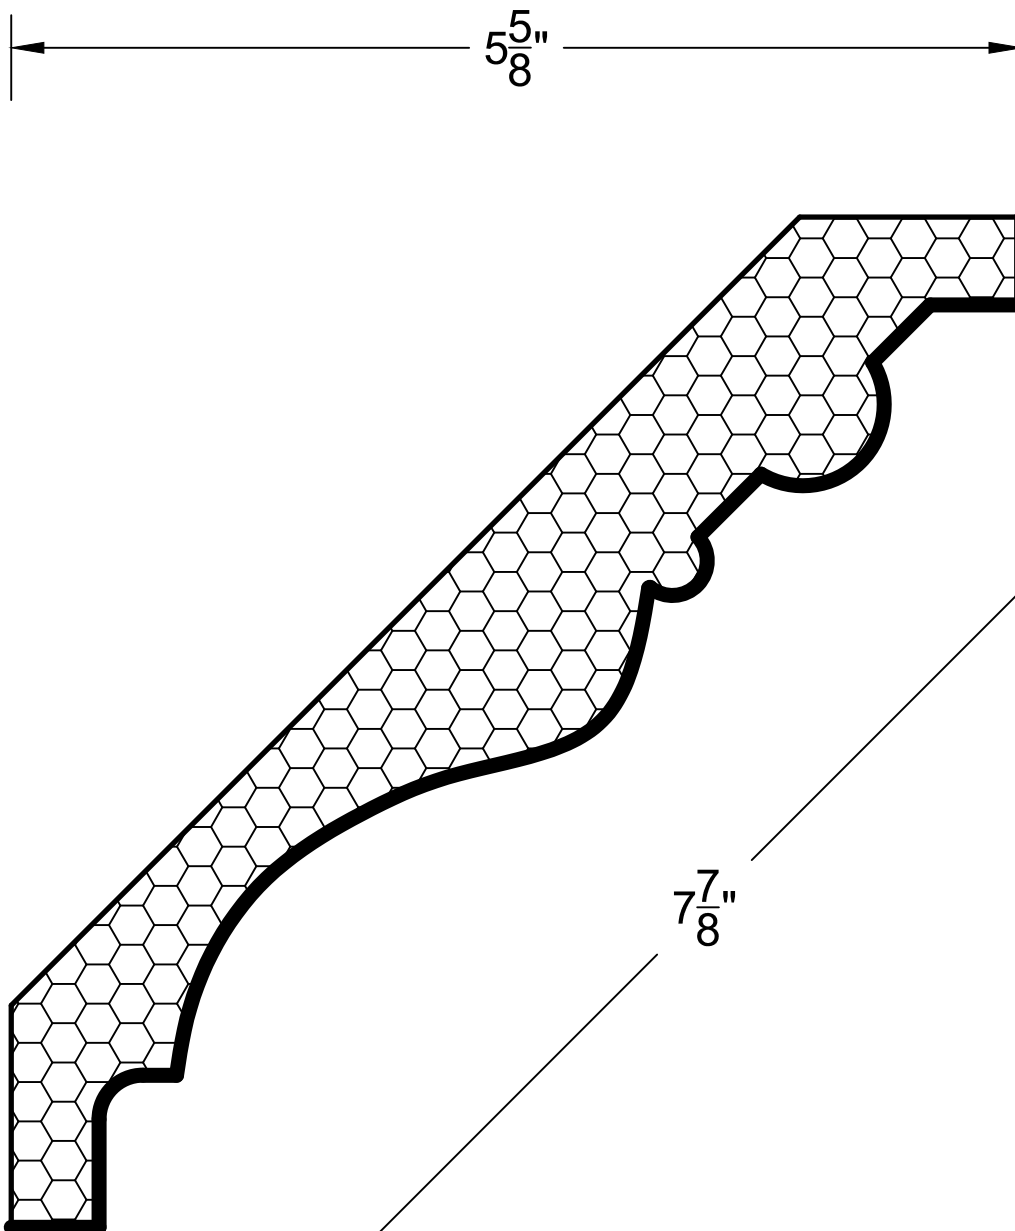

Tuscany


$2\frac{3}{4}"$

$2\frac{3}{4}"$

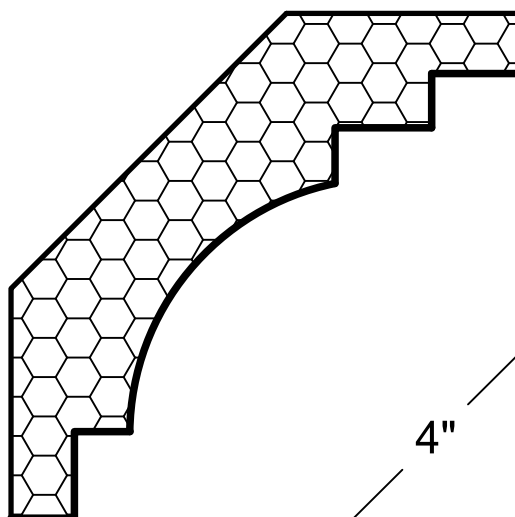

4"


Two Steps Cove

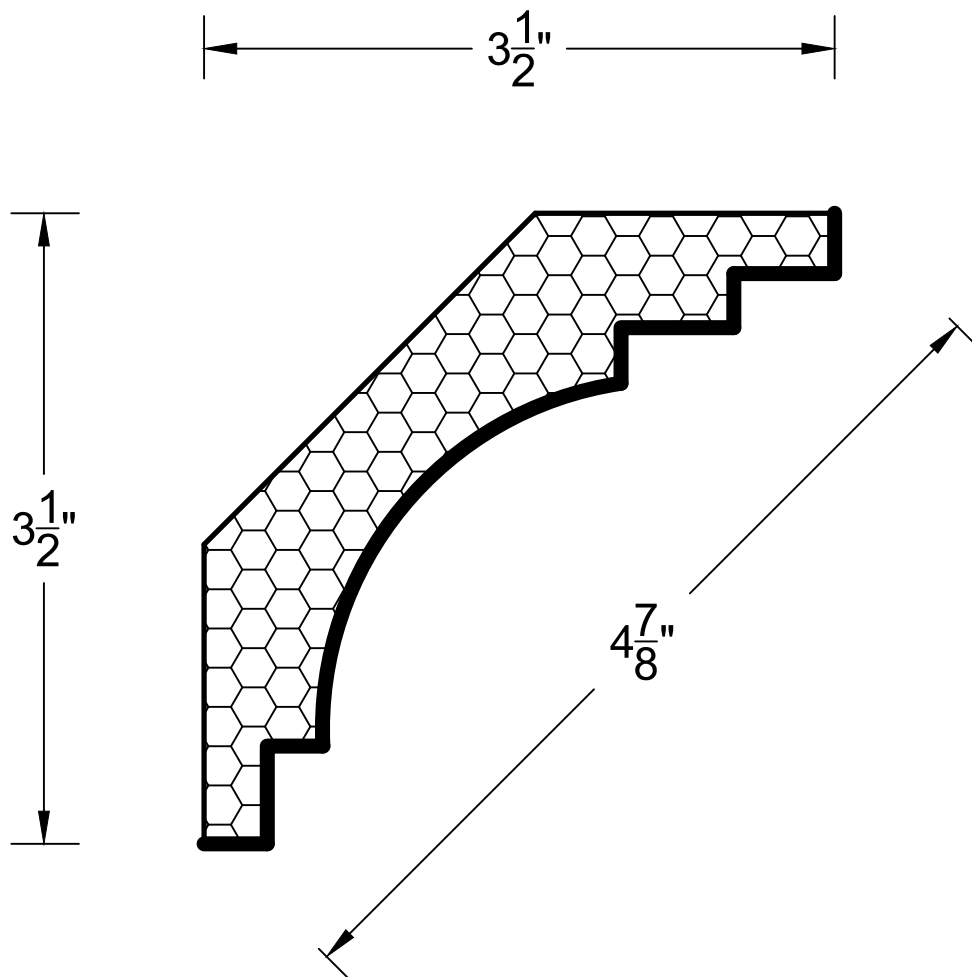

Two Steps Cove


$4\frac{1}{4}"$

$4\frac{1}{4}"$

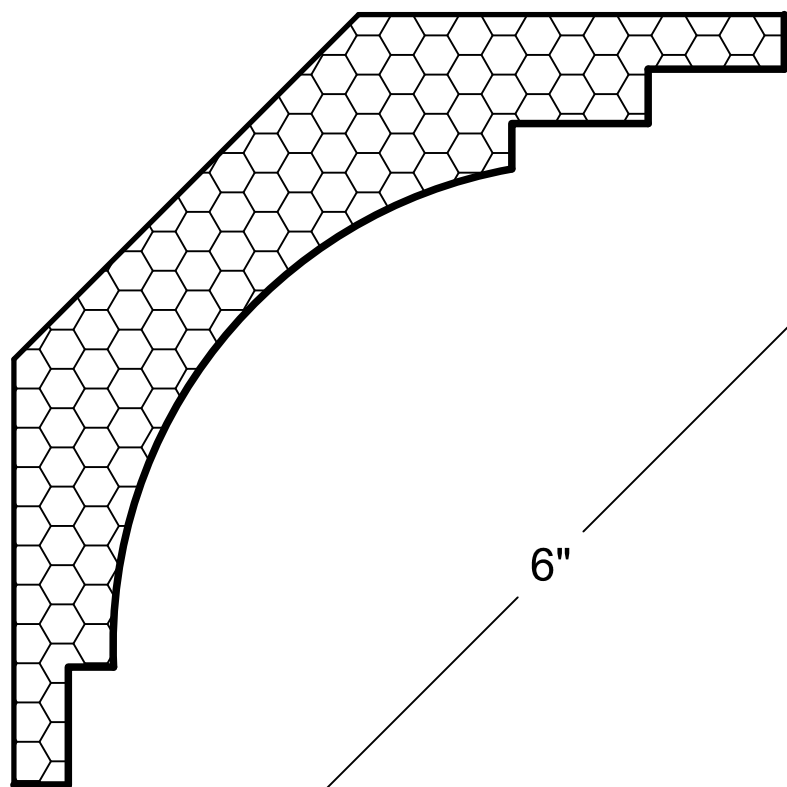


6"

Two Steps Cove

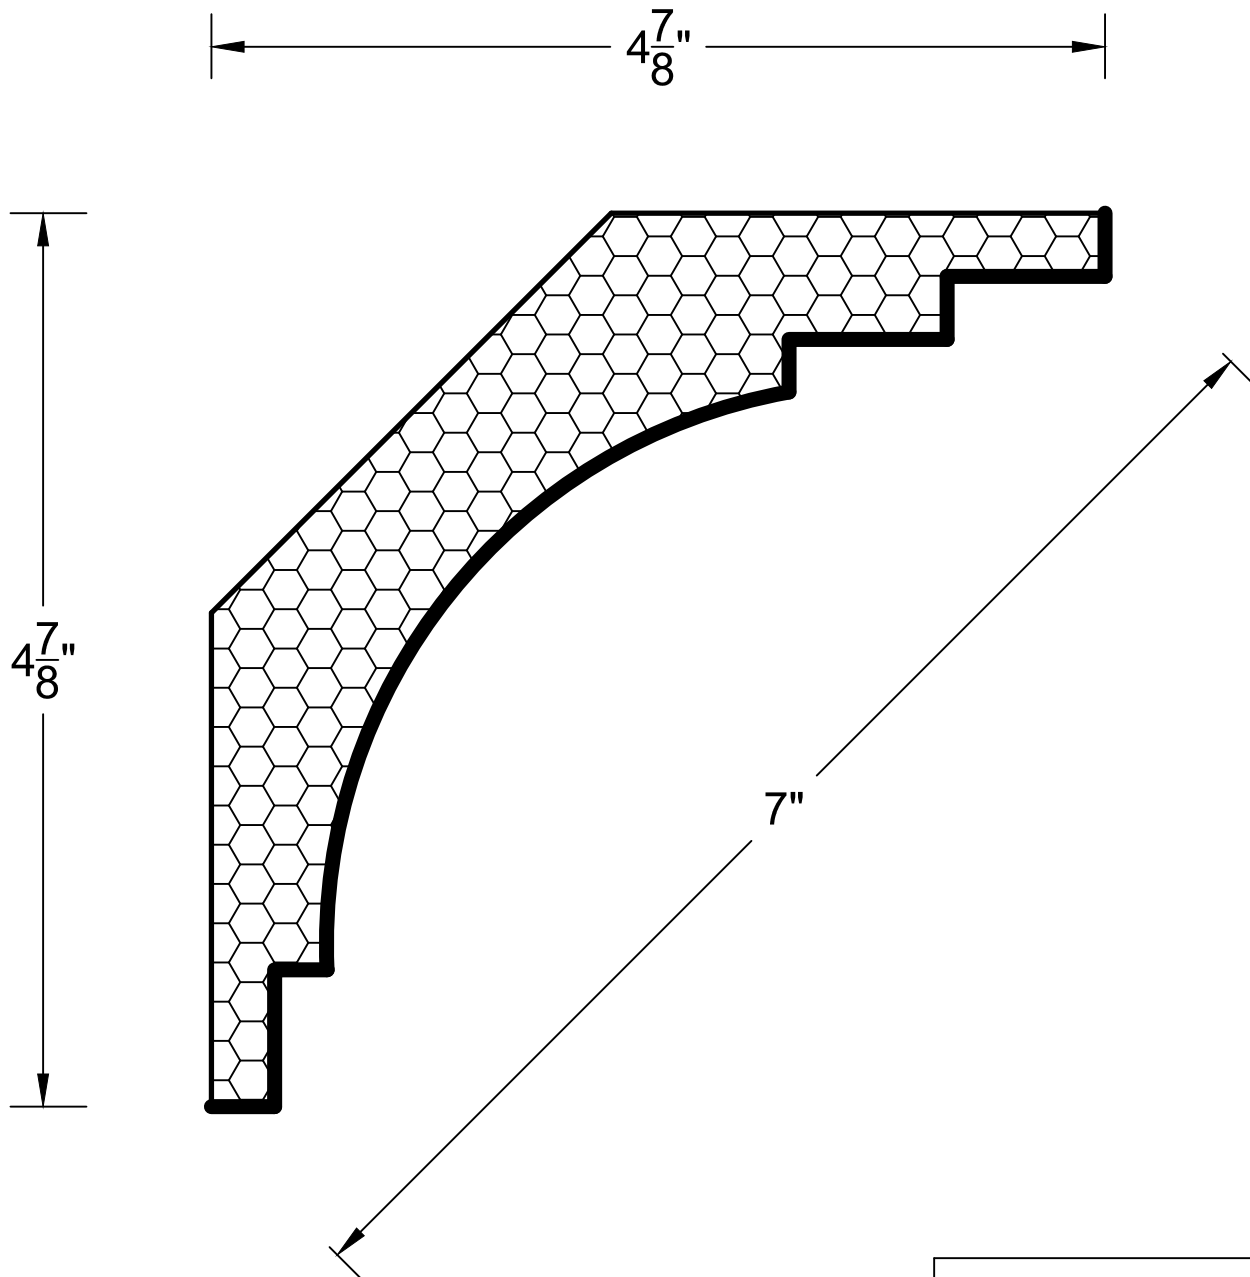


Two Steps Cove

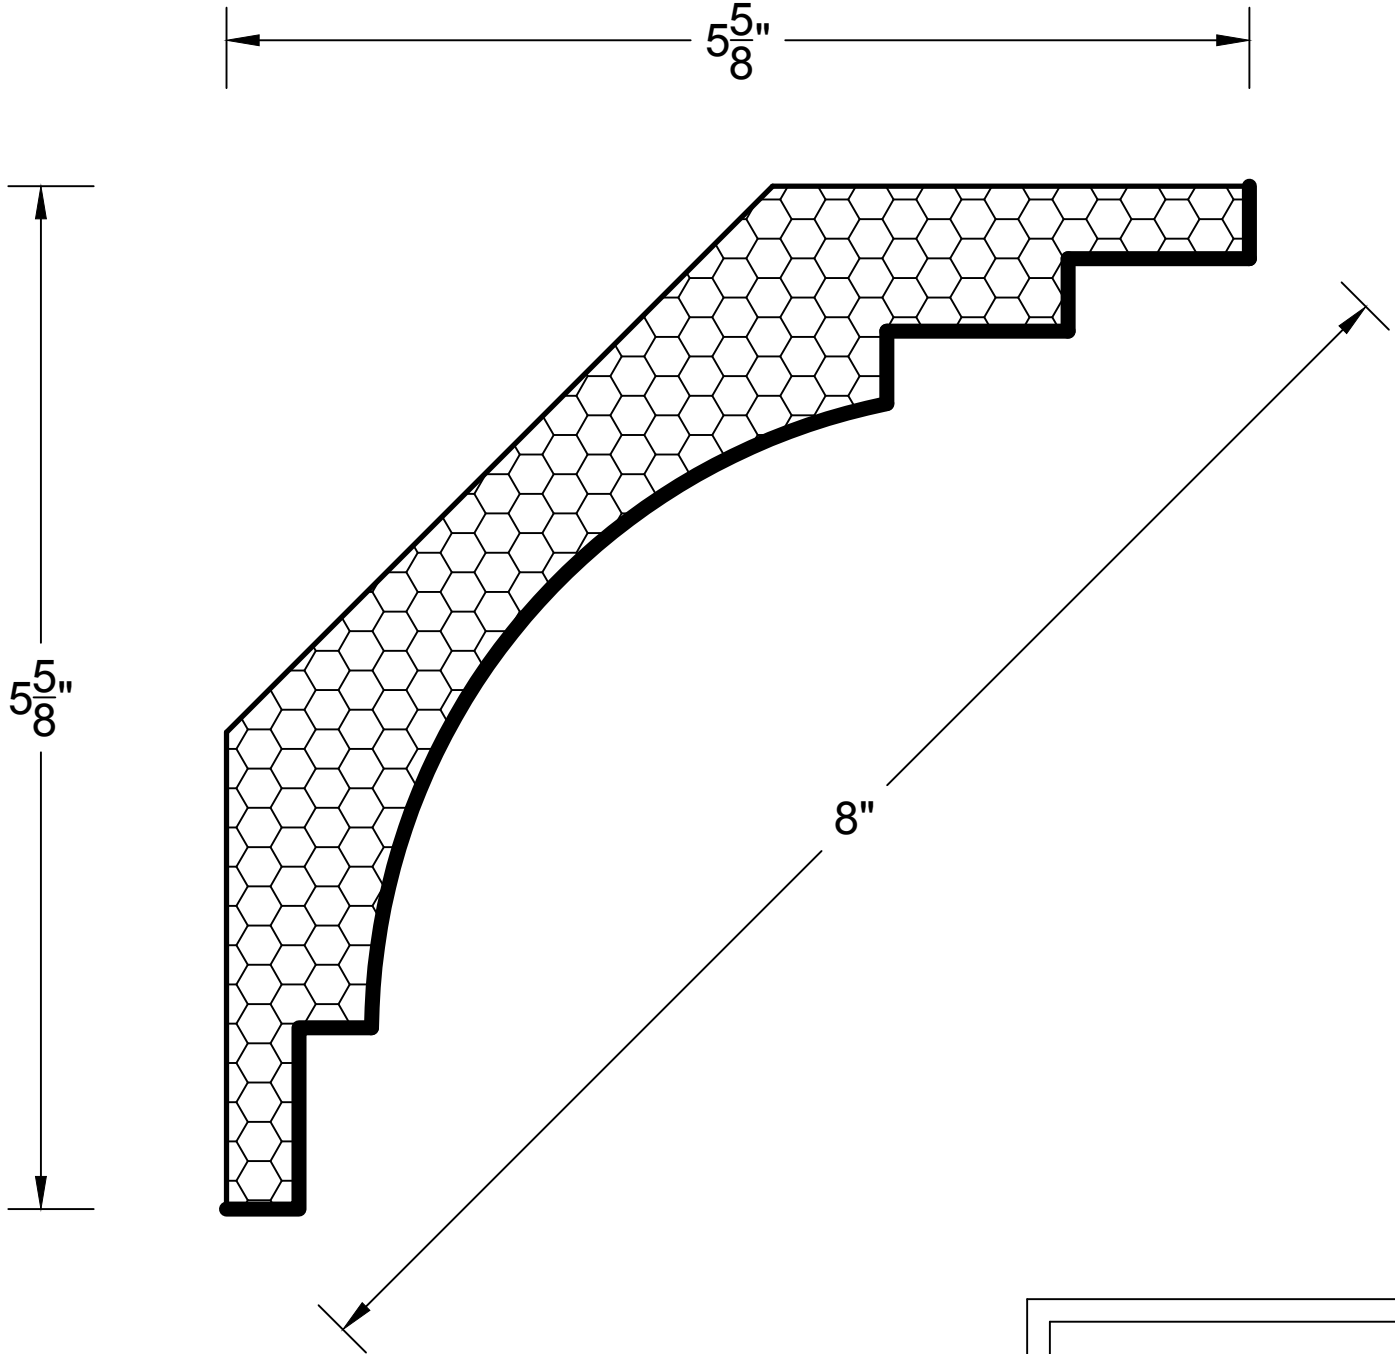

Two Steps Cove

63"

63"

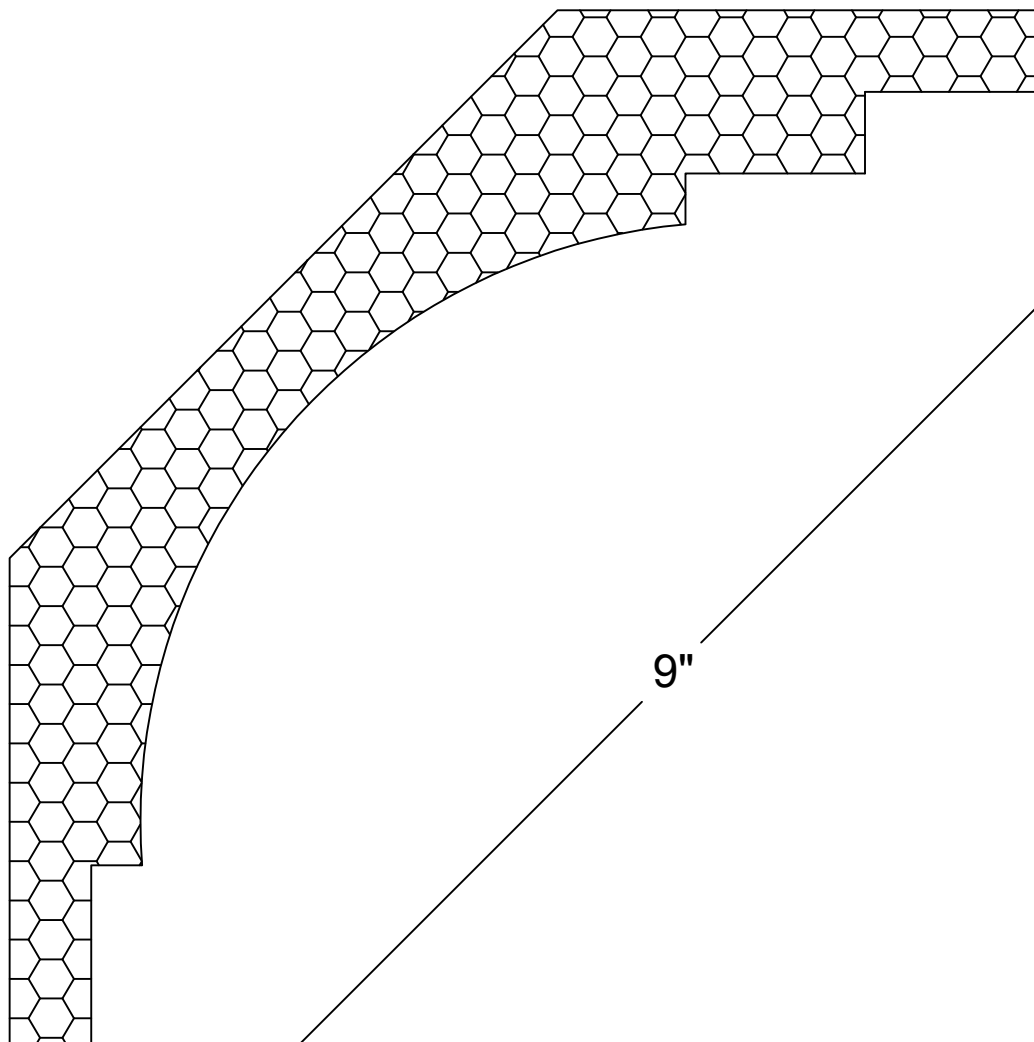

9"

M9010-9"

$7\frac{3}{8}"$


$7\frac{3}{8}"$

$10\frac{3}{8}"$

M1010-10"
(CI-1007)

$3\frac{1}{2}"$

$3\frac{1}{2}"$

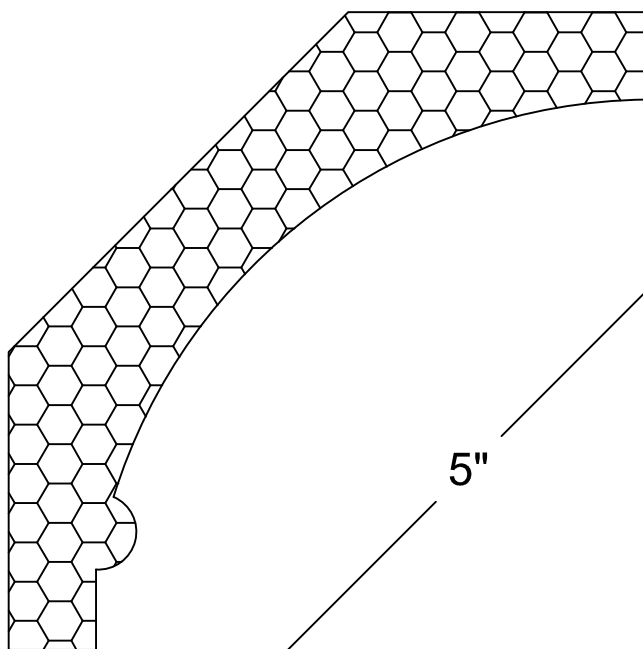


5"

M5001-5"

$4\frac{7}{8}"$

$4\frac{7}{8}"$

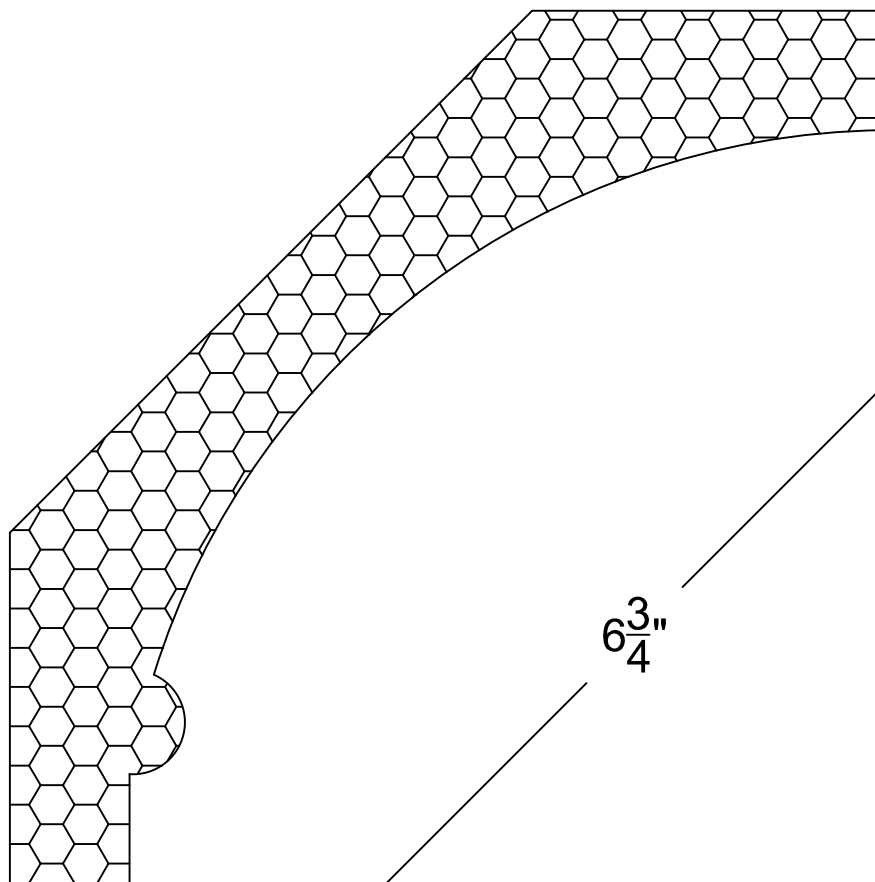

$6\frac{3}{4}"$


M7001-7"

$5\frac{1}{2}"$


$5\frac{1}{2}"$

$7\frac{3}{4}"$


M8001-8"

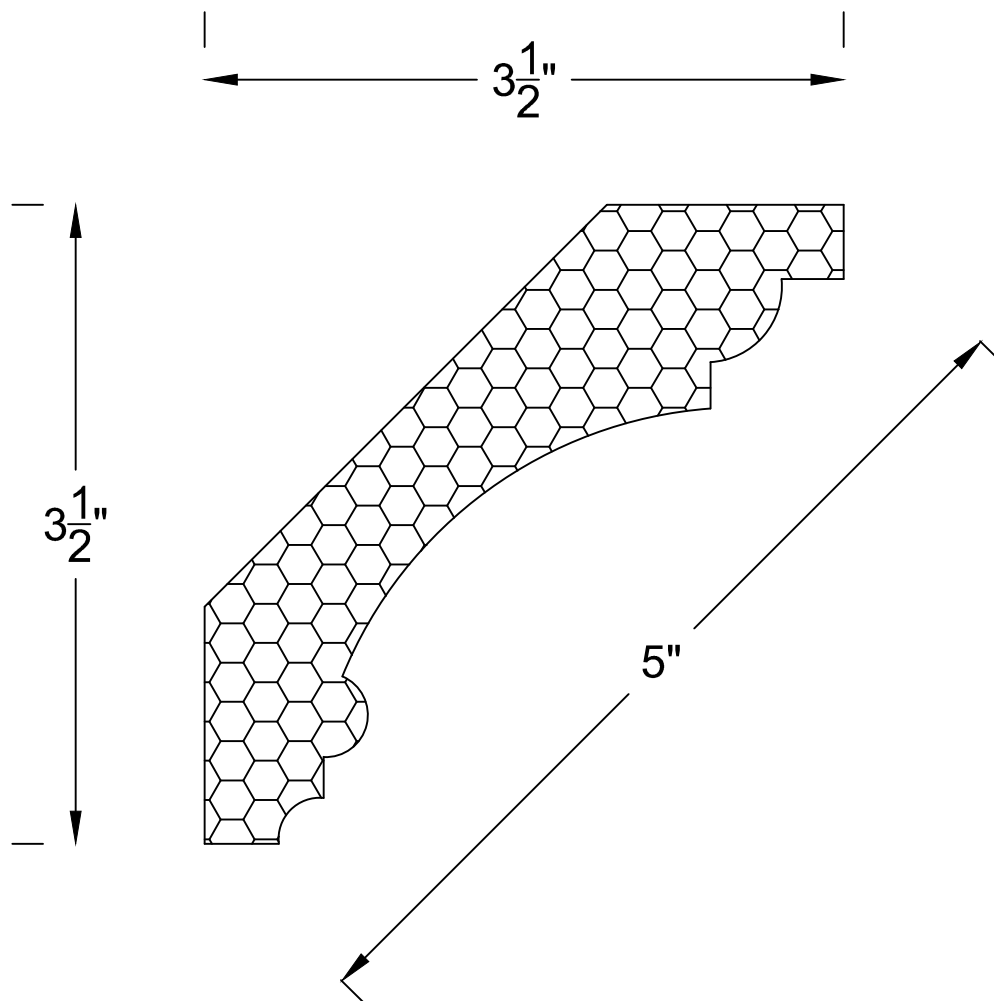


M5002-5"

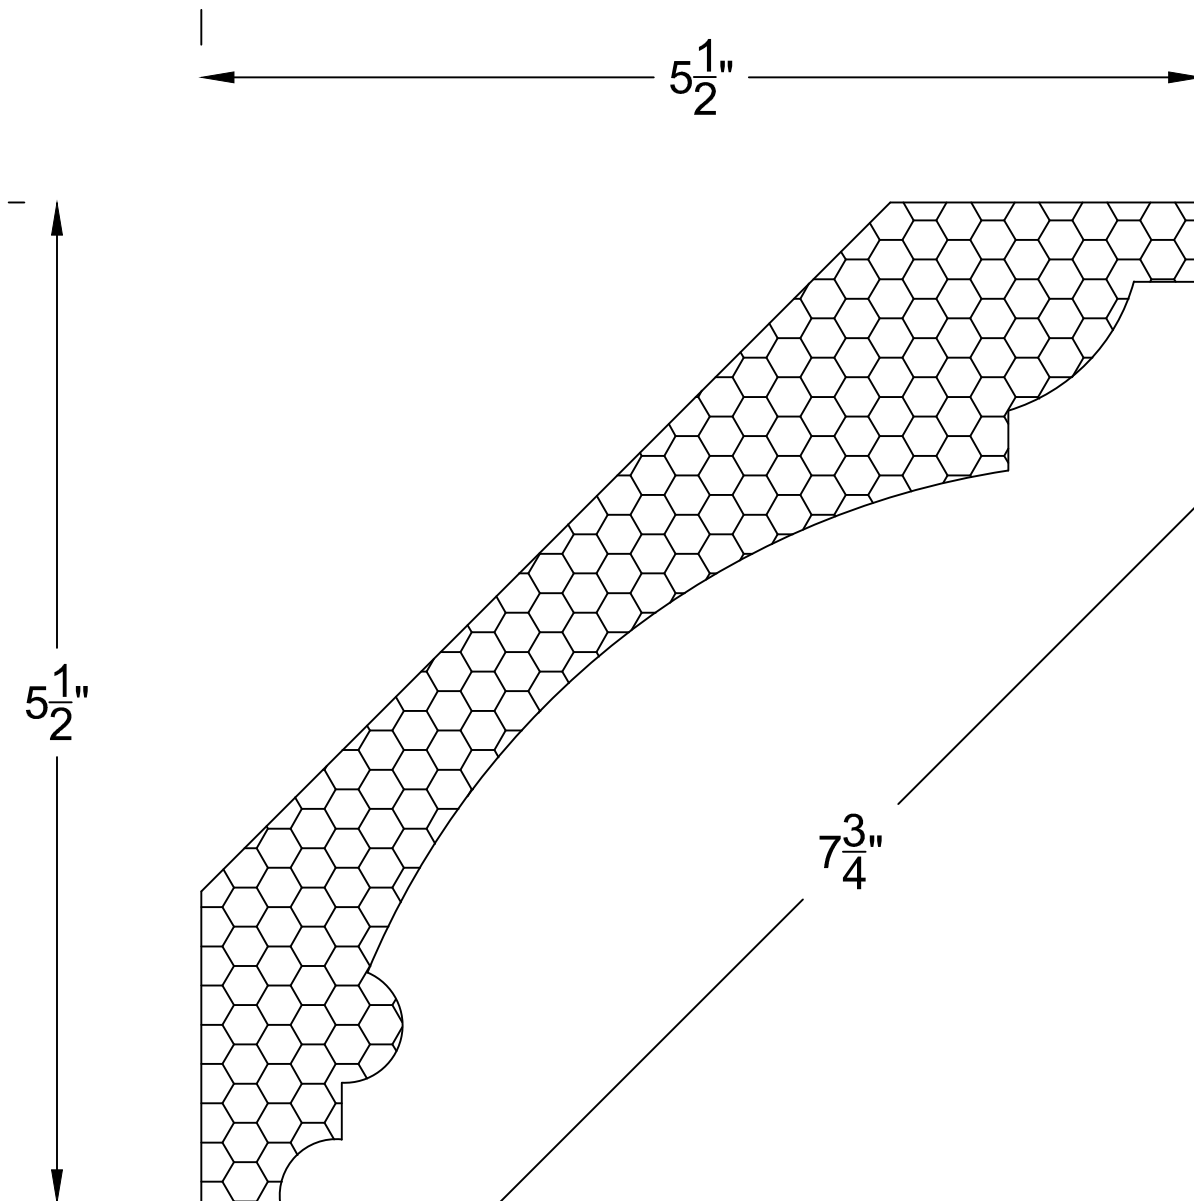

M8002-8"

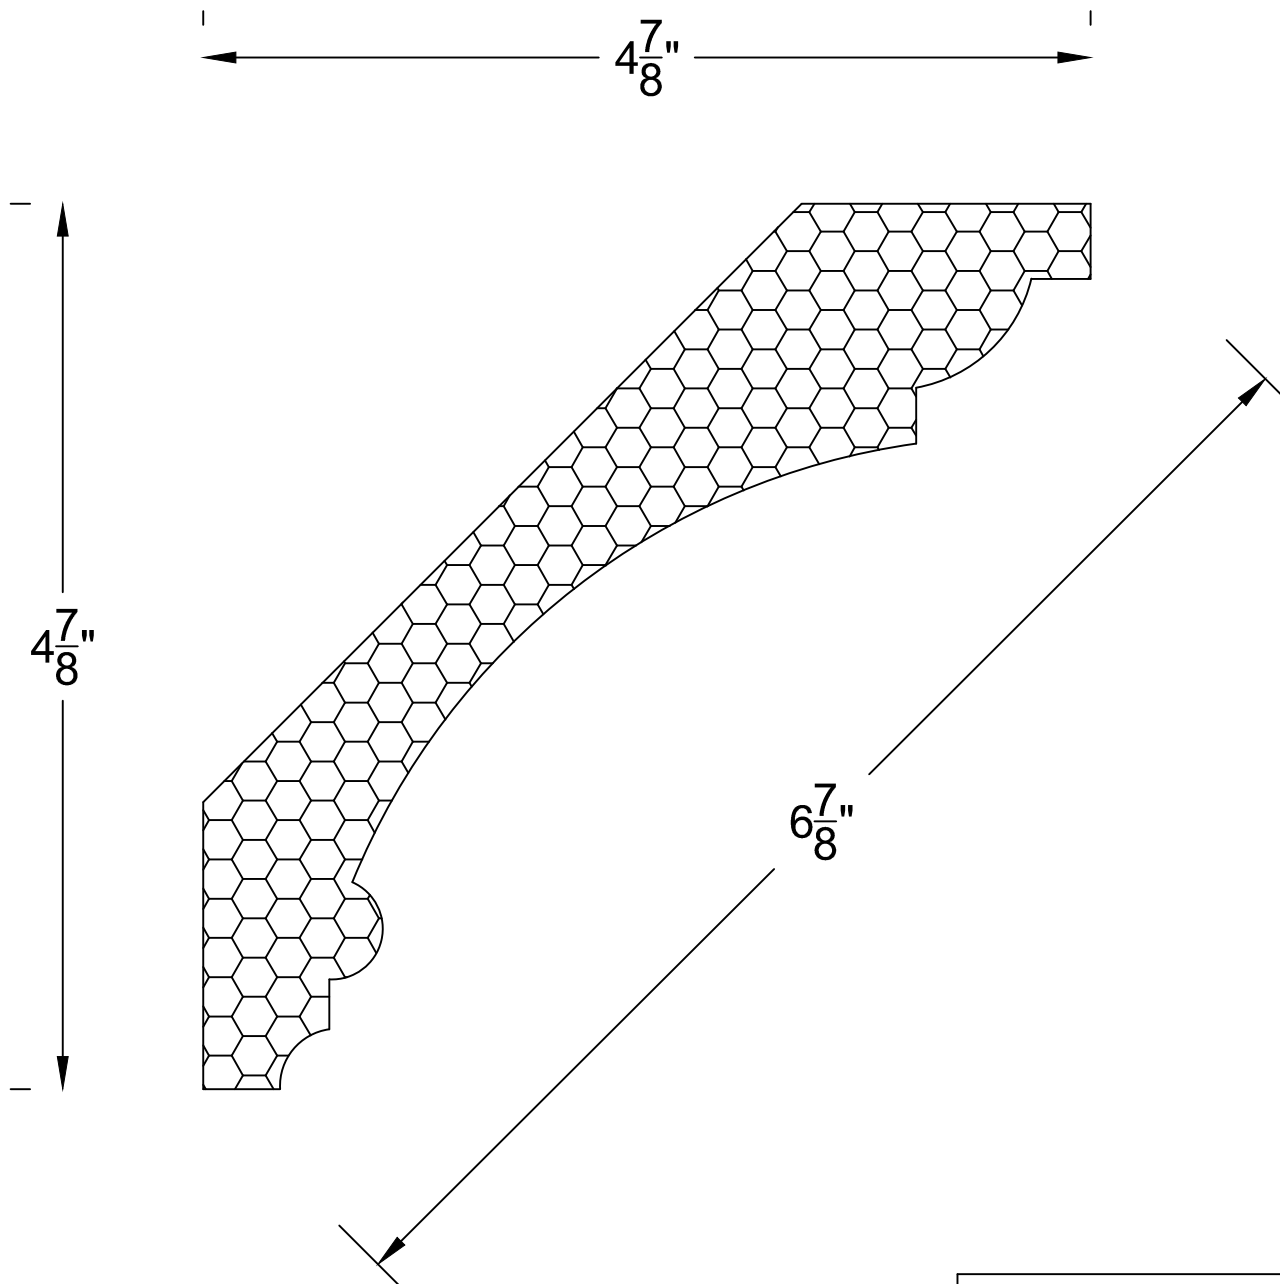


M7002-7"

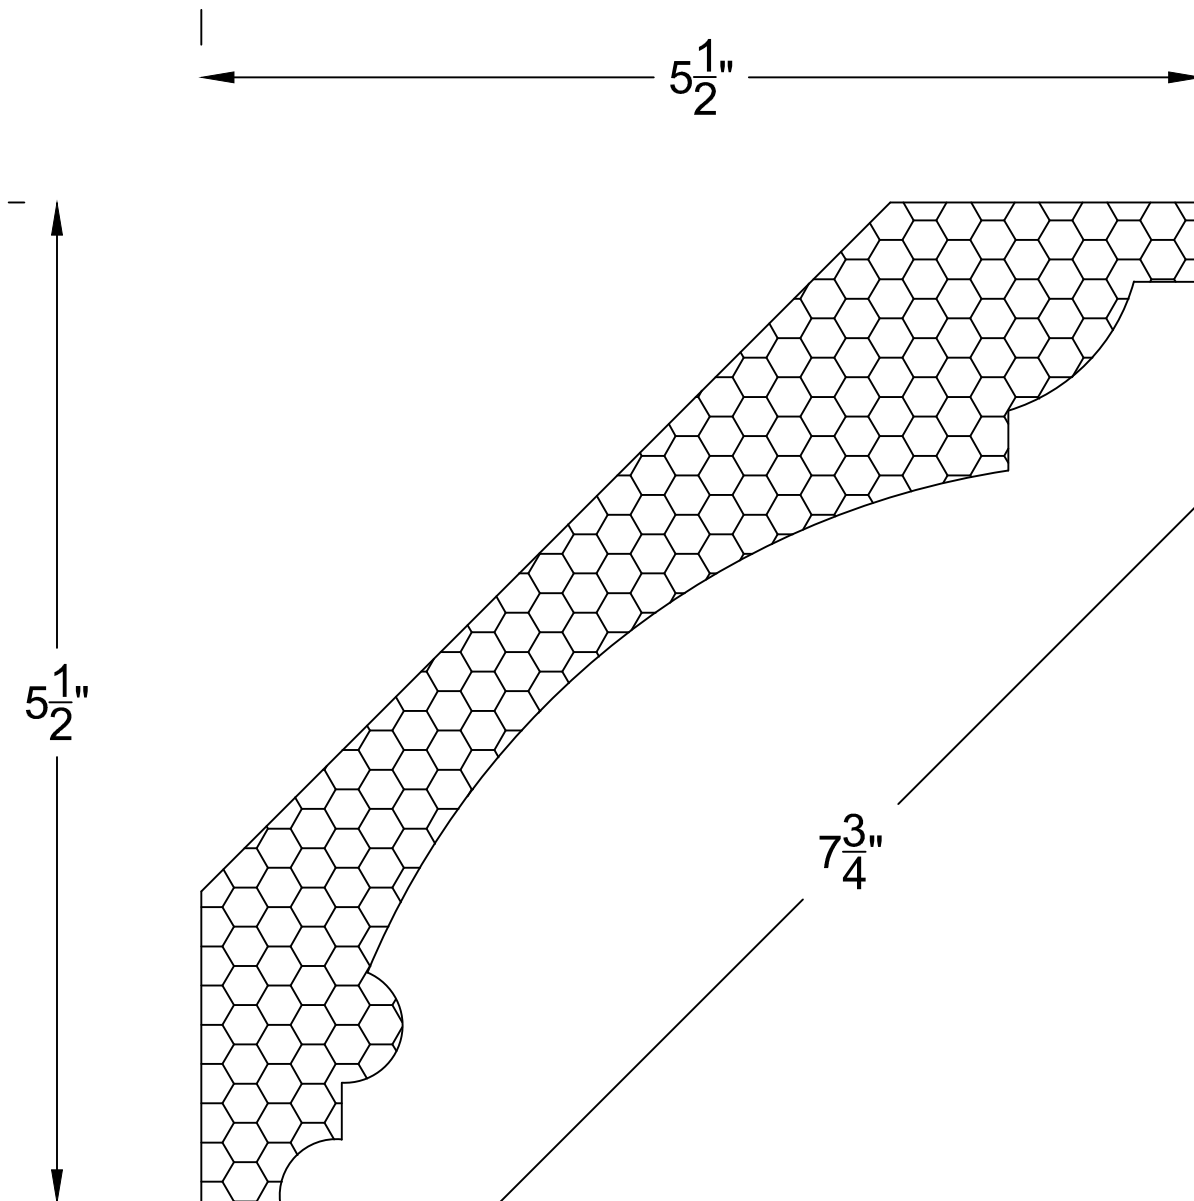

M8002-8"


$3\frac{5}{8}"$

$3\frac{5}{8}"$

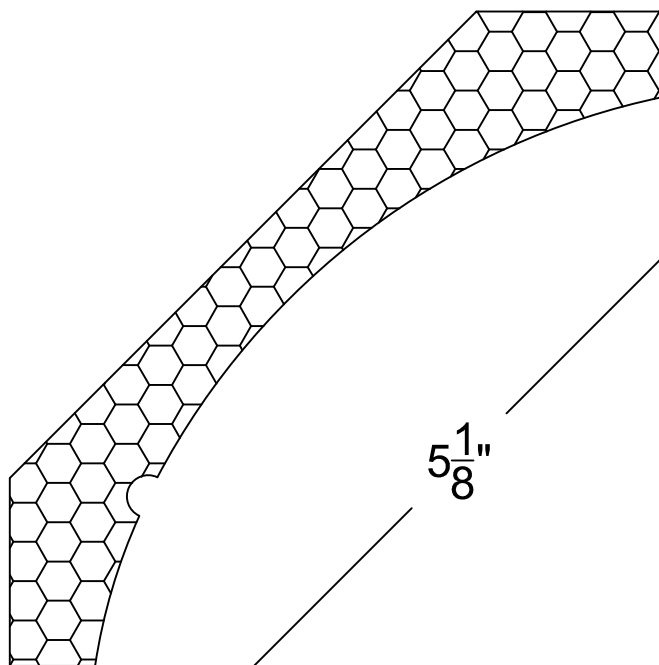

$5\frac{1}{8}"$


M5004-5"

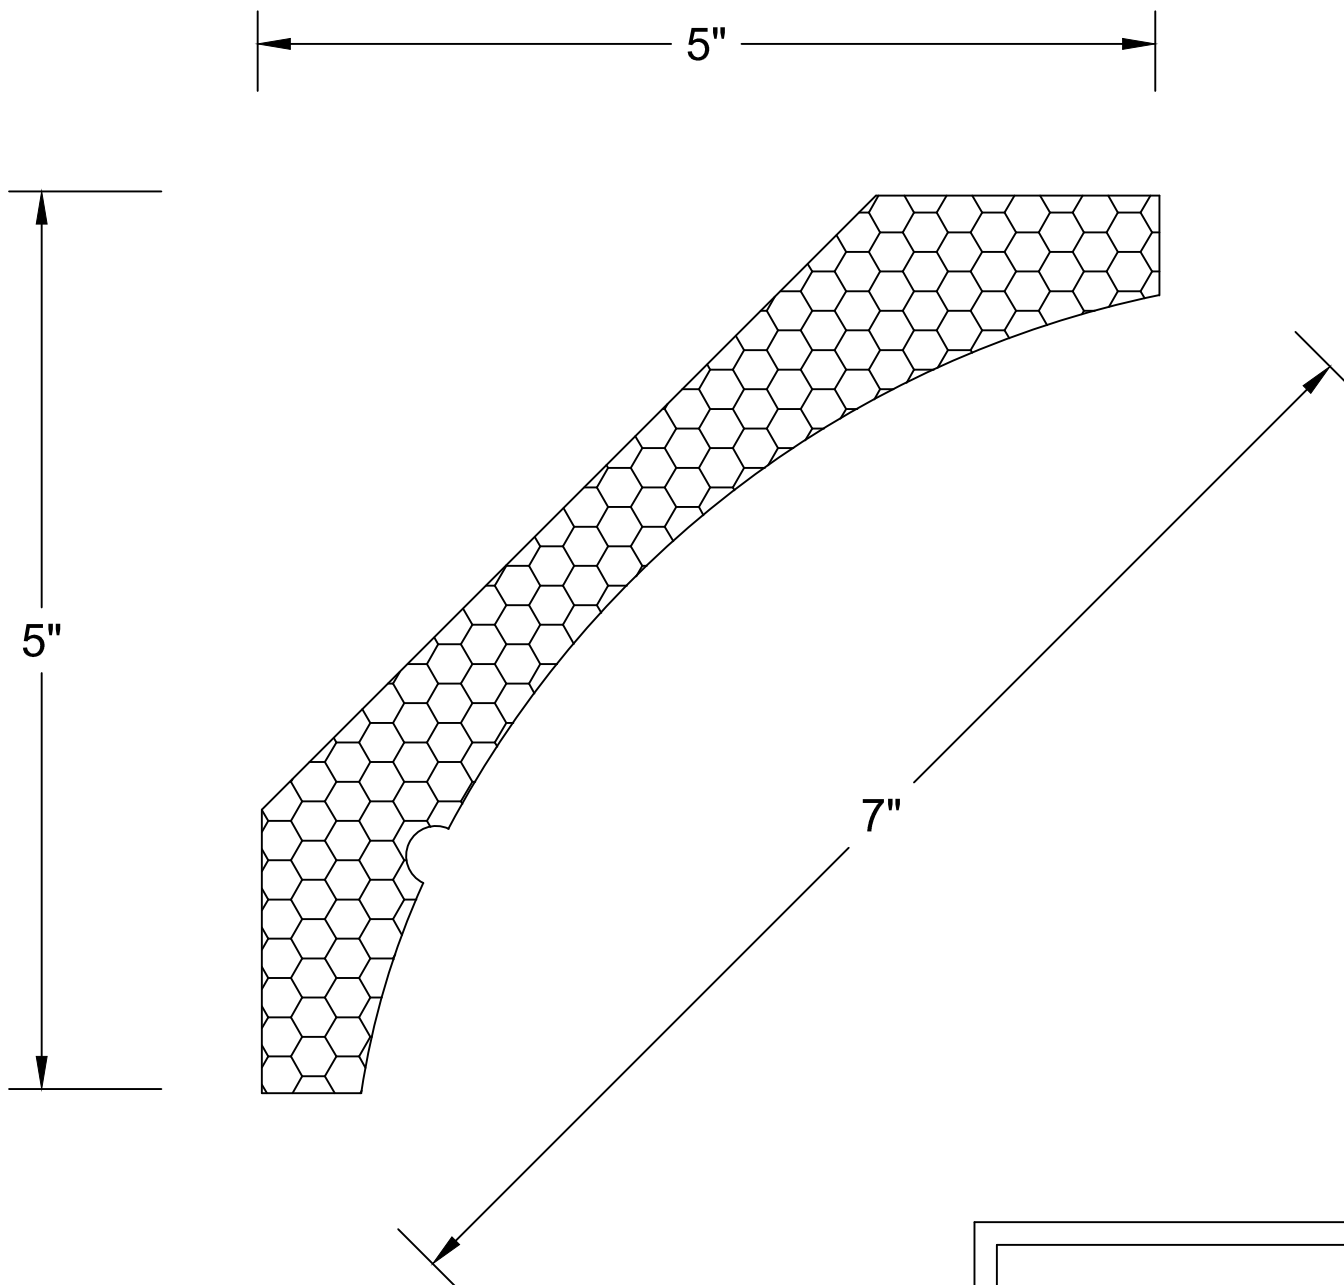

M7004-7"


$5\frac{5}{8}"$

$5\frac{5}{8}"$

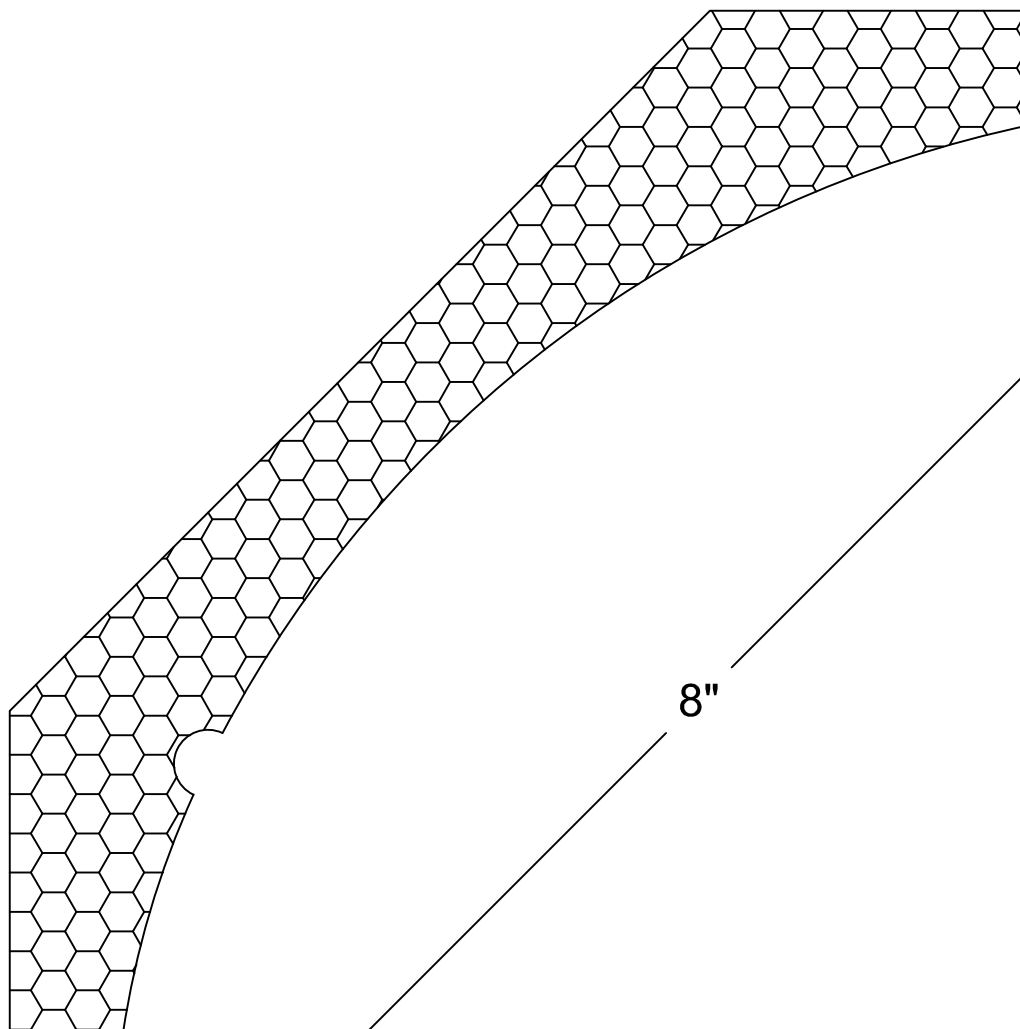

$8"$


M8004-8"

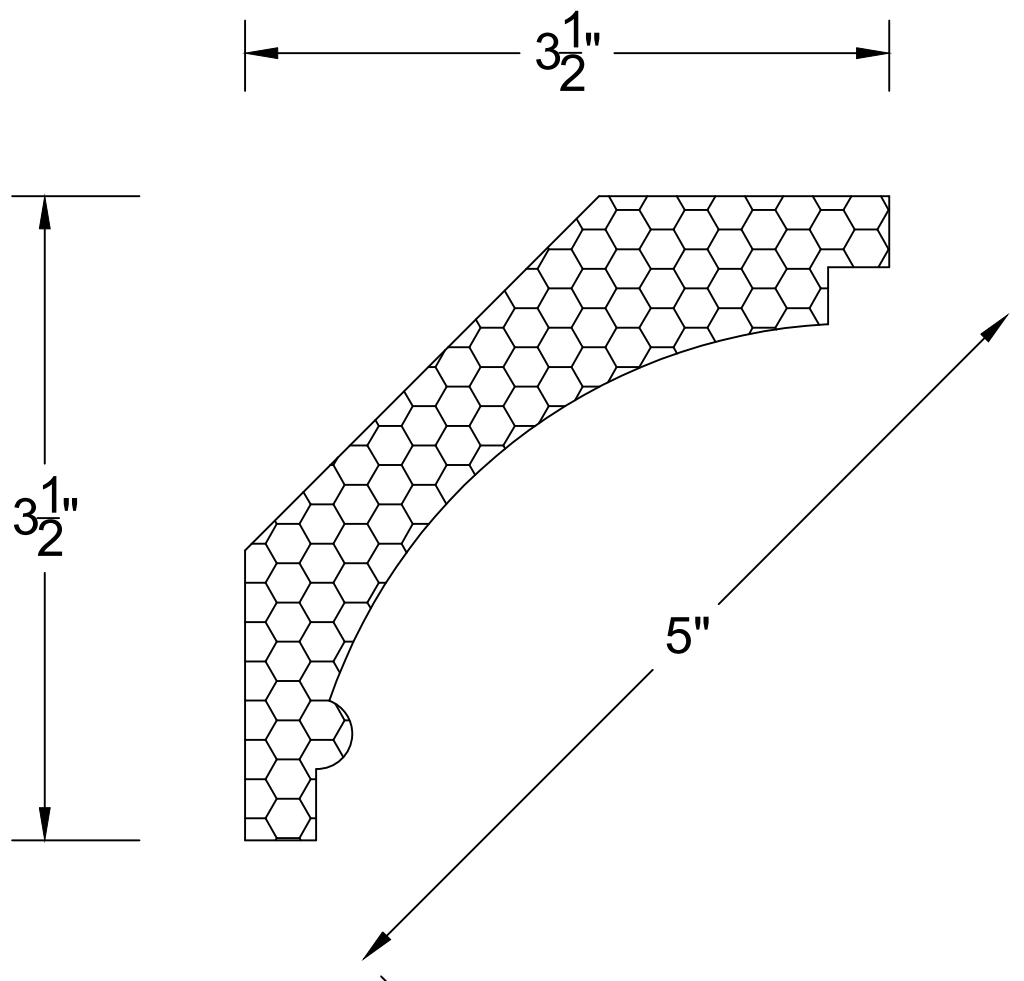

M5005-5"

$4\frac{3}{4}"$

$4\frac{3}{4}"$

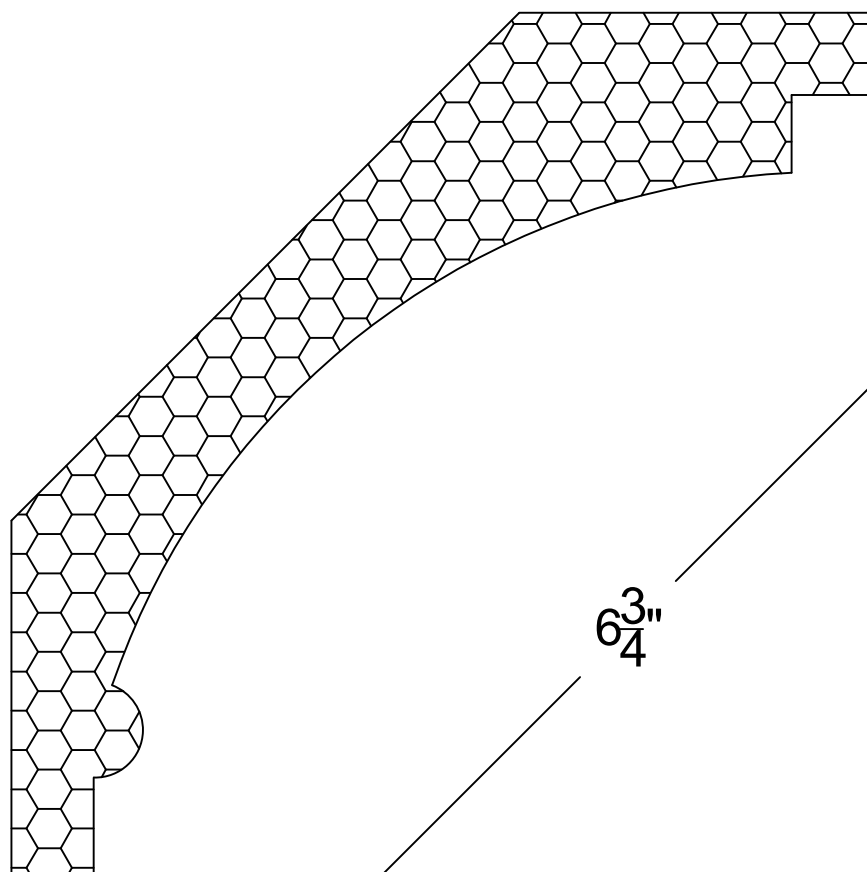

$6\frac{3}{4}"$

M7005-7"

5 5/8"


5 5/8"

8"

M8005-8"


$5\frac{1}{2}"$

$5\frac{3}{4}"$

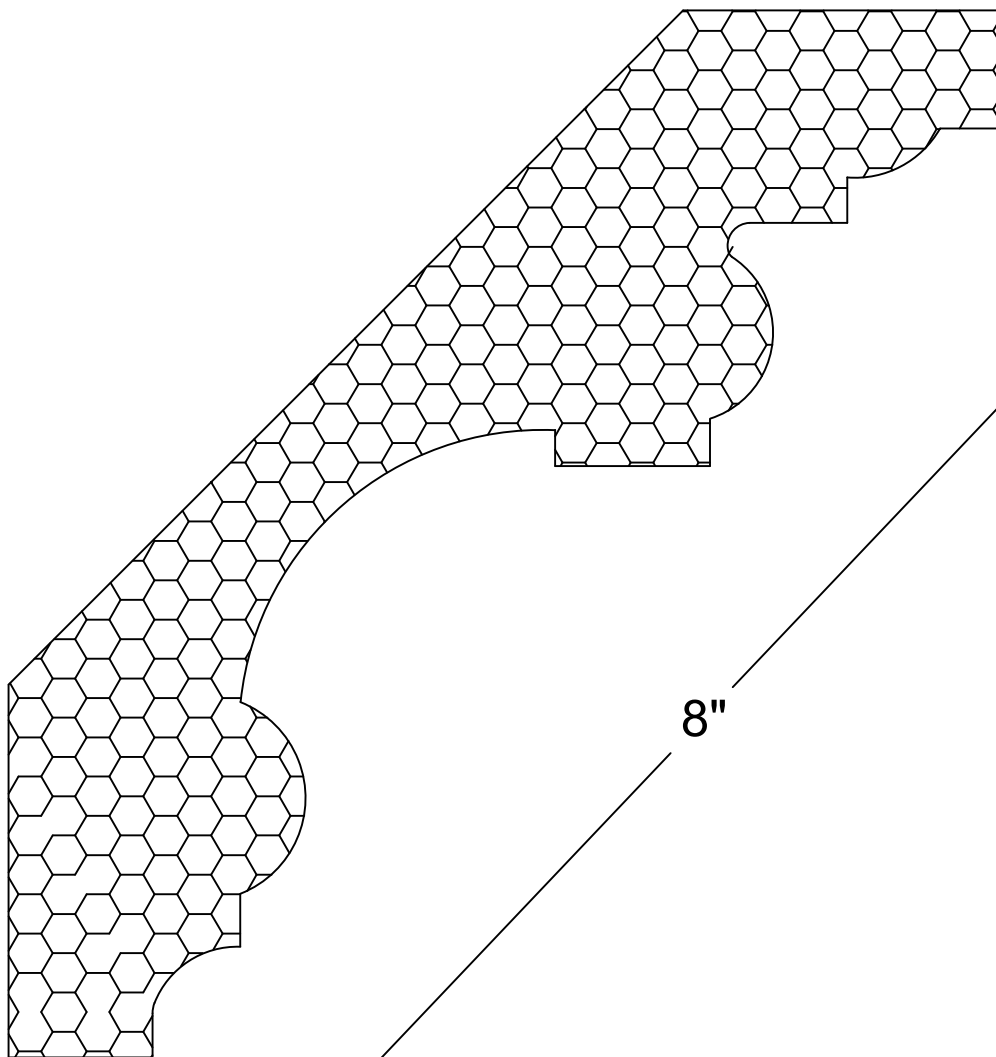


8"


CI-905-8"

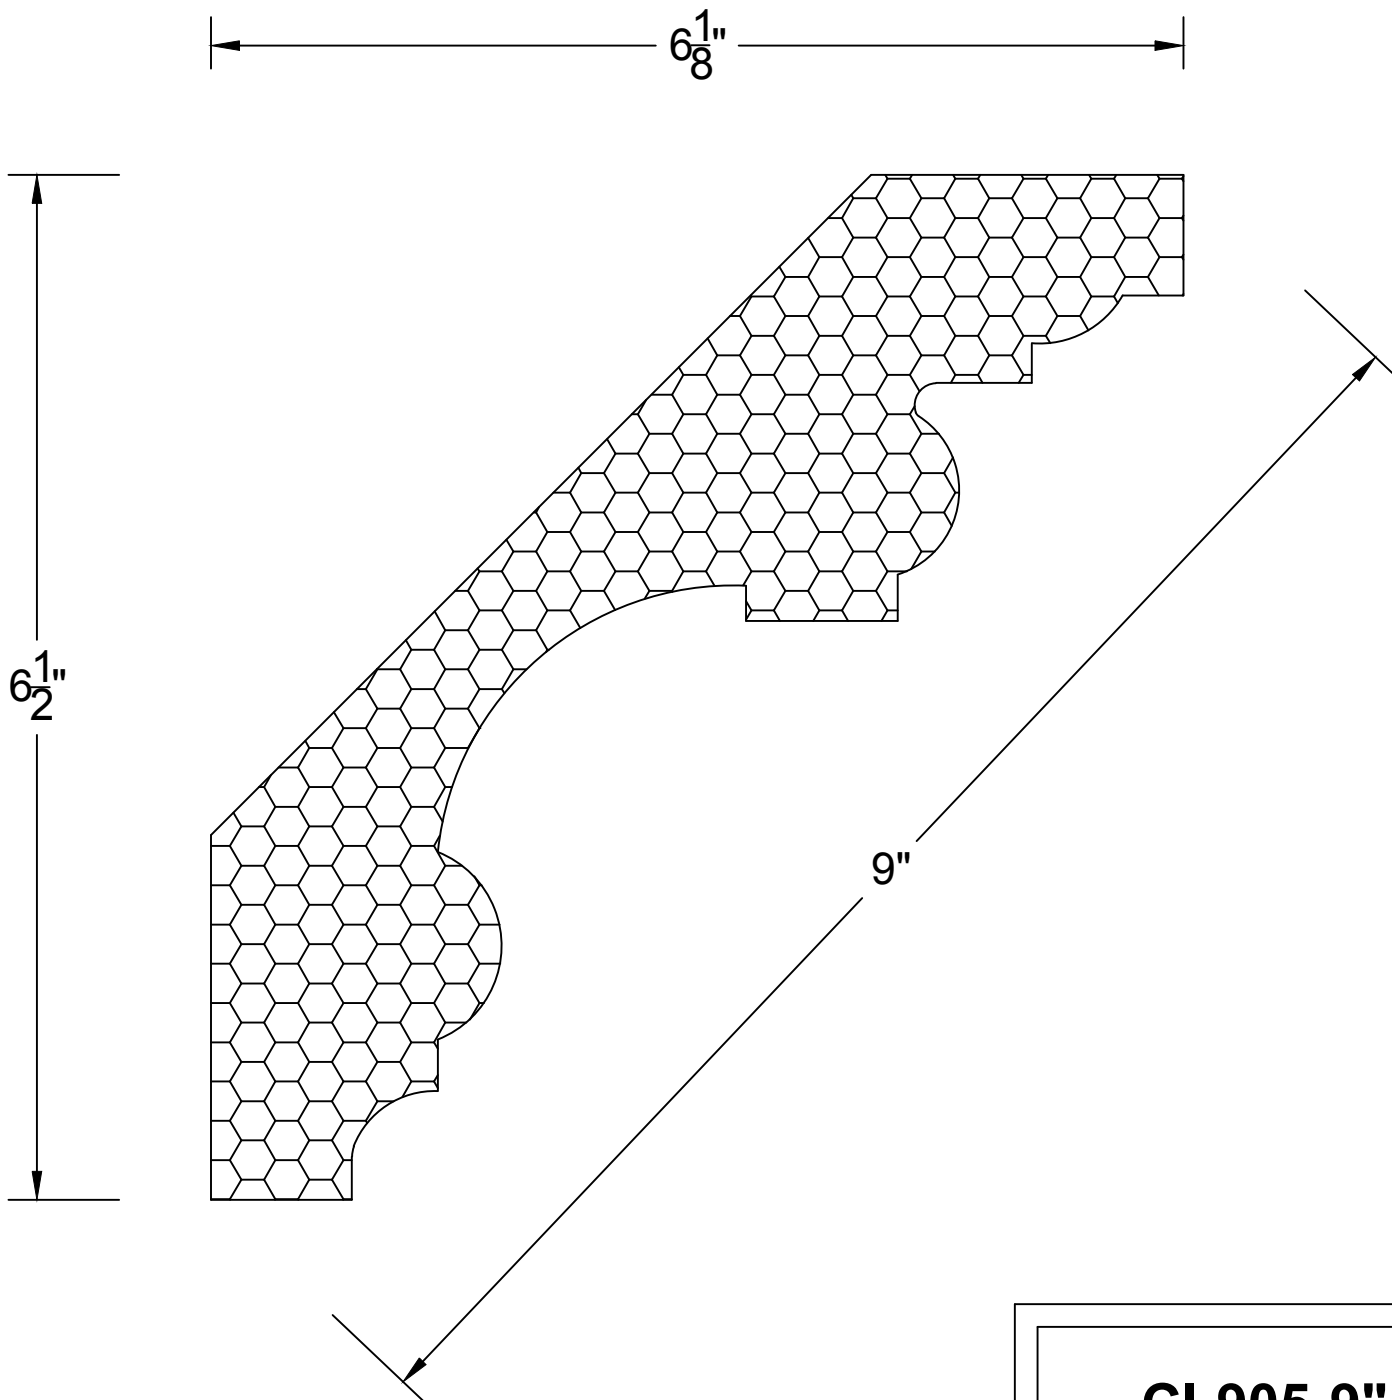


CI-905-9"

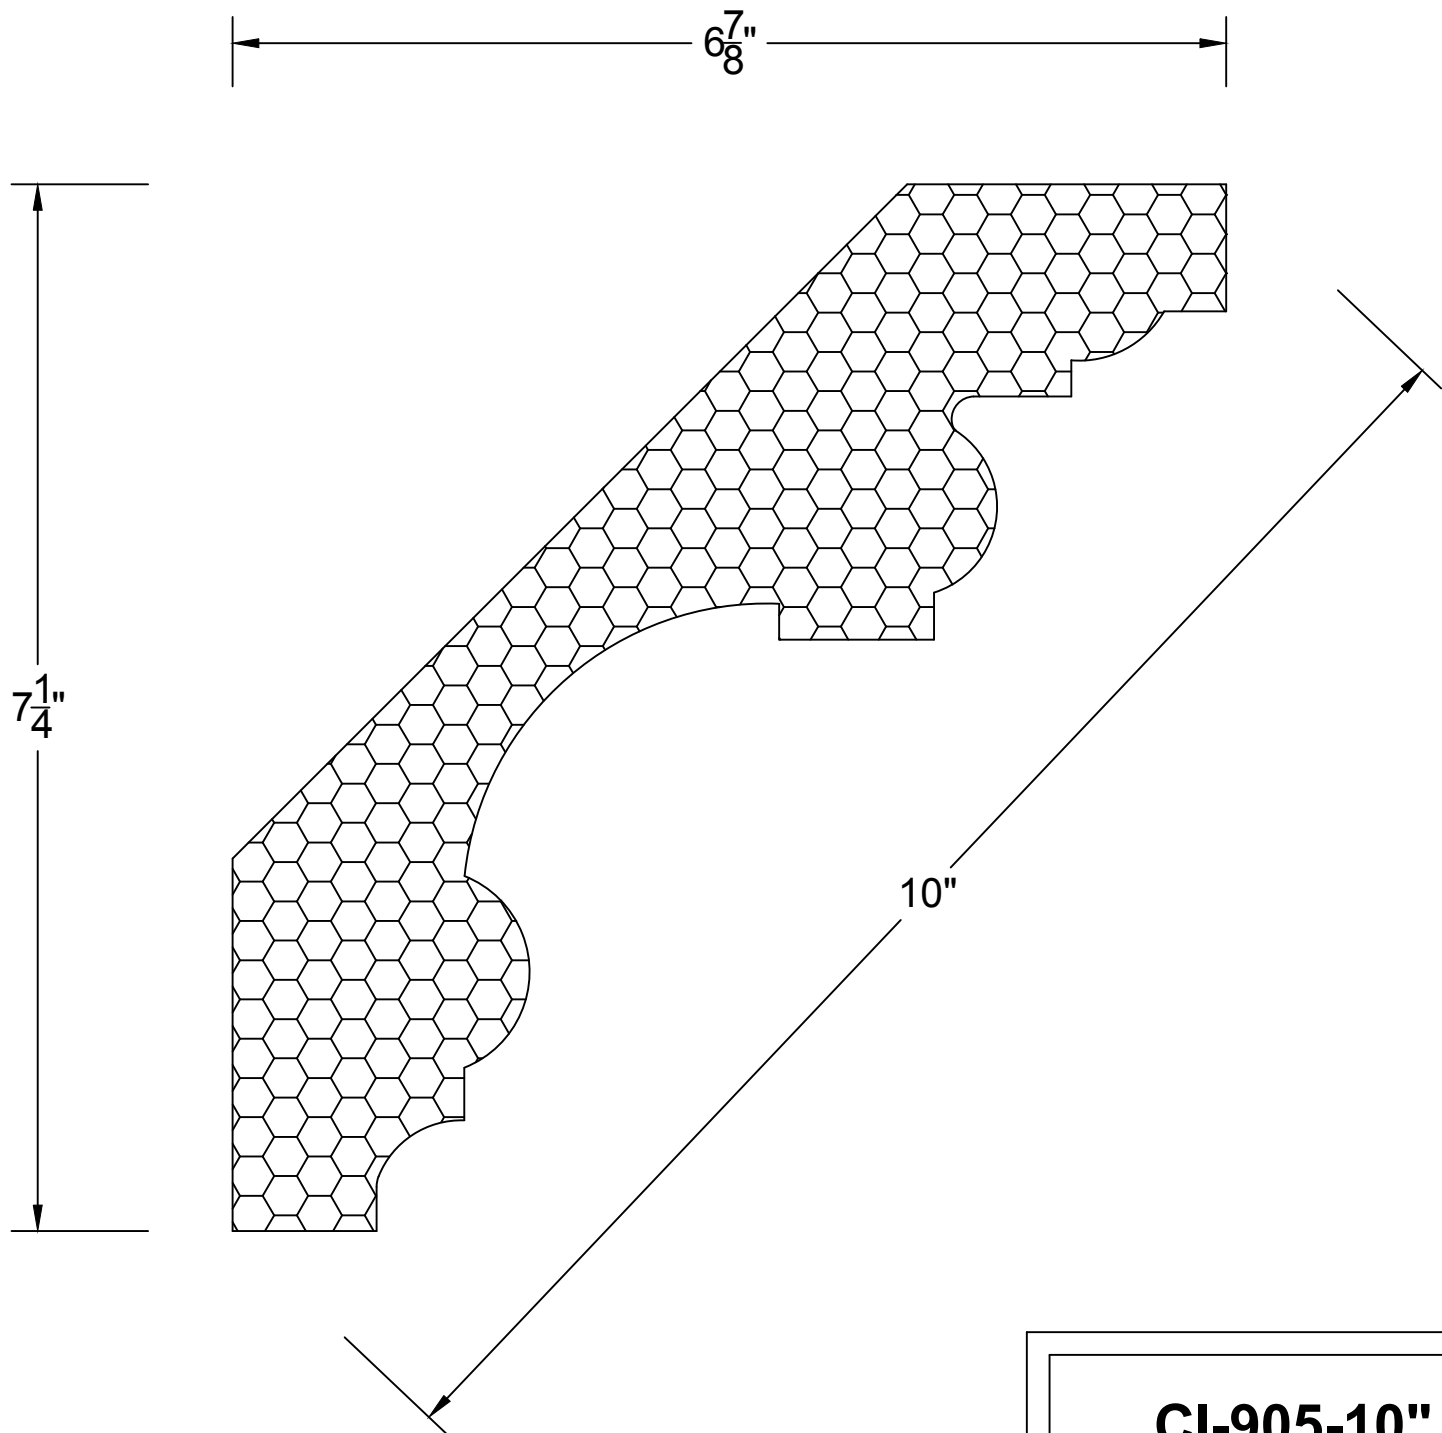


CI-905-10"

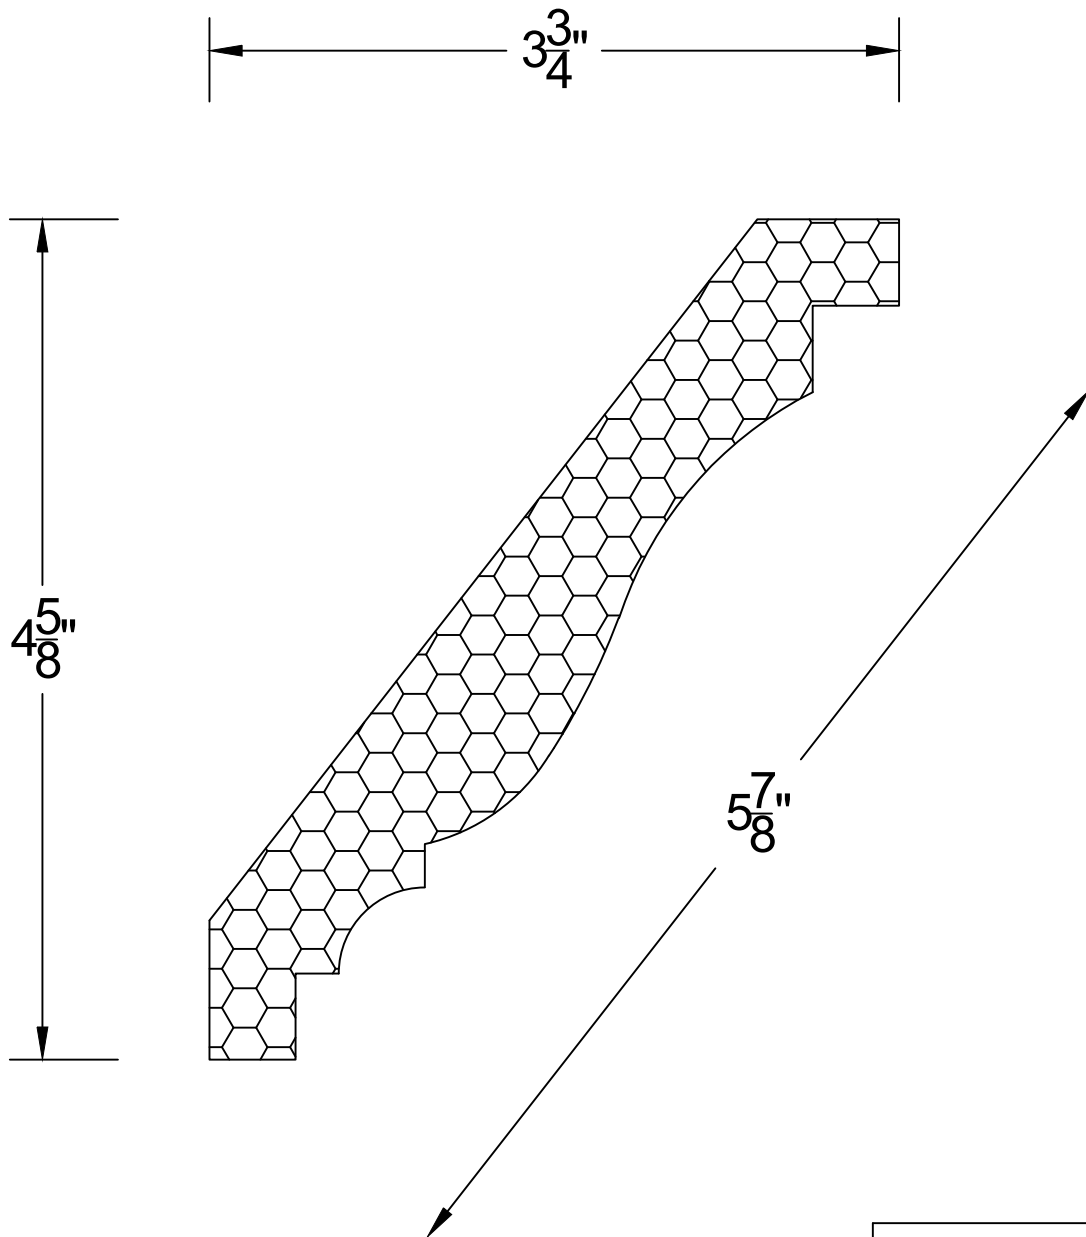


CI-601-6"

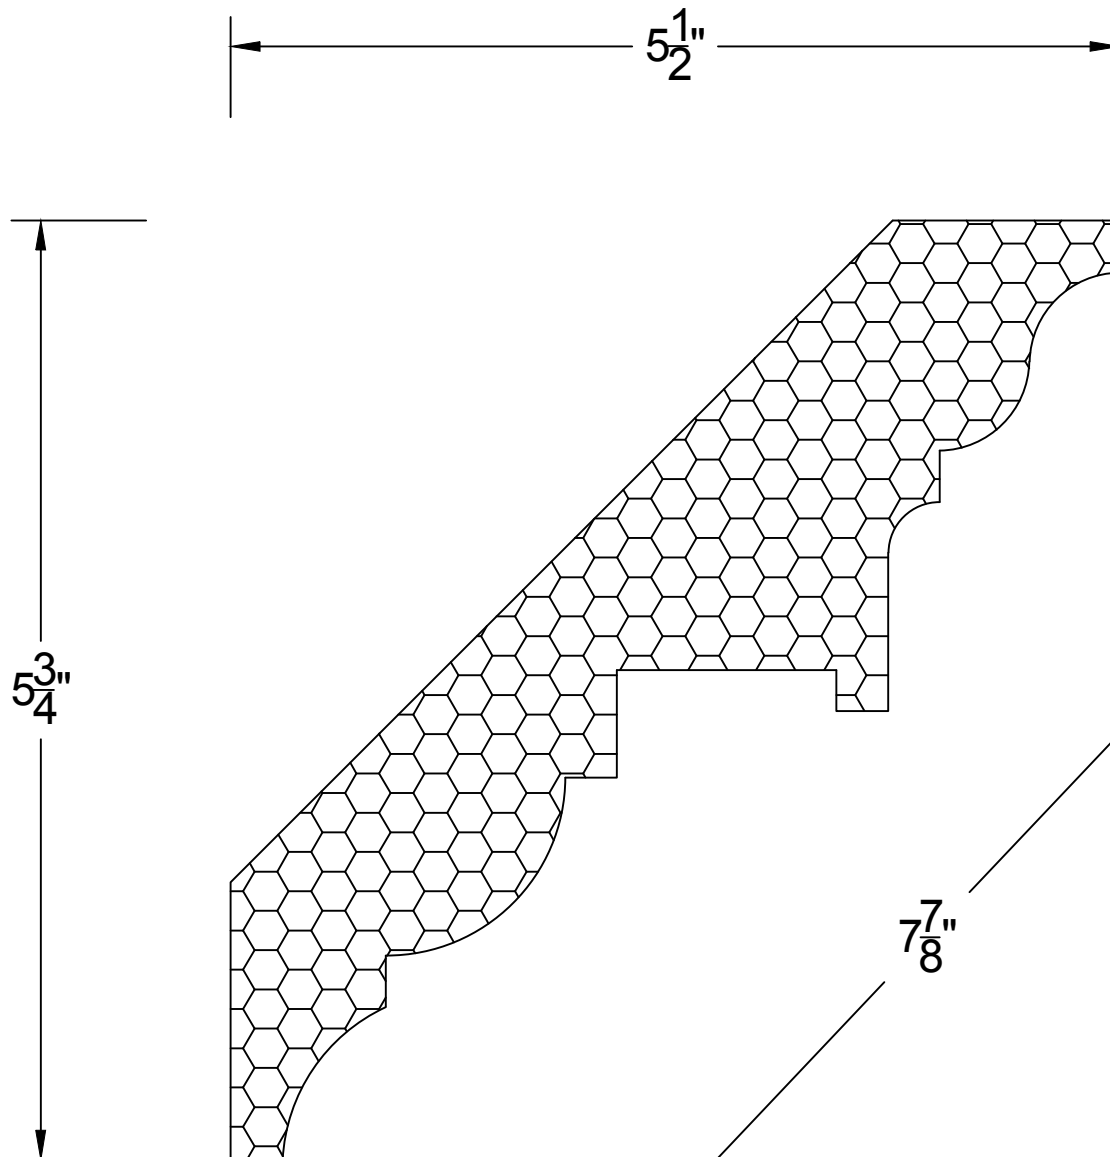


CI-805-8"

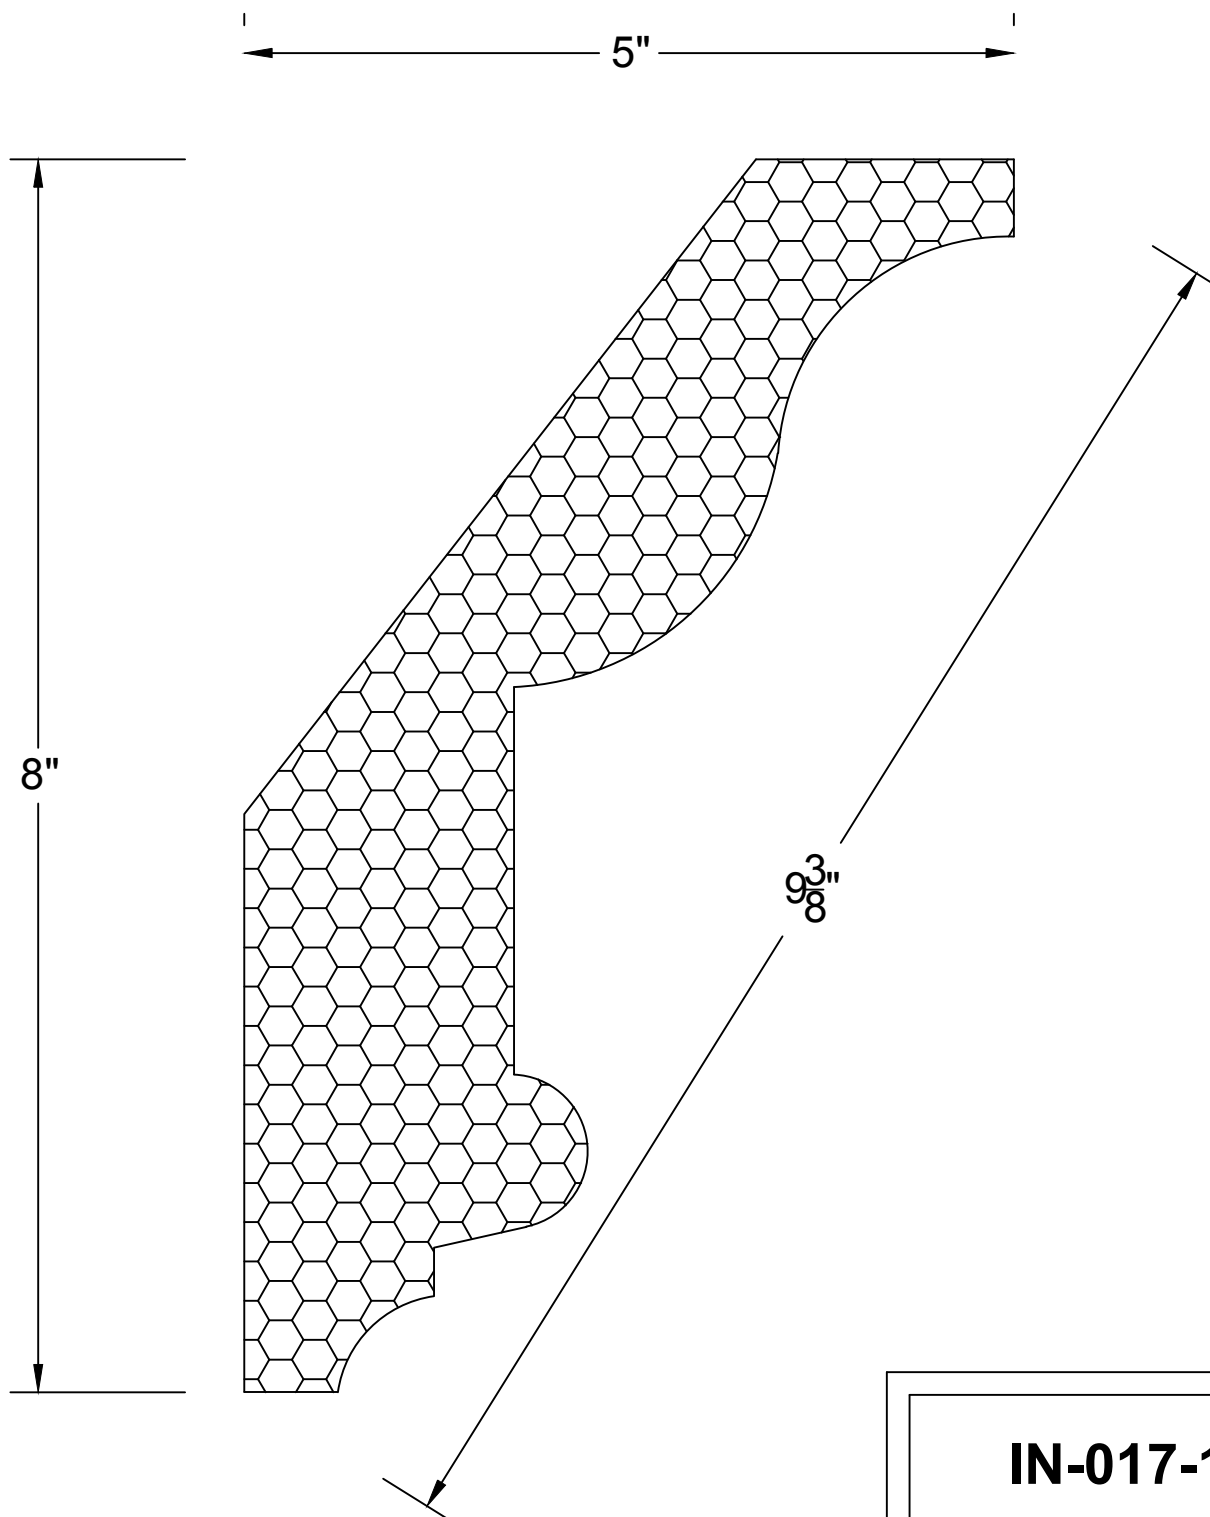

IN-017-10"

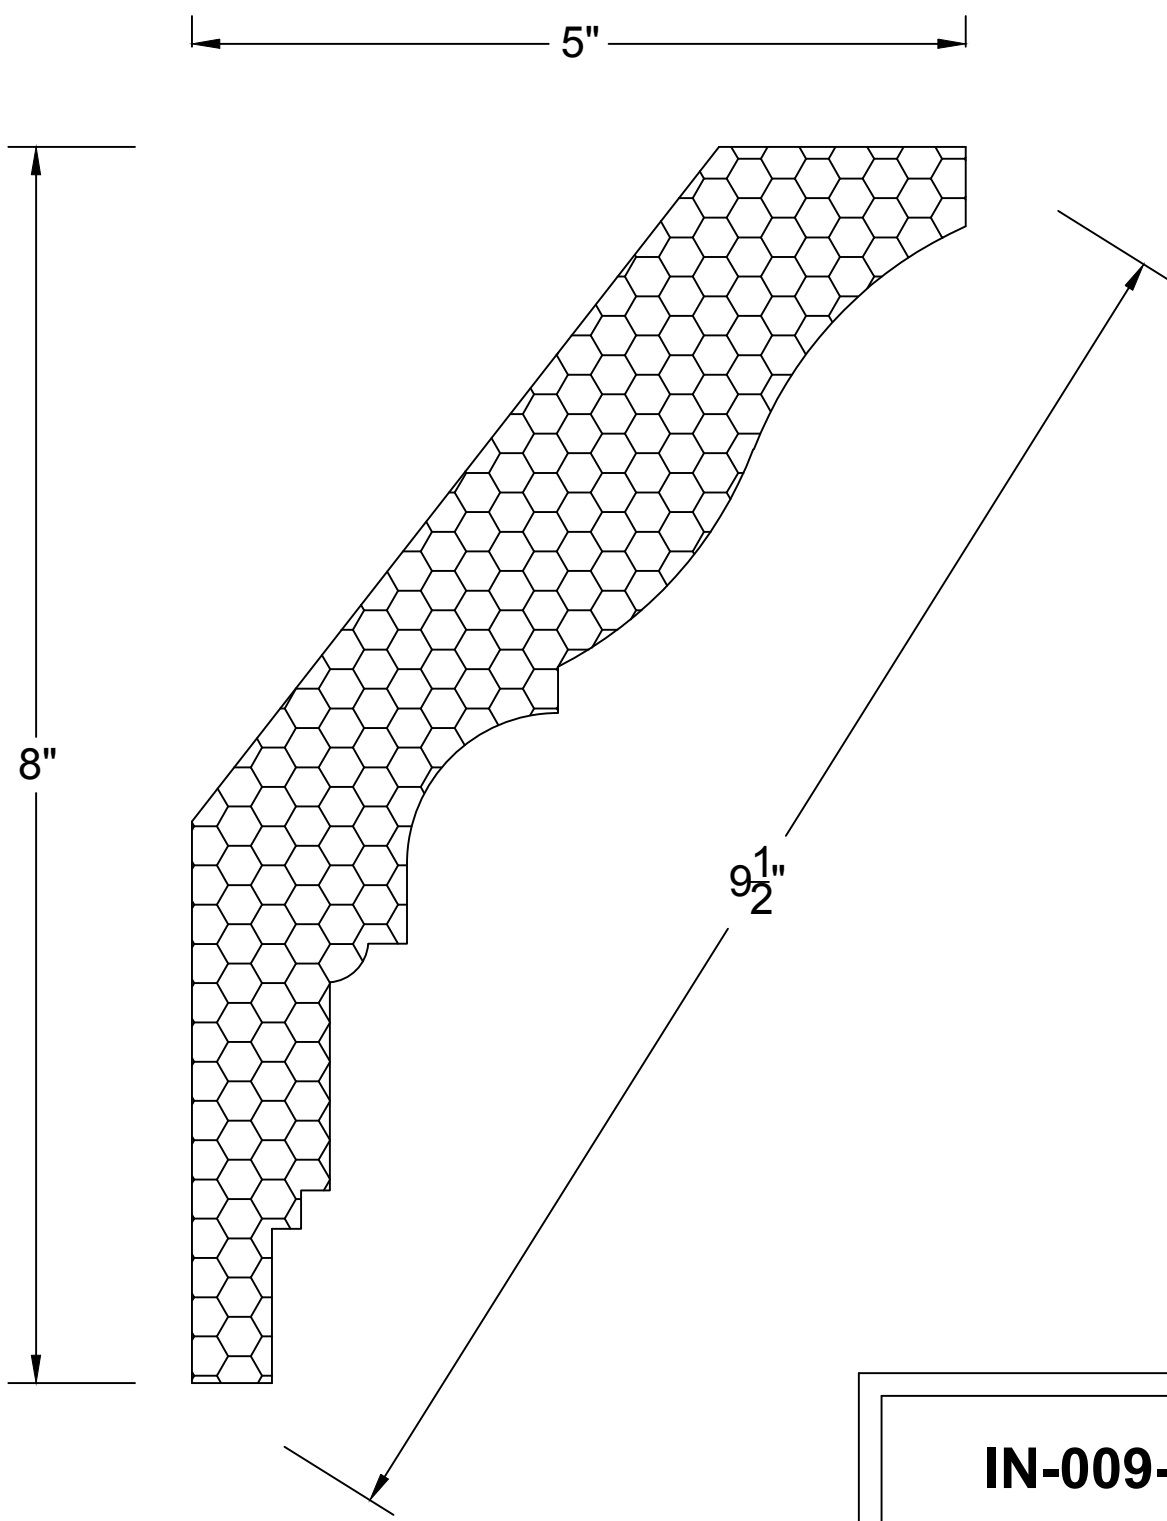

IN-009-10"

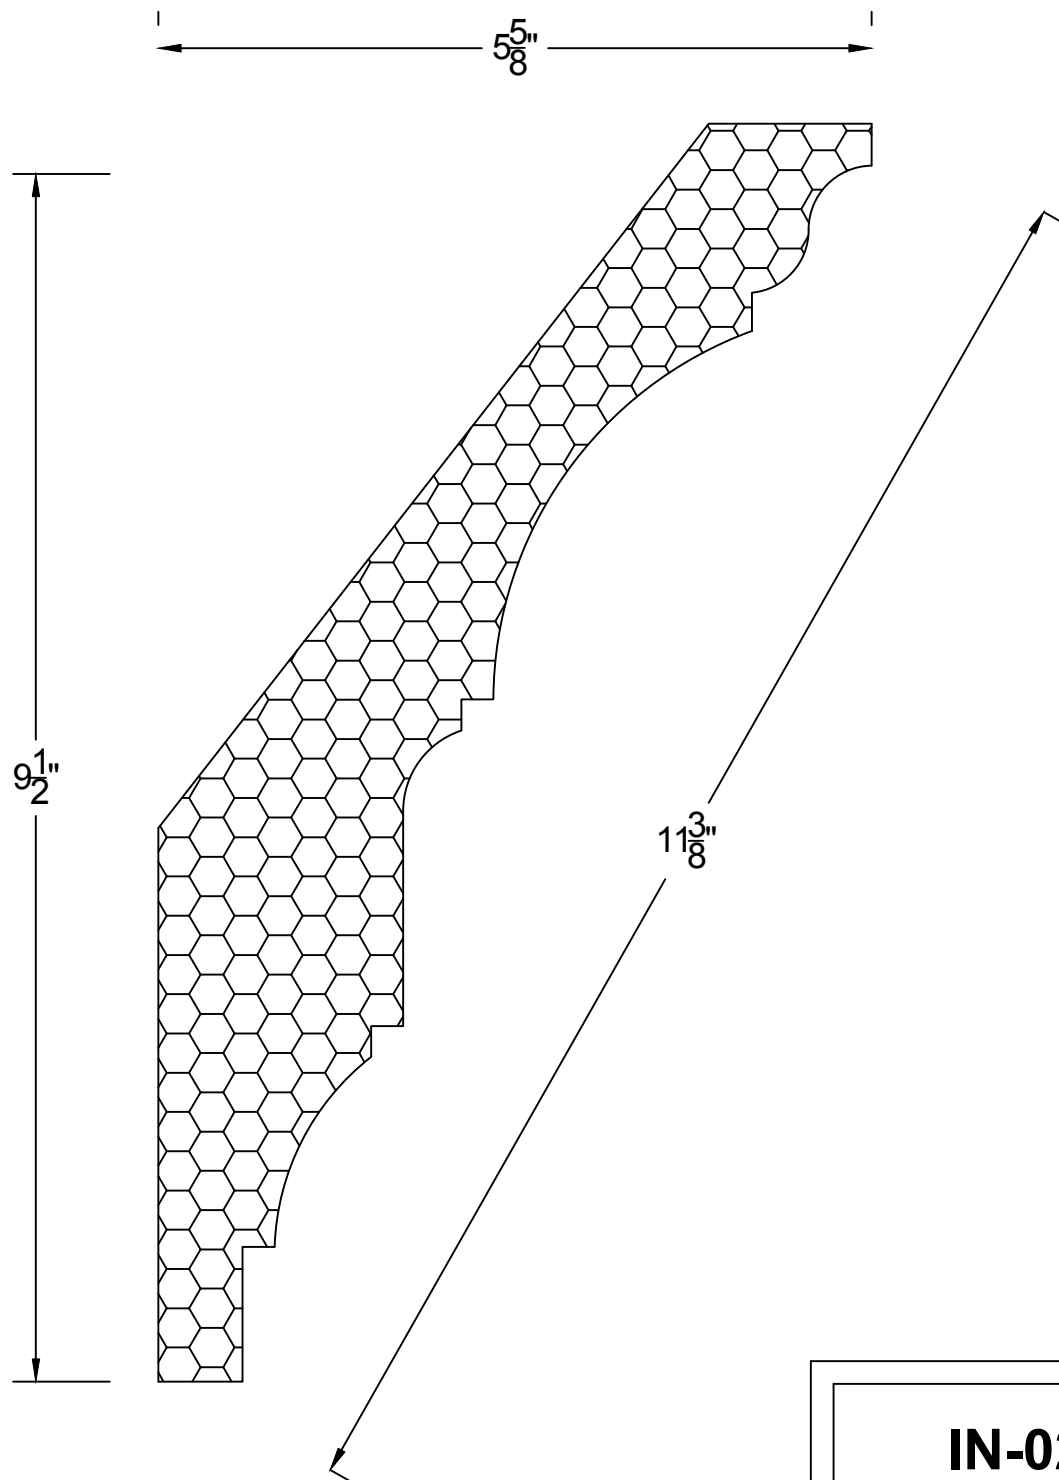

IN-028-12"

8 $\frac{1}{2}$ "

8 $\frac{1}{2}$ "

1'


CI-1203-12"

9 $\frac{1}{8}$ "


7"

11 $\frac{1}{2}$ "




CAN-D01-11.5"

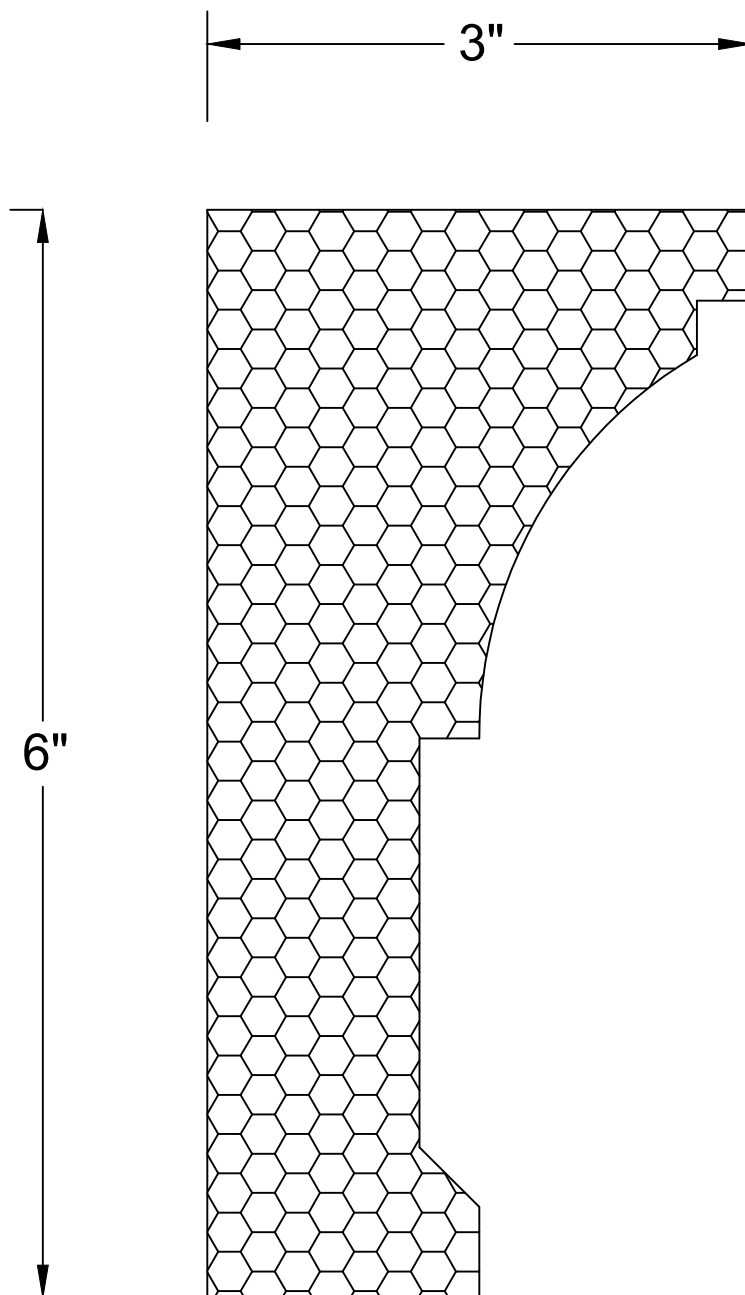

IN-035-6"

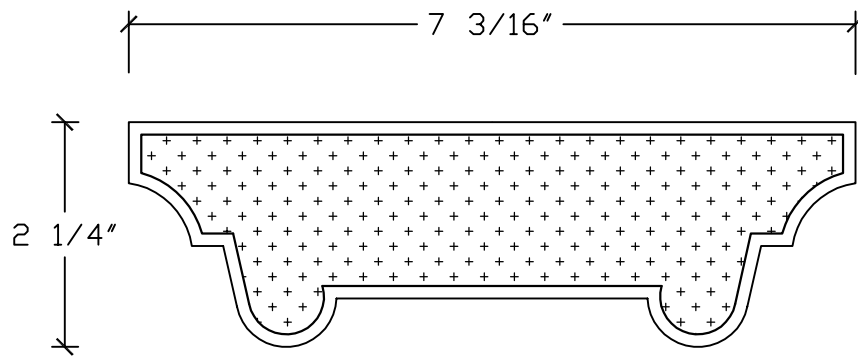


IN-16

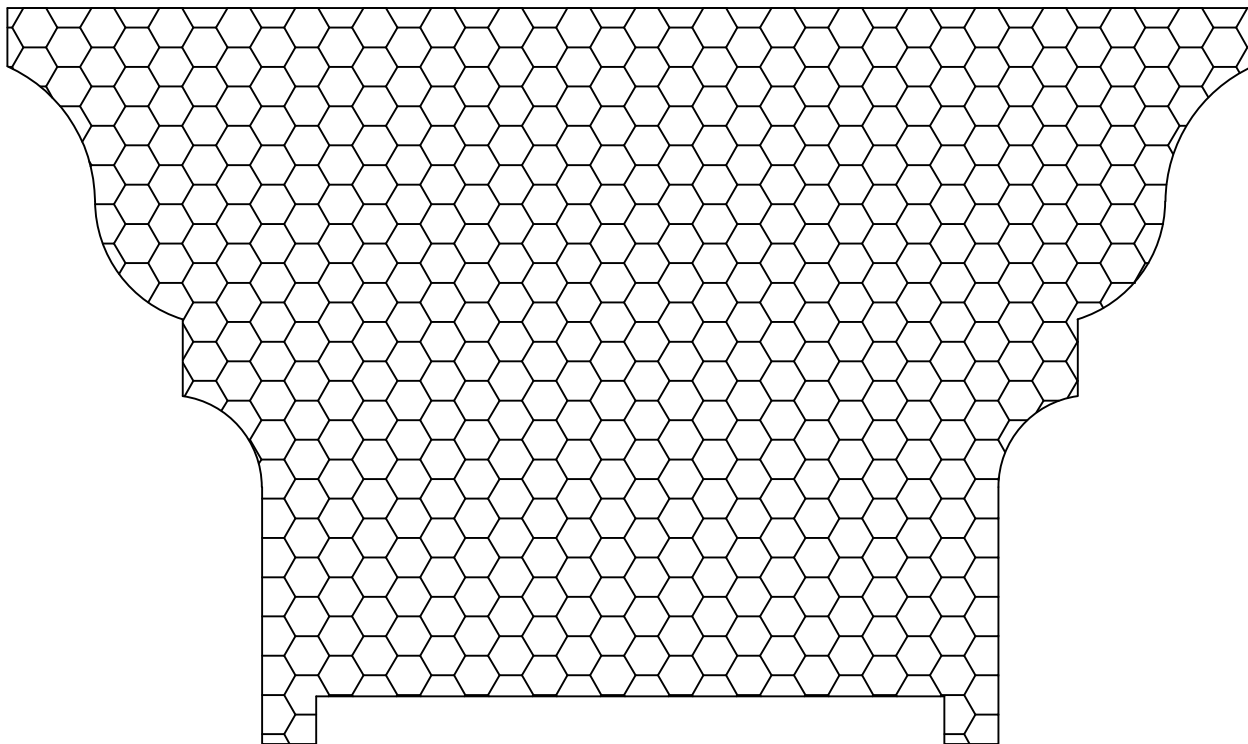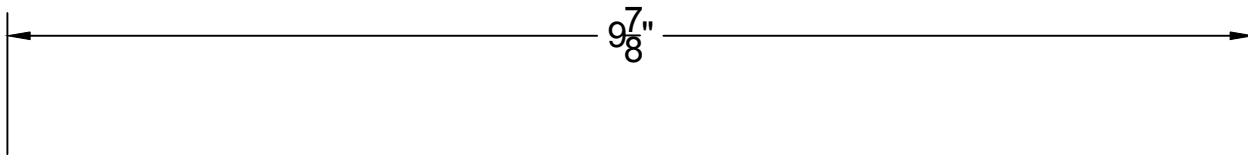

IB-02


7 $\frac{3}{4}$ "

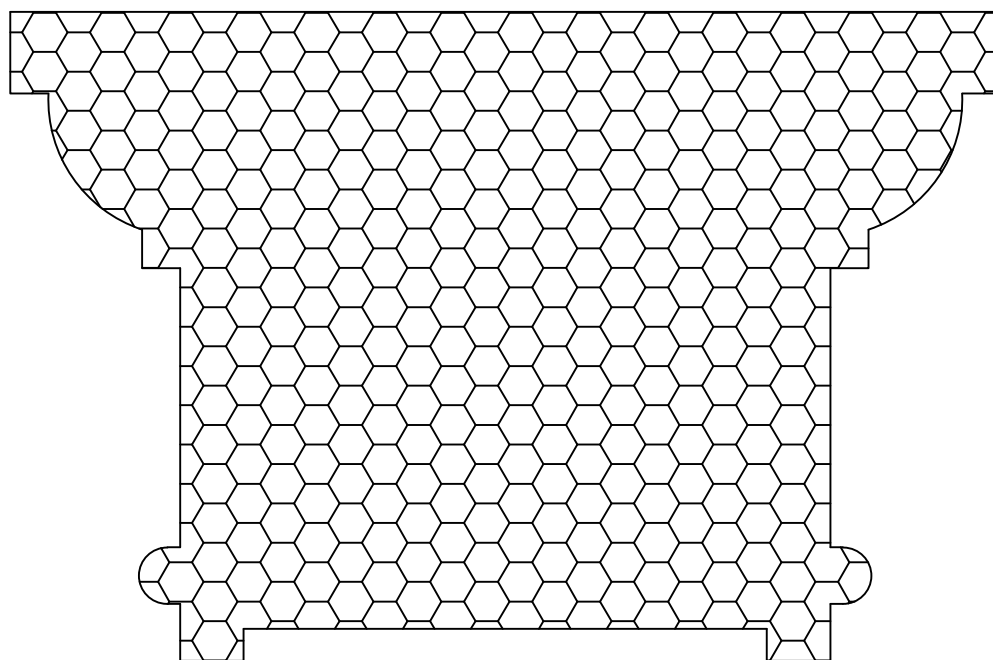

5 $\frac{1}{8}$ "

IB-07


7"

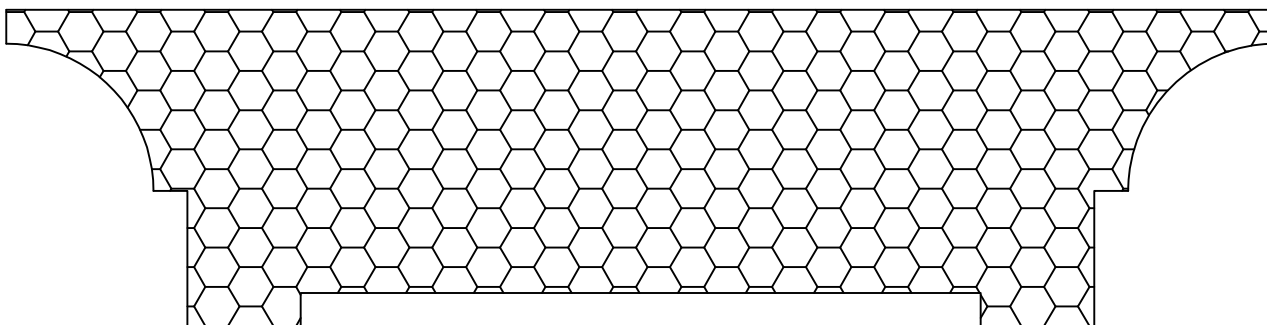

1 3/4"

IB-03


10 $\frac{1}{2}$ "

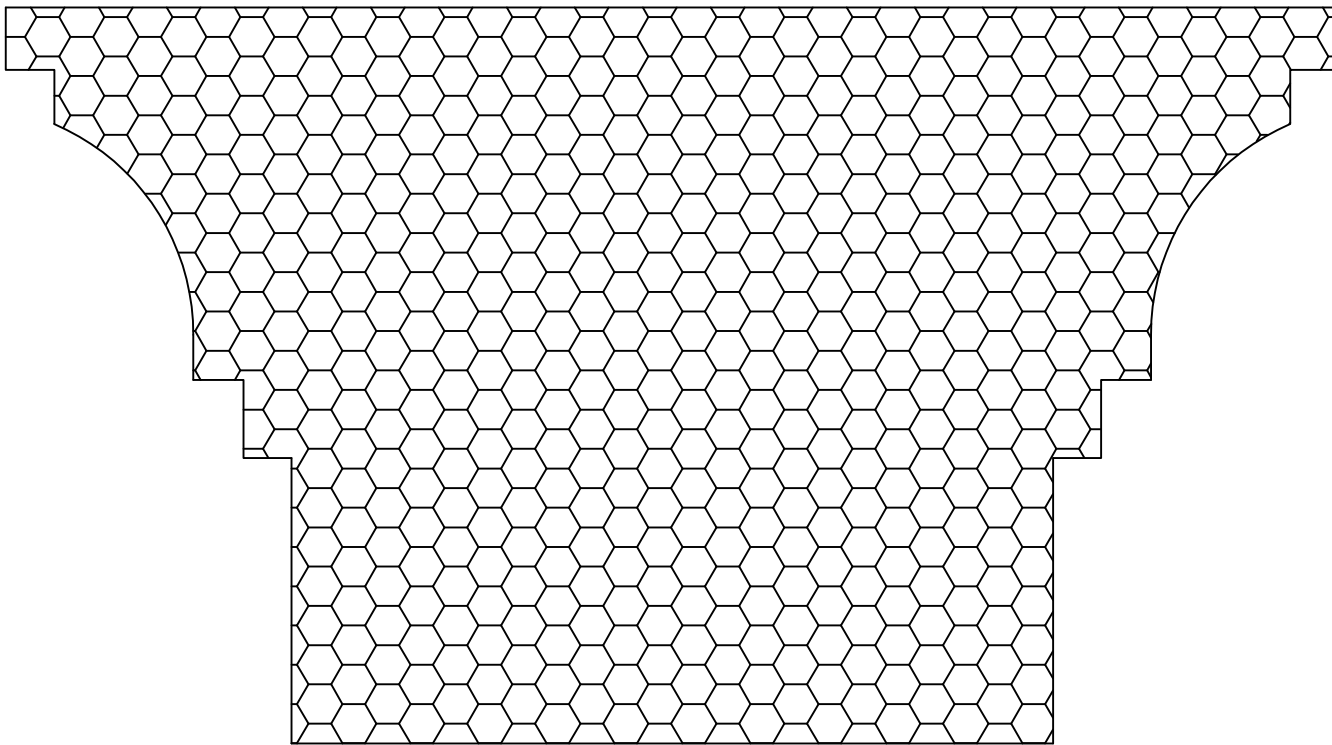


5 $\frac{3}{4}$ "

IB-10

$7\frac{3}{4}"$

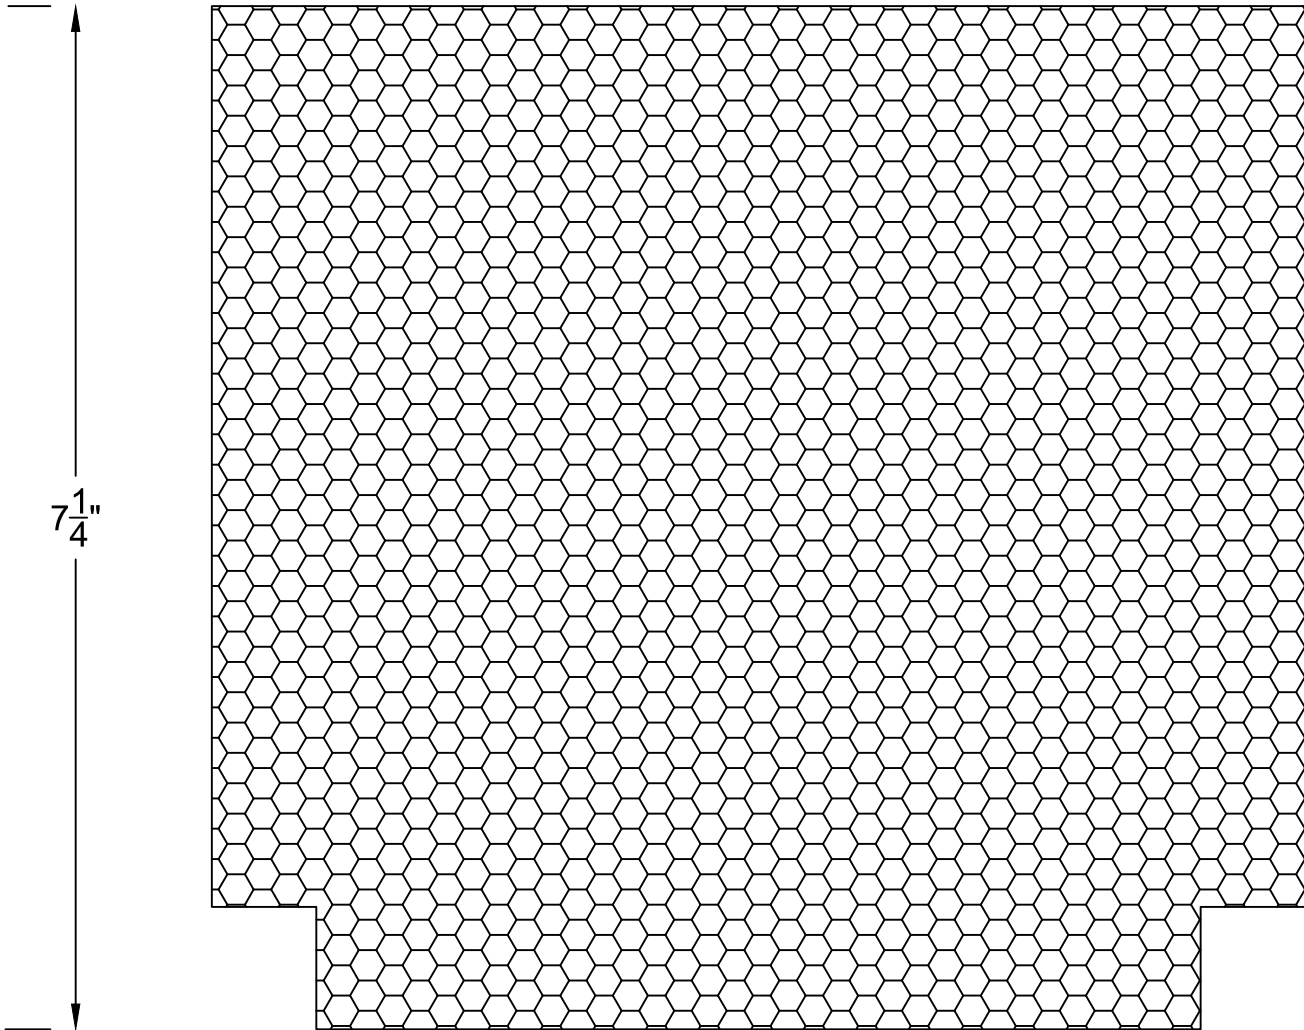


IB-12

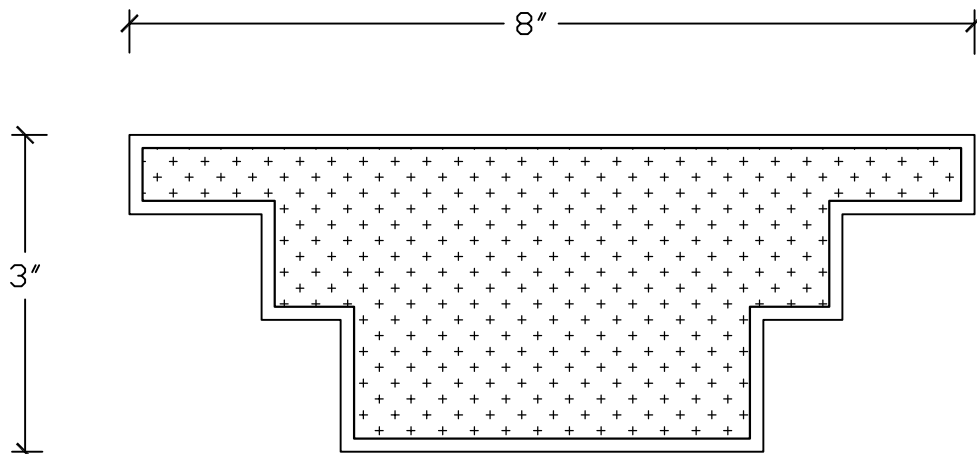

IB-15


6"

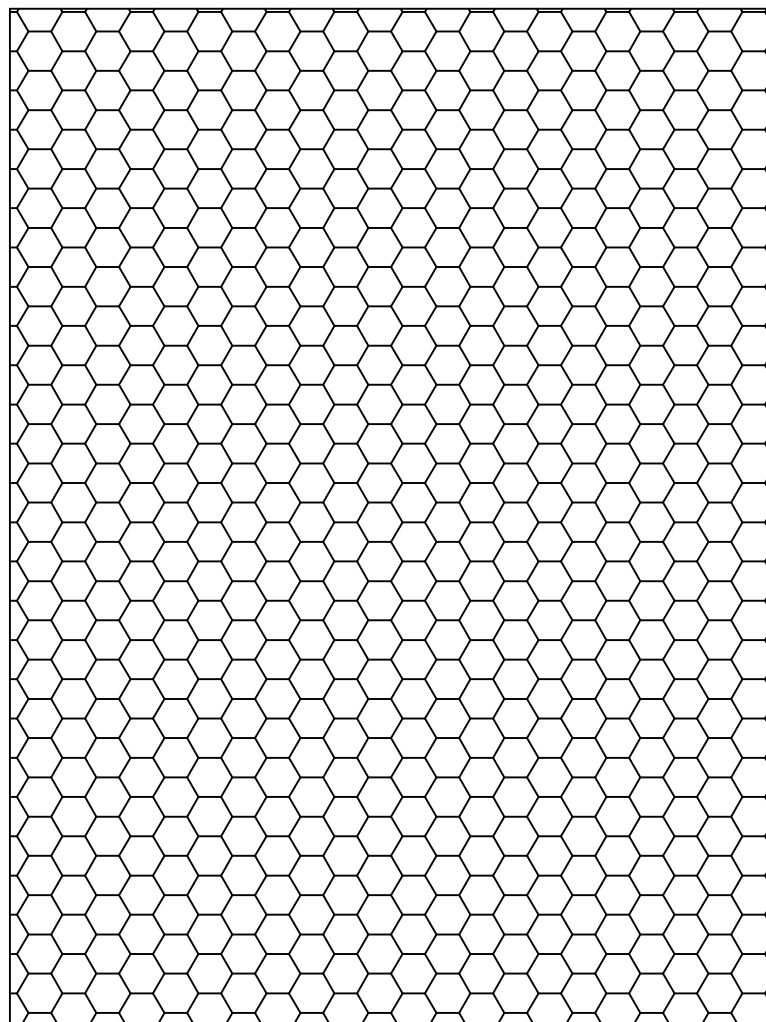

8"


IN-022 (6"X6")
IN-022 (6"X8")

11"

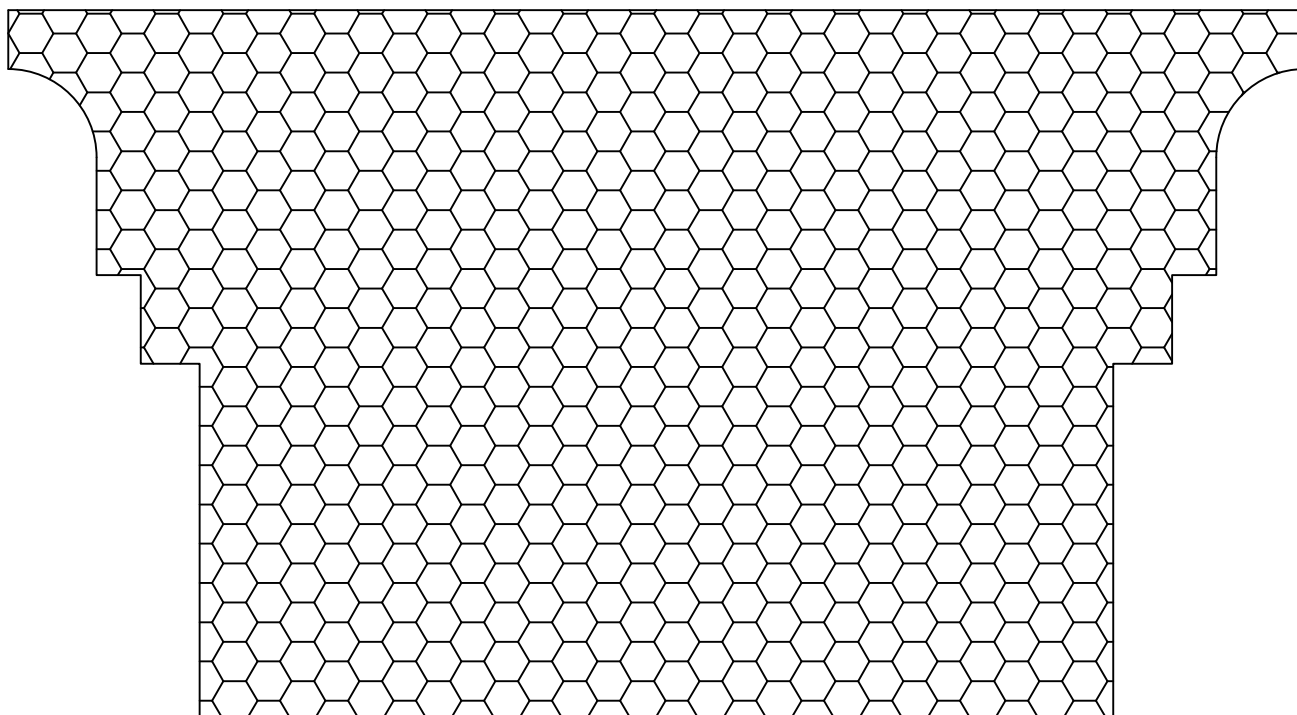

6"

IN-038

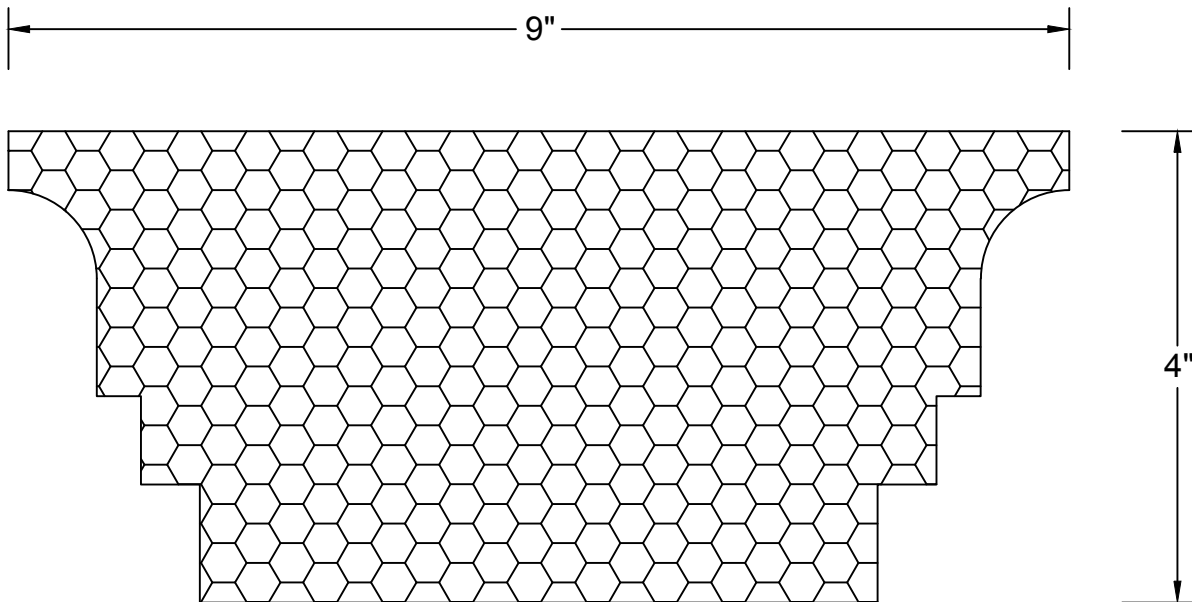

IN-039